

Technical Details

MSER-FPD 1.20






1.	Introduction	3
2.	MSER-FPD Rev 1.20	4
2.1	FAKRA Connector	4
2.2	Flex Cable Connection with Stiffener on the MSER-FPD	5
2.3	I/O Signals of MSER-FPD	
2.4	I2C I/O Expander Configuration	
2.5	I/O Connector	10
2.6	On-board LEDs	11



1 Introduction


This document describes the function of the MSER-FPD MIPI serializer board which is based on the Texas Instruments MIPI-CSI-2-to-FPD-Link III serializer chip, DS90UB953-Q1. The camera-side serializer board and platform-side deserializer board enable distances of up to 15m between any TISMIPI sensor and embedded system using a coaxial cable. The connection of these components is shown below:

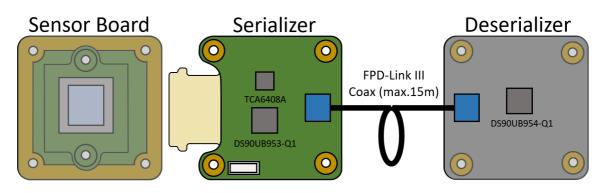

The document "Deserializer Design Recommendations" contains important information required to create a custom deserializer design using the TI DS90UB954-Q1 chip.



The MSER-FPD board (Rev. 1.20) is shown below:

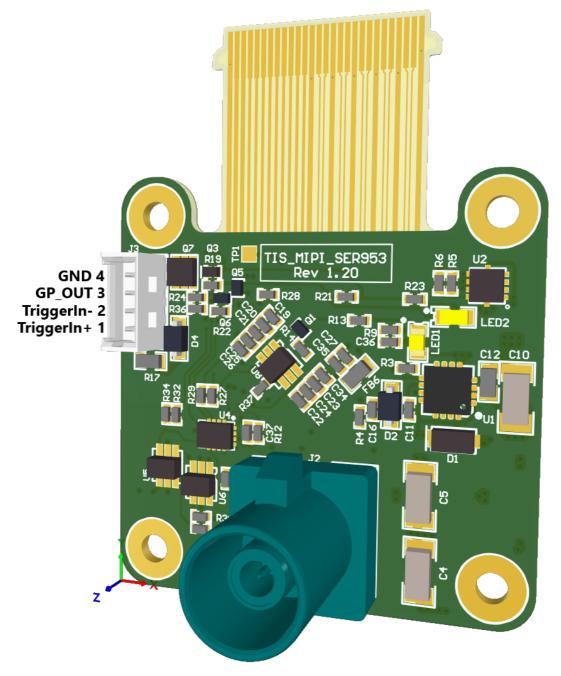

2.1 FAKRA Connector

The manufacturer part number of the Adam Tech FAKRA connector is RF55-28Z-T-00-50-G-SH. The recommended cable type is RG-174 with 50 Ohm impedance. Please contact The Imaging Source for available assembled cables.



2.2 Flex Cable Connection with Stiffener on the MSER-FPD

The flex cable connection with stiffener has the following pinout:

+5	V0
4	ſ~_
	1
MIPI CH3 N	2
MIPI CH3 P	3
MDL CHI N	4
MIPI CH1 N	5
MIPI_CH1_P	6
MIDI DOK N	7
MIPI_DCK_N	8
MIPI DCK P	9
MIDL CHO N	10
MIPI CH2 N	11
MIPI CH2 P	12
MIDL CITA N	13
MIPI CH4 N	14
MIPI_CH4_P	15
CL V	16
CLK	17
CAM PWR	18
I2C_SCL	19
I2C SDA	20
RESERVED 1	21
RESET	22
RESERVED 2	23
STROBE	24
TRIGGER/FSYNC	25
	26
	27
	28
	GND



#	Name	Туре	Description
1	GND	GND	Ground
2	MIPI_CH3_N	I	MIPI CSI-2 input
3	MIPI_CH3_P	I	MIPI CSI-2 input
4	GND	GND	Ground
5	MIPI_CH1_N	I	MIPI CSI-2 input
6	MIPI_CH1_P	I	MIPI CSI-2 input
7	GND	GND	Ground
8	MIPI_DCK_N	I	MIPI CSI-2 input
9	MIPI_DCK_P	I	MIPI CSI-2 input
10	GND	GND	Ground
11	MIPI_CH2_N	I.	MIPI CSI-2 input
12	MIPI_CH2_P	I	MIPI CSI-2 input
13	GND	GND	Ground
14	MIPI_CH4_N	I	MIPI CSI-2 input
15	MIPI_CH4_P	I.	MIPI CSI-2 input
16	GND	GND	Ground
17	CLK	0	Reference clock output
18	CAM_PWR	0	High active camera power enable signal
19	I2C_SCL	I/O	I2C serial clock
20	I2C_SDA	I/O	I2C serial data
21	RESERVED_1	I/O	Reserved pin 1
22	RESET	0	Reset sensor to default state when low
23	RESERVED_2	I/O	Reserved pin 2
24	STROBE	I	CMOS sensor strobe signal input
25	TRIGGER/FSYNC	0	Trigger signal output
26	+5V_VDD	PWR	5V (±10%) power supply



#	Name	Туре	Description
27	+5V_VDD	PWR	5V (±10%) power supply
28	GND	GND	Ground



2.3 I/O Signals of MSER-FPD

The connected I/O signals on the serializer chip DS90UB953-Q1 (Texas Instruments) are listed in the following table:

Pin	Name	Dir	Description
17 (GPIO0)	STROBE	I	Strobe signal from sensor board
18 (GPIO1)	TRIGGER_SER	I	External trigger signal from serializer board
27 (GPOI2)	TRIGGER	0	Trigger signal from deserializer board
28 (GPOI3)	RESERVED1_ GPIO3	I/O	Reserved signal

Since the DS90UB953-Q1 serializer chip does not have enough free I/O-pins, an I2C I/O expander (Texas Instruments TCA6408A) has been placed on the board. The following table shows which I/O signals on the flex cable connection are connected directly to the DS90UB953-Q1 and which signals are controlled by the I2C I/O expander:

Pin	Name	Dir	Description	Pin at DS90UB953	Pin at I2C I/O Expander
17	CLK	0	CMOS sensor clock	CLK_OUT (19)	
18	CAM_PWR	0	Camera power enable, active high		Pin 2 (P0)
19	I2C_SCL	I/O	I2C-Bus, clock	I2C_SCL (24)	
20	I2C_SDA	I/O	I2C-Bus, data	12C_SDA (23)	
21	RESERVED_1	I/O	Reserved	GPIO3 (28)	
22	RESET	0	CMOS sensor reset signal, active low		Pin 3 (P1)
23	RESERVED_2	I/O	Reserved		Pin 10 (P7)
24	STROBE	I	CMOS sensor strobe signal	GPIO0 (17)	
25	TRIGGER	0	CMOS sensor trigger signal	GPIO2 (27)	

All I/Os have the same I/O voltage of 1.8V.



2.4 I2C I/O Expander Configuration


The I/O expander TCA6408A has the 7-bit I2C-address 0x20. The table below depicts which signals can be controlled through this expander:

I/O Pin	Name	Dir	Description
PO	CAM_PWR	0	Enable CMOS sensor power supply 0: Sensor power disabled 1: Sensor power enabled
P1	RESET	0	CMOS sensor reset signal 0: Sensor is in reset state 1: Sensor is in operational state
Ρ2	GPOUT_LEVEL	0	If GPOUT_SELECT = 0: >0: LED1 off >1: LED1 on If GPOUT_SELECT = 1: >0: GPOUT is low/0 V >1: GPOUT is tri-stated or high/+5V (depends on the setting of GPIO3)
P3	GPOUT_PUSHPULL	0	GPOUT (PicoBlade) type selection 0: GPOUT is configured as open-drain-output 1: GPOUT is configured as TTL/push-pull-output
P4	GPOUT_SELECT	0	Function of GPOUT (PicoBlade) Pin 0: STROBE from CMOS sensor board 1: GPOUT_LEVEL from serializer board
Ρ5	TRIGGER_LEVEL	0	Controls the polarity of the trigger input on the PicoBlade connector. 0: Trigger source level polarity is not inverted 1: Trigger source level polarity is inverted
P6	TRIGGER_SOURCE	0	 Controls the source of the trigger signal that is forwarded to the sensor. 0: Sensor is triggered by the trigger signal coming from the FPD-Link / deserializer chip. 1: Sensor is triggered by the trigger signal that is applied to the PicoBlade I/O connector.
P7	RESERVED_2	0	Reserved



2.5 I/O Connector

The serializer also has a user GPIO I/O connector with the following pinout:

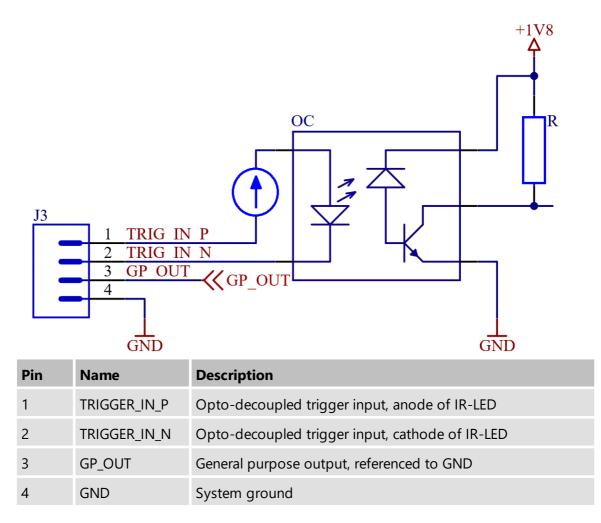

The trigger input is opto-decoupled. To drive the trigger input, voltage must be applied to pins 1 and 2. Note: pin 1 is the positive input; pin 2 is the negative input.

Pin 3 is a general-purpose output pin that can be controlled via software. The pin can be configured for TTL mode output or open drain output. LED2 indicates a possible overcurrent.

The recommended operating conditions of the user GPIO connector J3 are displayed in the following tables. CAUTION: Functional operation beyond the recommended operating conditions is not assumed.

Parameter	Min	Мах
Trigger input voltage	3.3V ± 5%	24V ± 5%



Parameter	Min	Мах
TTL-mode high voltage	-	250mA @ 4V
TTL-mode low voltage	-	250mA @ 0.05V

Parameter	Min	Мах
Open-drain-mode voltage	-	24V
Open-drain-mode current	-	250mA

Please make sure that enough additional power is provided via the embedded system to operate the connected devices at the user GPIO connector (J3).

2.6 On-board LEDs

There are two, status LEDs on the serializer board:

Name	Color	Description
LED1	Green	Controlled through GPOUT_LEVEL on the I/O expander
LED2	Red	Indicates overcurrent flowing out of GP_OUT in TTL/push-pull mode.



MSER-FPD 1.20

All product and company names in this document may be trademarks and tradenames of their respective owners and are hereby acknowledged.

The Imaging Source Europe GmbH cannot and does not take any responsibility or liability for any information contained in this document. The source code presented in this document is exclusively used for didactic purposes. The Imaging Source Europe GmbH does not assume any kind of warranty expressed or implied, resulting from the use of the content of this document or the source code.

The Imaging Source Europe GmbH reserves the right to make changes in specifications, function or design at any time and without prior notice.

Last update: January 2021

© 2021 The Imaging Source Europe GmbH

All rights reserved. No part of this publication may be reproduced, distributed, or transmitted in any form or by any means, including photocopying, recording, or other electronic or mechanical methods, without the prior written permission of the publisher, except in the case of brief quotations embodied in critical reviews and certain other noncommercial uses permitted by copyright law.

All weights and dimensions are approximate. Unless otherwise specified, the lenses shown in the context of cameras are not shipped with these cameras.

Headquarters:

The Imaging Source Europe GmbH Überseetor 18, D-28217 Bremen, Germany Phone: +49 421 33591-0

North & South America:

The Imaging Source, LLC 6926 Shannon Willow Rd, S 400, Charlotte, NC 28226, USA Phone: +1 704-370-0110

Asia Pacific:

The Imaging Source Asia Co., Ltd. 2F., No.8, Xinhu 1st Road Taipei City 114, Neihu District, Taiwan Phone: +886 2-2792-3153

www.theimagingsource.com