



Operating Manual

VCXG.2 / VCXG.2.XC / VCXG.2.I / VCXU.2
(Gigabit Ethernet / USB3.0)

EN-US

List of contents

1	About this document	11
1.1	Purpose.....	11
1.2	Warnings in this manual.....	11
1.3	Labels in this manual	12
1.4	Liability limitation	12
1.5	Copyright.....	12
1.6	Scope of delivery.....	12
2	General information	13
3	Description.....	14
3.1	VCXG.2.....	14
3.1.1	Conception.....	14
3.1.2	LED status indicator.....	14
3.1.3	Camera models.....	15
3.1.4	Dimensional drawing.....	16
3.2	VCXG.2.XC	17
3.2.1	Conception.....	17
3.2.2	LED status indicator.....	17
3.2.3	Camera models.....	18
3.2.4	Dimensional drawing.....	18
3.3	VCXG.2.I.....	19
3.3.1	Conception.....	19
3.3.2	LED status indicator.....	19
3.3.3	Camera models.....	20
3.3.4	Dimensional drawing.....	21
3.4	VCXU.2	22
3.4.1	Conception.....	22
3.4.2	LED status indicator.....	22
3.4.3	Camera models.....	23
3.4.4	Dimensional drawing.....	24
4	Transport and storage	25
4.1	Transport.....	25
4.2	Delivery inspection	25
5	Installation	26
5.1	Environmental requirements	26
5.2	Mechanical Tests	27
5.3	Emergency shutdown at critical temperatures	28
5.4	Heat dissipation.....	31
5.4.1	Cooling channel (VCXG.2.XC only).....	32
5.5	Lens mount	34
5.6	Filter exchange.....	34
5.7	Modular tube system (please order separately).....	35

5.8	Cable requirements for UL conformity	42
6	Optical specification	43
6.1	VCXG.2	43
6.1.1	Sensor position accuracy	43
6.1.2	Filter glass (color cameras)	44
6.1.3	Filter glass (UV sensor)	45
6.1.4	Spectral sensitivity	46
6.2	VCXG.2.XC	51
6.2.1	Sensor position accuracy	51
6.2.2	Cover glasses Tubes	52
6.2.3	Spectral sensitivity	55
6.3	VCXG.2.I	56
6.3.1	Sensor position accuracy	56
6.3.2	Filter glass (color cameras)	57
6.3.3	Cover glasses Tubes	57
6.3.4	Spectral sensitivity	60
6.4	VCXU.2	63
6.4.1	Sensor position accuracy	63
6.4.2	Filter glass (color cameras)	64
6.4.3	Spectral sensitivity	65
7	Electrical installation	70
7.1	General instructions for electric installation	70
7.2	VCXG.2	71
7.2.1	Pin assignment	71
7.2.2	Digital IO	73
7.2.3	GPIO (General Purpose Input / Output)	74
7.3	VCXG.2.XC	75
7.3.1	Pin assignment	75
7.3.2	Digital IO	77
7.3.3	GPIO (General Purpose Input / Output)	78
7.4	VCXG.2.I	79
7.4.1	Pin assignment	79
7.4.2	Digital-IO	80
7.5	VCXU.2	81
7.5.1	Pin assignment	81
7.5.2	Digital IO	82
7.5.3	GPIO (General Purpose Input / Output)	83
8	Maintenance	84
8.1	Cleaning	84
9	Troubleshooting	86
9.1	Support	86
9.2	Accessories	86
10	Software	87
10.1	Baumer GAPI	87

10.2	Baumer neoAPI	87
10.3	Baumer Camera Explorer	87
10.4	3 rd Party Software	87
11	GenICam Camera Features	88
11.1	Category: AcquisitionControl	88
11.1.1	AcquisitionAbort	88
11.1.2	AcquisitionFrameCount	89
11.1.3	AcquisitionFrameRate	89
11.1.4	AcquisitionFrameRateEnable	89
11.1.5	AcquisitionMode	90
11.1.6	AcquisitionStart	90
11.1.7	AcquisitionStatus	91
11.1.8	AcquisitionStatusSelector	91
11.1.9	AcquisitionStop	91
11.1.10	ExposureAuto	92
11.1.11	ExposureMode	92
11.1.12	ExposureTime	93
11.1.13	ExposureTimeGapMax	97
11.1.14	ExposureTimeGapMin	97
11.1.15	ReadoutMode	98
11.1.16	ShortExposureTimeEnable	98
11.1.17	TriggerActivation	99
11.1.18	TriggerDelay	99
11.1.19	TriggerMode	99
11.1.20	TriggerOverlap	100
11.1.21	TriggerSelector	100
11.1.22	TriggerSoftware	100
11.1.23	TriggerSource	101
11.2	Category: ActionControl (GigE only)	101
11.2.1	ActionDeviceKey	102
11.2.2	ActionGroupKey	102
11.2.3	ActionGroupMask	103
11.2.4	ActionSelector	103
11.3	Category: AnalogControl	103
11.3.1	BalanceWhiteAuto (color cameras only)	103
11.3.2	BlackLevel	104
11.3.3	BlackLevelSelector	105
11.3.4	Gain	106
11.3.5	GainAuto	108
11.3.6	GainSelector	108
11.3.7	Gamma	109
11.4	Category: AutoFeatureControl	110
11.4.1	AutoFeatureHeight	112
11.4.2	AutoFeatureOffsetX	112
11.4.3	AutoFeatureOffsetY	113
11.4.4	AutoFeatureRegionMode	113
11.4.5	AutoFeatureRegionReference	113
11.4.6	AutoFeatureRegionSelector	114
11.4.7	AutoFeatureWidth	114

11.4.8	BalanceWhiteAutoStatus	115
11.4.9	BrightnessAutoNominalValue	115
11.4.10	BrightnessAutoPriority	116
11.4.11	ExposureAutoMaxValue	117
11.4.12	ExposureAutoMinValue	117
11.4.13	GainAutoMaxValue	117
11.4.14	GainAutoMinValue	117
11.5	Category: ChunkDataControl	118
11.5.1	ChunkEnable	119
11.5.2	ChunkModeActive	119
11.5.3	ChunkSelector	119
11.6	Category: ColorTransformationControl (color cameras only)	121
11.6.1	ColorTransformationAuto	122
11.6.2	ColorTransformationEnable	122
11.6.3	ColorTransformationFactoryListSelector	123
11.6.4	ColorTransformationOutputColorSpace	123
11.6.5	ColorTransformationResetToFactoryList	123
11.6.6	ColorTransformationValue	124
11.6.7	ColorTransformationValueSelector	124
11.7	Category: CounterAndTimerControl	124
11.7.1	CounterDuration	124
11.7.2	CounterEventActivation	125
11.7.3	CounterEventSource	125
11.7.4	CounterReset	126
11.7.5	CounterResetActivation	126
11.7.6	CounterResetSource	126
11.7.7	CounterSelector	127
11.7.8	CounterValue	128
11.7.9	CounterValueAtReset	128
11.7.10	FrameCounter	128
11.7.11	TimerDelay	129
11.7.12	TimerDuration	129
11.7.13	TimerSelector	129
11.7.14	TimerTriggerActivation	130
11.7.15	TimerTriggerSource	130
11.8	Category: CustomDataControl	131
11.8.1	CustomData	131
11.8.2	CustomDataConfiguration	131
11.8.3	CustomDataSelector	132
11.9	Category: DeviceControl	132
11.9.1	DeviceCharacterSet	132
11.9.2	DeviceEventChannelCount	132
11.9.3	DeviceFamilyName	133
11.9.4	DeviceFirmwareVersion	133
11.9.5	DeviceIndicatorMode	133
11.9.6	DeviceGenCPVersionMajor	134
11.9.7	DeviceGenCPVersionMinor	134
11.9.8	DeviceLinkSelector	135
11.9.9	DeviceLinkSpeed	135
11.9.10	DeviceLinkThroughputLimit	135

11.9.11	DeviceManufacturerInfo	136
11.9.12	DeviceModelName	136
11.9.13	DeviceRegistersEndiannes	136
11.9.14	DeviceReset	137
11.9.15	DeviceResetToDeliveryState	137
11.9.16	DeviceSFNCVersionMajor	137
11.9.17	DeviceSFNCVersionMinor	138
11.9.18	DeviceSFNCVersionSubMinor	138
11.9.19	DeviceScanType	138
11.9.20	DeviceSensorType	138
11.9.21	DeviceSerialNumber	139
11.9.22	DeviceStreamChannelCount	139
11.9.23	DeviceStreamChannelEndianness	139
11.9.24	DeviceStreamChannelSelector	139
11.9.25	DeviceStreamChannelType	140
11.9.26	DeviceTLType	140
11.9.27	DeviceTLVersionMajor	140
11.9.28	DeviceTLVersionMinor	140
11.9.29	DeviceTLVersionSubMinor	141
11.9.30	DeviceTemperature	141
11.9.31	DeviceTemperatureExceeded	141
11.9.32	DeviceTemperatureSelector	141
11.9.33	DeviceTemperatureStatus	142
11.9.34	DeviceTemperatureStatusTransition	142
11.9.35	DeviceTemperatureStatusTransitionSelector	143
11.9.36	DeviceTemperatureUnderrun	143
11.9.37	DeviceType	144
11.9.38	DeviceUserID	144
11.9.39	DeviceVendorName	144
11.9.40	DeviceVersion	145
11.9.41	ReadOutTime	145
11.9.42	TimestampLatch	145
11.9.43	TimestampLatchValue	146
11.9.44	USB2SupportEnable (USB cameras only)	146
11.10	Category: DigitalIOControl	147
11.10.1	LineDebouncerHighTimeAbs	149
11.10.2	LineDebouncerLowTimeAbs	149
11.10.3	LineFormat	150
11.10.4	LineInverter	151
11.10.5	LineMode	151
11.10.6	LinePWMConfigurationMode	152
11.10.7	LinePWMDuration	153
11.10.8	LinePWMDutyCycle	153
11.10.9	LinePWMMaxDuration	153
11.10.10	LinePWMMaxDutyCycle	154
11.10.11	LinePWMMode	154
11.10.12	LinePWMOffTime	155
11.10.13	LinePWMPeriodTime	155
11.10.14	LinePWMVersion	155
11.10.15	LineSelector	156
11.10.16	LineSource	156

11.10.17	LineStatus	158
11.10.18	LineStatusAll	158
11.10.19	UserOutputSelector	158
11.10.20	UserOutputValue	159
11.10.21	UserOutputValueAll	159
11.11	Category: EventControl	160
11.11.1	EventNotification	162
11.11.2	EventSelector	163
11.11.3	LostEventCounter	163
11.12	Category: ImageFormatControl	164
11.12.1	BinningHorizontal	167
11.12.2	BinningHorizontalMode	170
11.12.3	BinningSelector	170
11.12.4	BinningVertical	171
11.12.5	BinningVerticalMode	174
11.12.6	Category: ImageFormatControl → CalibrationControl (MP cameras only)	174
11.12.6.1	CalibrationAngleOfPolarizationOffset	176
11.12.6.2	CalibrationEnable	176
11.12.6.3	CalibrationMatrixValue	176
11.12.6.4	CalibrationMatrixValueSelector	177
11.12.7	ComponentEnable (MP cameras only)	177
11.12.8	ComponentSelector (MP cameras only)	177
11.12.9	Height	178
11.12.10	HeightMax	180
11.12.11	OffsetX	182
11.12.12	OffsetY	182
11.12.13	PixelFormat	183
11.12.14	ReverseX (monochrome cameras / pixel formats only)	186
11.12.15	ReverseY (monochrome cameras / pixel formats only)	187
11.12.16	SensorHeight	187
11.12.17	SensorName	187
11.12.18	SensorPixelHeight	187
11.12.19	SensorPixelWidth	188
11.12.20	SensorShutterMode	188
11.12.21	SensorWidth	190
11.12.22	TestPattern	190
11.12.23	TestPatternGeneratorSelector	191
11.12.24	Width	191
11.12.25	WidthMax	193
11.13	Category: LUTControl	196
11.13.1	DefectPixelCorrection	198
11.13.2	DefectPixelListEntryActive	198
11.13.3	DefectPixelListEntryPosX	198
11.13.4	DefectPixelListEntryPosY	198
11.13.5	DefectPixelListIndex	199
11.13.6	DefectPixelListSelector	199
11.13.7	LUTContent	199
11.13.8	LUTEnable	200
11.13.9	LUTIndex	200
11.13.10	LUTSelector	201

11.13.11LUTValue	201
11.14 Category: MemoryManagement	201
11.14.1 MemoryMaxBlocks	201
11.15 Category: SequencerControl	202
11.15.1 SequencerConfigurationMode	203
11.15.2 SequencerFeatureEnable	203
11.15.3 SequencerFeatureSelector	203
11.15.4 SequencerMode	204
11.15.5 SequencerPathSelector	204
11.15.6 SequencerSetActive	205
11.15.7 SequencerSetLoad	205
11.15.8 SequencerSetNext	205
11.15.9 SequencerSetSave	205
11.15.10 SequencerSetSelector	206
11.15.11 SequencerSetStart	206
11.15.12 SequencerTriggerActivation	206
11.15.13 SequencerTriggerSource	207
11.16 Category: TestControl	207
11.16.1 TestPendingAck	207
11.17 Category: TransportLayerControl	208
11.17.1 EnergyEfficientEthernetEnable (GigE only)	208
11.17.2 Category: GigEVision	209
11.17.2.1 GVSPConfigurationBlockID64Bit	209
11.17.2.2 GevCCP	209
11.17.2.3 GevCurrentDefaultGateway	209
11.17.2.4 GevCurrentIPAddress	210
11.17.2.5 GevCurrentIPConfigurationDHCP	210
11.17.2.6 GevCurrentIPConfigurationLLA	210
11.17.2.7 GevCurrentIPConfigurationPersistentIP	210
11.17.2.8 GevCurrentSubnetMask	211
11.17.2.9 GevFirstURL	211
11.17.2.10 GevGVCPExtendedStatusCodes	211
11.17.2.11 GevGVCPExtendedStatusCodesSelector	211
11.17.2.12 GevGVCPPendingAck	212
11.17.2.13 GevIPConfigurationStatus	212
11.17.2.14 GevInterfaceSelector	212
11.17.2.15 GevMACAddress	213
11.17.2.16 GevMCDA	213
11.17.2.17 GevMCPHostPort	213
11.17.2.18 GevMCRC	213
11.17.2.19 GevMCSP	214
11.17.2.20 GevMCTT	214
11.17.2.21 GevNumberOfInterfaces	214
11.17.2.22 GevPAUSEFrameReception	214
11.17.2.23 GevPersistentDefaultGateway	215
11.17.2.24 GevPersistentIPAddress	215
11.17.2.25 GevPersistentSubnetMask	215
11.17.2.26 GevPrimaryApplicationIPAddress	215
11.17.2.27 GevPrimaryApplicationSocket	216
11.17.2.28 GevPrimaryApplicationSwitchoverKey	216

11.17.2.29	GevSCDA	216
11.17.2.30	GevSCFTD	216
11.17.2.31	GevSCPD	217
11.17.2.32	GevSCPHostPort	217
11.17.2.33	GevSCPIInterfaceIndex	217
11.17.2.34	GevSCPSDoNotFragment	218
11.17.2.35	GevSCPSFireTestPacket	218
11.17.2.36	GevSCPSPacketSize	218
11.17.2.37	GevSCSP	219
11.17.2.38	GevSecondURL	219
11.17.2.39	GevStreamChannelSelector	219
11.17.2.40	GevSupportedOption	219
11.17.2.41	GevSupportedOptionSelector	220
11.17.2.42	InterfaceSpeedMode	220
11.17.3	PayloadSize	220
11.17.4	Category: TransportLayerControl → USB3Vision	221
11.17.4.1	InterfaceSpeedMode	221
11.17.4.2	SIControl	221
11.17.4.3	SIPayloadFinalTransfer1Size	221
11.17.4.4	SIPayloadFinalTransfer2Size	222
11.17.4.5	SIPayloadTransferCount	222
11.17.4.6	SIPayloadTransferSize	222
11.18	Category: UserSetControl	223
11.18.1	UserSetDefault	223
11.18.2	UserSetFeatureEnable	223
11.18.3	UserSetFeatureSelector	223
11.18.4	UserSetLoad	225
11.18.5	UserSetSave	226
11.18.6	UserSetSelector	226
11.19	Category: boCalibrationData	227
11.19.1	boCalibrationAngularAperture	227
11.19.2	boCalibrationDataConfigurationMode	227
11.19.3	boCalibrationDataSave	227
11.19.4	boCalibrationDataVersion	228
11.19.5	boCalibrationFocalLength	228
11.19.6	boCalibrationMatrixSelector	228
11.19.7	boCalibrationMatrixValue	228
11.19.8	boCalibrationMatrixValueSelector	229
11.19.9	boCalibrationVectorSelector	229
11.19.10	boCalibrationVectorValue	229
11.19.11	boCalibrationVectorValueSelector	230
11.19.12	boGeometryDistortionValue	230
11.19.13	boGeometryDistortionValueSelector	230
12	USB interface functionality	231
12.1	Device information	231
13	GigE interface functionality	232
13.1	Package size and Maximum Transmission Unit (MTU)	232
13.2	Inter Packet Gap (IPG)	232

13.3	Frame Transmission Delay	234
13.4	Multicast	237
13.5	IP-Konfiguration	238
13.5.1	Persistent IP.....	238
13.5.2	DHCP (Dynamic Host Configuration Protocol)	238
13.5.3	LLA (Link-Local-Address)	238
13.5.4	Force IP (Static IP).....	239
13.6	Packet Resend.....	239

1 About this document

1.1 Purpose

This operating manual (subsequently referred to as *manual*) allows the safe and efficient handling of the product .

The manual does not provide instructions on operating the machine in which the product is integrated. Information on this is found in the operating manual of the machine.

The manual is a constituent part of the product. It must be kept in the immediate vicinity of the product and must be accessible to personnel at all times.

Personnel must have carefully read and understood this manual before beginning any work. The basic prerequisite for safe working is compliance with all safety instructions and handling instructions given in this manual.

In addition, the local occupational health and safety regulations and general safety regulations apply.

The illustrations in this manual are examples only. Deviations are at the discretion of Baumer at all times.

1.2 Warnings in this manual

Warnings draw attention to potential personal injury or material damage. The warnings in this manual indicate different hazard levels:

Symbol	Warning term	Explanation
	DANGER	Indicates an imminent potential danger with high risk of death or serious personal injury if not being avoided.
	WARNING	Indicates potential danger with medium risk of death or (serious) personal injury if not being avoided.
	CAUTION	Indicates a danger with low risk, which could lead to light or medium injury if not avoided.
	NOTE	Indicates a warning of material damage.
	INFO	Indicates practical information and tips that enable optimal use of the devices.

1.3 Labels in this manual

Identifier	Usage	Example
Dialog element	Indicates dialog elements.	Click OK .
<i>Unique name</i>	Indicates the names of products, files, etc.	<i>Internet Explorer</i> is not supported in any version.
Code	Indicates entries.	Enter the following IP address: 192.168.0.250

1.4 Liability limitation

All information and notes in this manual have been compiled in accordance with the applicable standards and regulations, the state of the art, and our many years of knowledge and experience.

The manufacturer accepts no liability for damage due to the following reasons:

- Non-observance of the manual
- Improper use
- Use of unqualified personnel
- Unauthorized conversions

The obligations agreed in the delivery contract, the general terms and conditions and the delivery conditions of the manufacturer and its suppliers, as well as the legal regulations valid at the time of conclusion of the contract apply.

1.5 Copyright

Any duplication or reprinting of this documentation, in whole or in part, and the reproduction of the illustrations even in modified form is permitted only with the written approval of Baumer. The information in this document is subject to change without notice.

1.6 Scope of delivery

Delivery includes:

- 1 x camera
- 1 x Quickstart
- 1 x General information leaflet

In addition, the following accompanying material is available in digital form at www.baumer.com:

- Operating manual
- Quickstart
- Data sheet
- 3D CAD drawing
- Dimensional drawing
- Certificates (EU conformity declaration, etc.)

2 General information

Intended use

This product is a precision device and serves the detection of items, objects, or physical measurement variables and the preparation or provision of measured values as electric variables for the higher-level system.

Unless specifically labeled, this product may not be used in explosive environments.


Commissioning

Assembly, installation, and calibration of this product may only be performed by a specialist.

Installation

Only use the fasteners and fastener accessories intended for this product for installation. Outputs not in use must not be wired. Unused wires of cable outputs must be insulated. Do not go below the permissible cable bending radii. Disconnect the system from power before the product is electrically connected. Use shielded cables to prevent electro-magnetic interference. If the customer assembles plug connections on shielded cables, then EMC-version plug connections should be used and the cable shield must be connected to the plug housing across a large surface area.

Disposal (environmental protection)

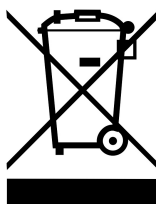


Used electrical and electronic devices may not be disposed of in household waste. The product contains valuable raw materials that can be recycled. Therefore dispose of this product at the appropriate collection point. For additional information visit www.baumer.com.

3 Description


3.1 VCXG.2

3.1.1 Conception

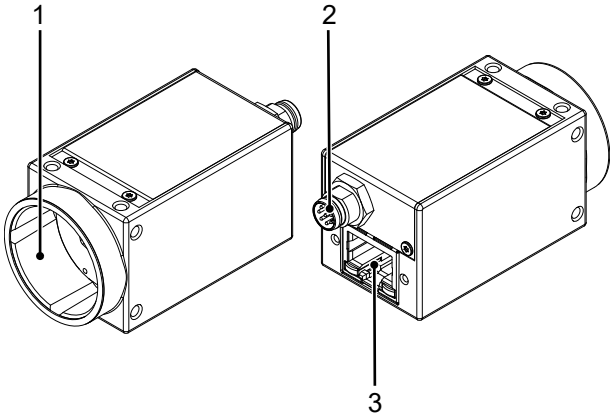

1	Lens mount (C-mount)	2	Power supply / Digital IO
3	Network connection with LEDs		

3.1.2 LED status indicator

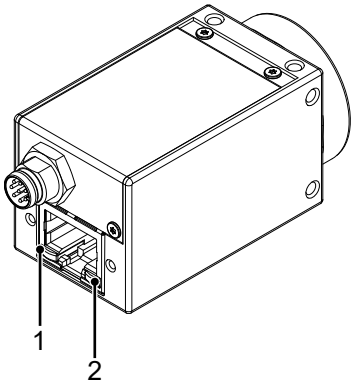


	Signal	Meaning
1	green	Connection active
	green flashing	receiving data
2	yellow	Error
	yellow flashing	Transmitting data

3.1.3

Camera models

Camera type	Sensor size	Resolution (Width × Height)	Max. FPS ¹⁾
Monochrom			
VCXG.2-13M	1/2"	1280 × 1024	145 94
VCXG.2-15M	1/1.8"	1440 × 1080	120 79
VCXG.2-25M	2/3"	1920 × 1200	59 53
VCXG.2-32M	1/1.8"	2048 × 1536	55.5 39.5
VCXG.2-51M	2/3"	2448 × 2048	35.5 23.5
VCXG.2-51MP	2/3"	2448 × 2048	35 24
VCXG.2-57M	1/1.8"	2464 × 2048	25 25
VCXG.2-65M.R	1/1.8"	3072 × 2048	29 16
VCXG.2-82M	2/3"	2848 × 2832	16 15
VCXG.2-83UV	2/3"	2848 × 2832	16 15
VCXG.2-83UV.TCG.2	2/3"	2848 × 2832	16 15
VCXG.2-124M	1.1"	4096 × 3000	15 10
VCXG.2-127M	1/1.1"	4096 × 2992	10 10
VCXG.2-201M.R	1"	5472 × 3648	9 6
VCXG.2-204M	1/1.1"	4480 × 4496	6 6
VCXG.2-241M	1.2"	5312 × 4592	5 5
Color			
VCXG.2-13C	1/2"	1280 × 1024	145 94
VCXG.2-15C	1/1.8"	1440 × 1080	120 79
VCXG.2-25C	2/3"	1920 × 1200	59 53
VCXG.2-32C	1/1.8"	2048 × 1536	55.5 39.5
VCXG.2-51C	2/3"	2448 × 2048	35.5 23.5
VCXG.2-57C	1/1.8"	2464 × 2048	25 25
VCXG.2-65C.R	1/1.8"	3072 × 2048	29 16
VCXG.2-82C	2/3"	2848 × 2832	16 15
VCXG.2-124C	1.1"	4096 × 3000	15 10
VCXG.2-127C	1/1.1"	4096 × 2992	10 10
VCXG.2-201C.R	1"	5472 × 3648	9 6
VCXG.2-204C	1/1.1"	4480 × 4496	6 6
VCXG.2-241C	1.2"	5312 × 4592	5 5


¹⁾ Image acquisition to the camera's internal memory | Interface

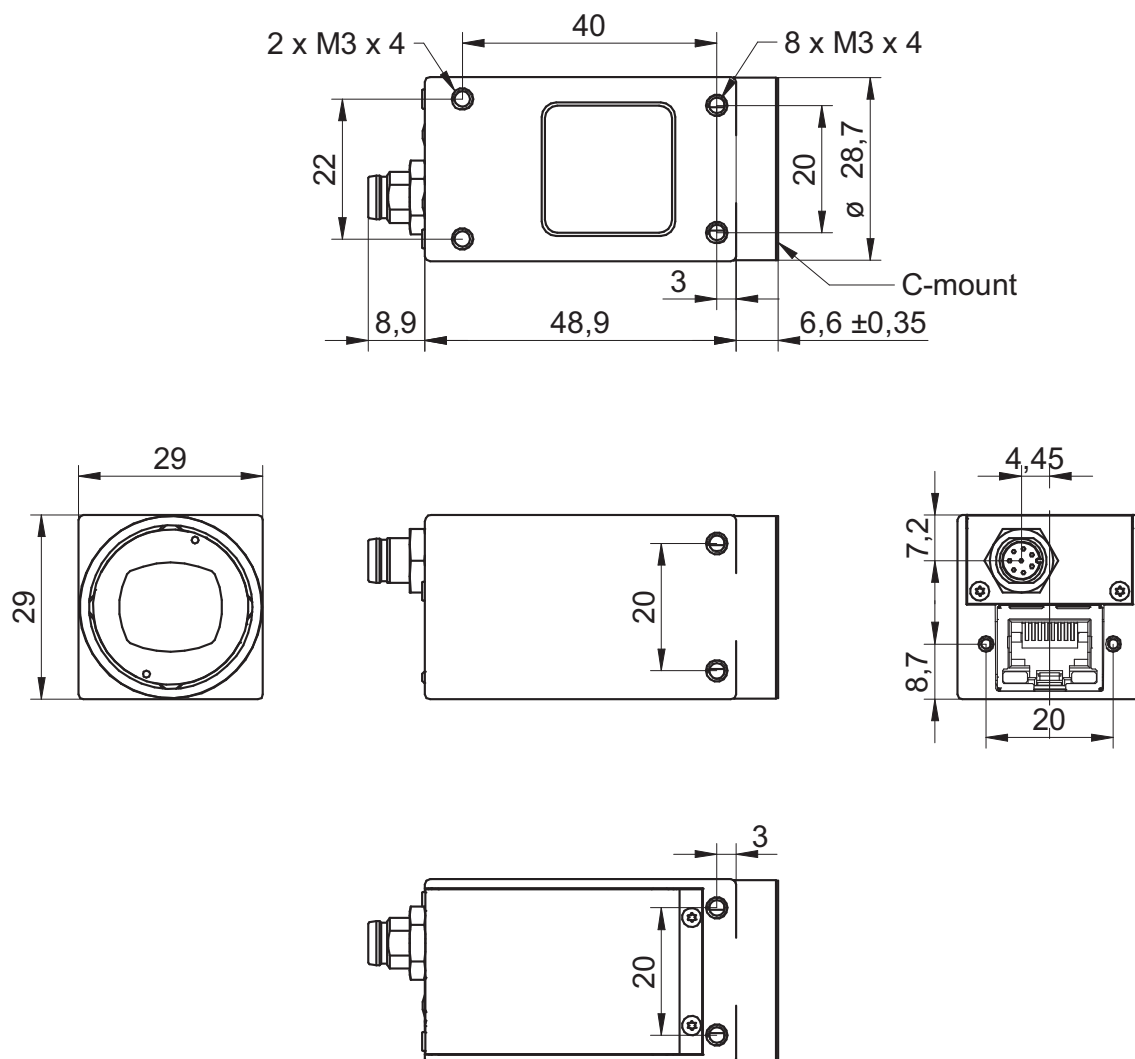3.1.4 Dimensional drawing

III. 1: Dimensional drawing - VCXG


3.2 VCXG.2.XC

3.2.1 Conception

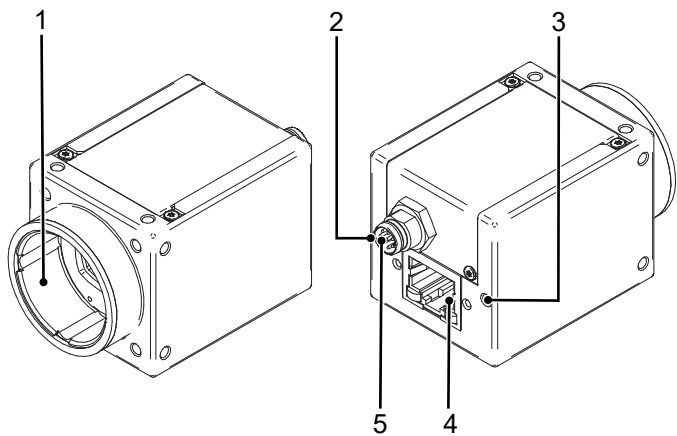

1	Lens mount (C-mount)	2	Cooling channel (inlet)
3	Cooling channel (outlet)	4	Network connection
5	Power supply / Digital IO		

3.2.2 LED status indicator

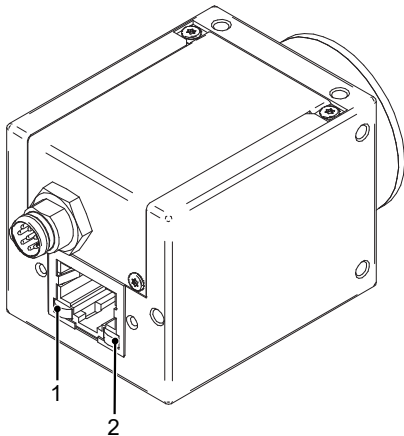


	Signal	Meaning
1	green	Connection active
	green flashing	receiving data
2	yellow	Error
	yellow flashing	Transmitting data

3.2.3 Camera models

Camera type	Sensor size	Resolution (Width × Height)	Max. FPS ¹⁾
Monochrom			
VCXG.2-51M.XC	2/3"	2448 × 2048	35.5 23.5
VCXG.2-241M.XC	1.2"	5312 × 4592	5 5

¹⁾ Image acquisition to the camera's internal memory | Interface

3.2.4 Dimensional drawing

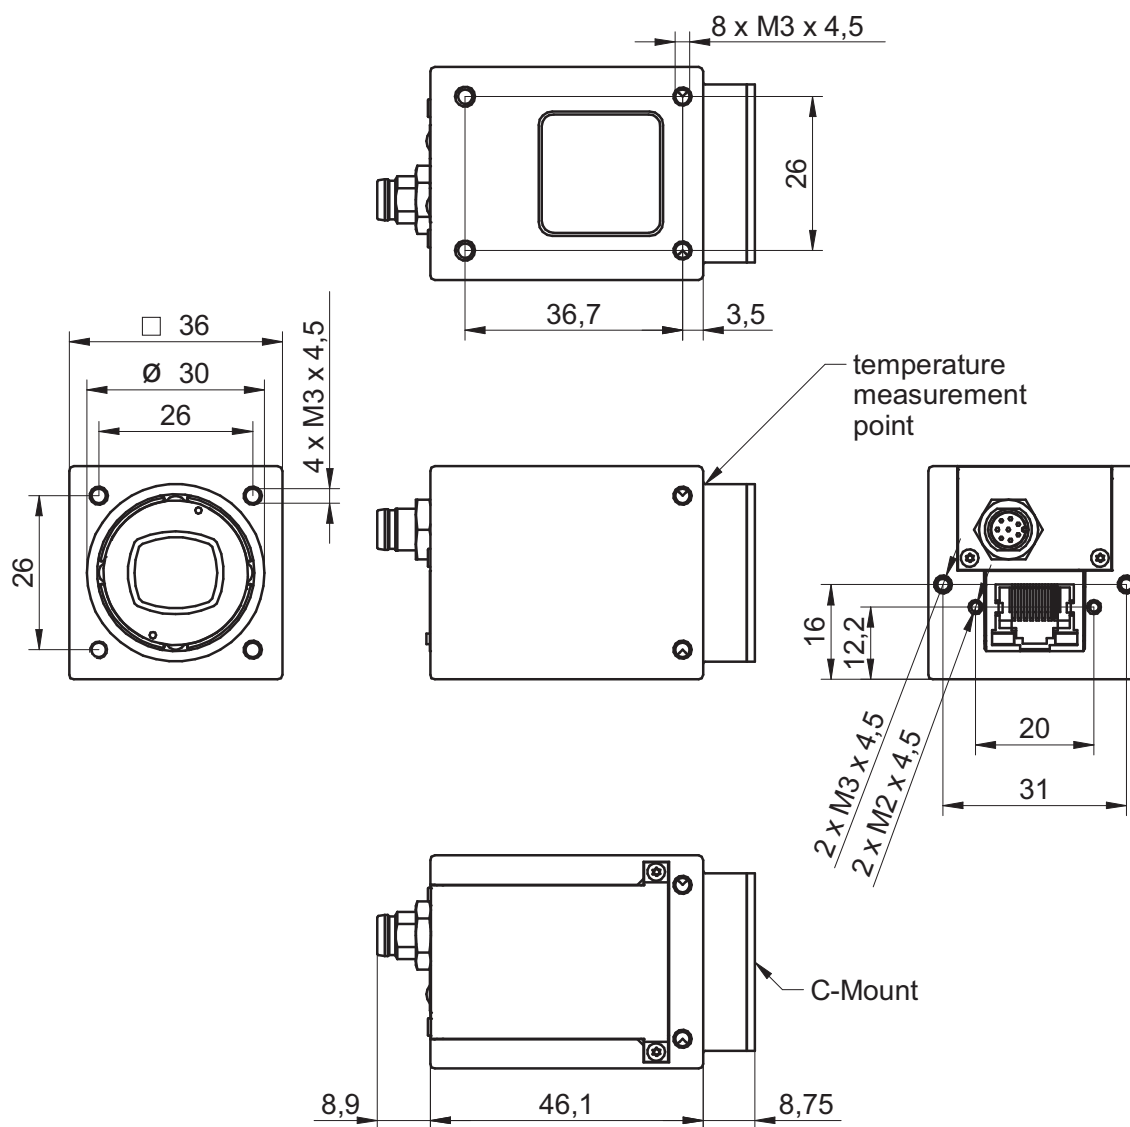


III. 2: Dimensional drawing - VCXG.XC

3.3

3.3.1

VCXG.2.I


Conception

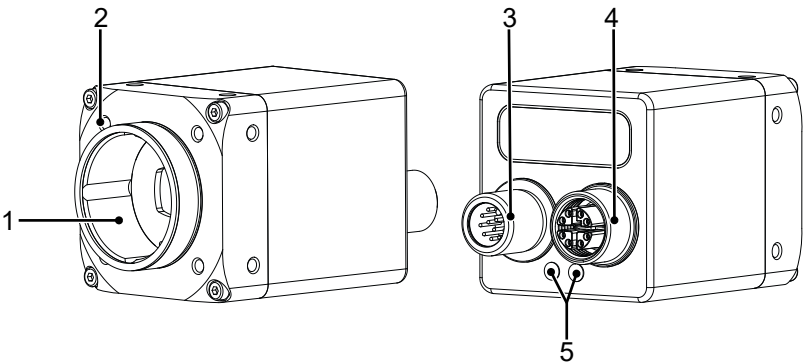

1	Lens mount (C-mount)	2	4 x tube adapter with front mounting threads
3	Power supply / Digital IO	4	Network connection
5	GigE status indicator		

3.3.2

LED status indicator

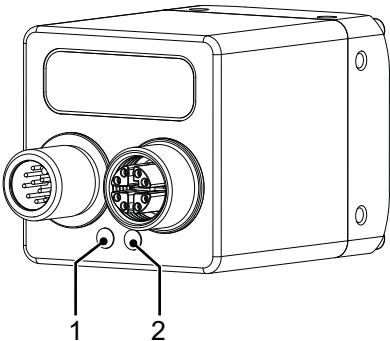


	Signal	Meaning
1	yellow	Error
	yellow flashing	Transmitting data
2	green	Connection active
	green flashing	receiving data

3.3.3 Camera models

Camera type	Sensor size	Resolution (Width × Height)	Max. FPS ¹⁾
Monochrom			
VCXG.2-15M.I	1/1.8"	1440 × 1080	120 79
VCXG.2-32M.I	1/1.8"	2048 × 1536	55.5 39.5
VCXG.2-51M.I	2/3"	2448 × 2048	35.5 23.5
VCXG.2-57M.I	1/1.8"	2464 × 2048	25 25
VCXG.2-82M.I	2/3"	2848 × 2832	15 15
VCXG.2-127M.I	1/1.1"	4096 × 2992	10 10
VCXG.2-201M.R.I	1"	5472 × 3648	9 6
VCXG.2-241M.I	1.2"	5312 × 4592	5 5
Color			
VCXG.2-15C.I	1/1.8"	1440 × 1080	120 79
VCXG.2-32C.I	1/1.8"	2048 × 1536	55.5 39.5
VCXG.2-51C.I	2/3"	2448 × 2048	35.5 23.5
VCXG.2-57C.I	1/1.8"	2464 × 2048	25 25
VCXG.2-82C.I	2/3"	2848 × 2832	15 15
VCXG.2-127C.I	1/1.1"	4096 × 2992	10 10
VCXG.2-201C.R.I	1"	5472 × 3648	9 6
VCXG.2-241C.I	1.2"	5312 × 4592	5 5

¹⁾ Image acquisition to the camera's internal memory | Interface

3.3.4 Dimensional drawing

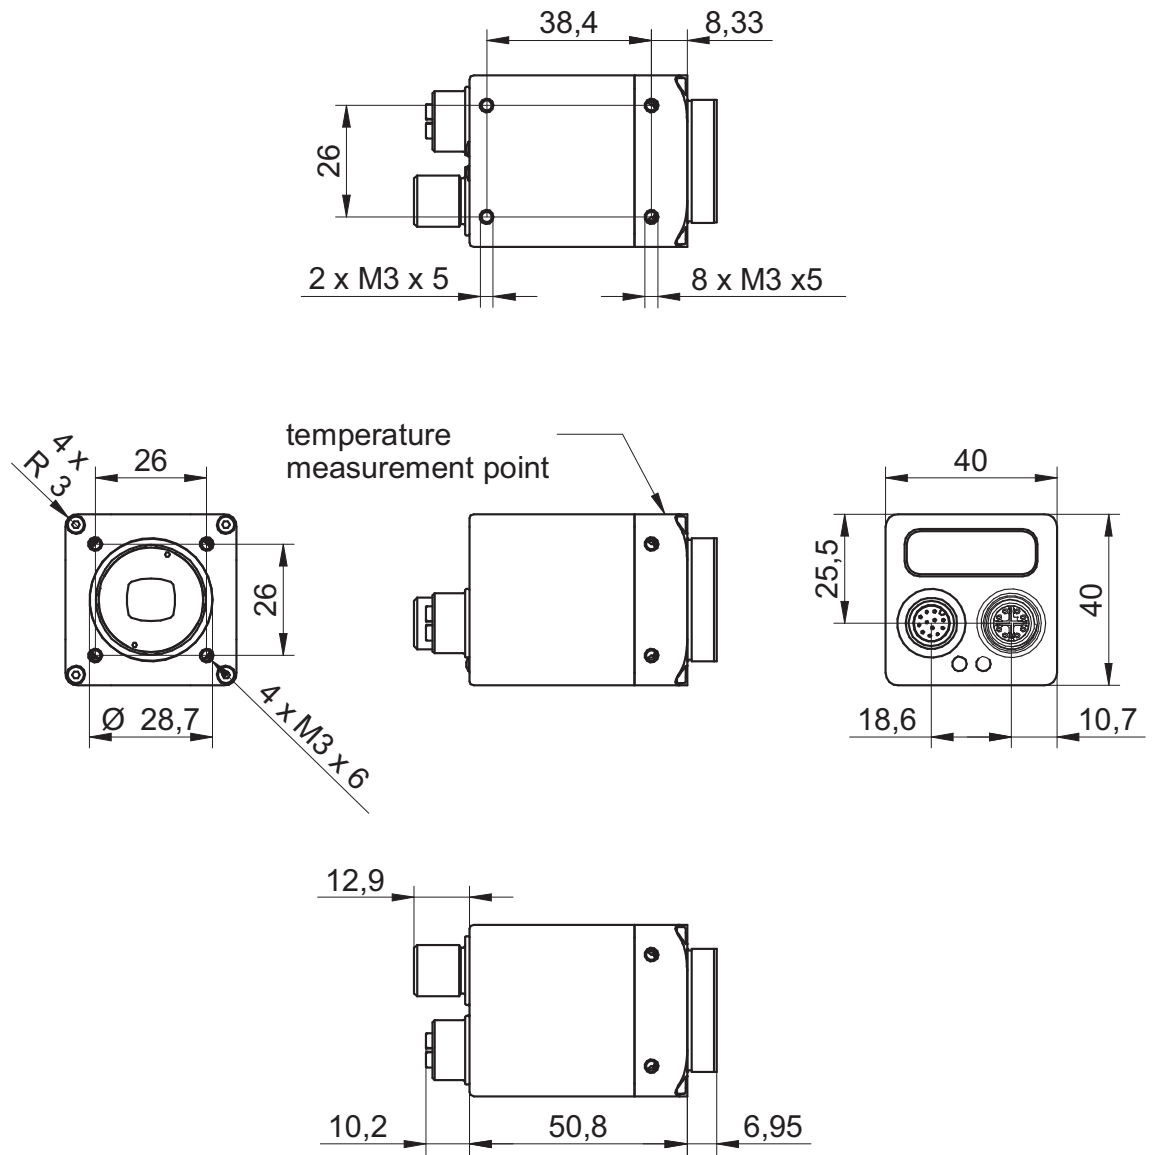


III. 3: Dimensional drawing - VCXG.I

3.4

VCXU.2

3.4.1


Conception

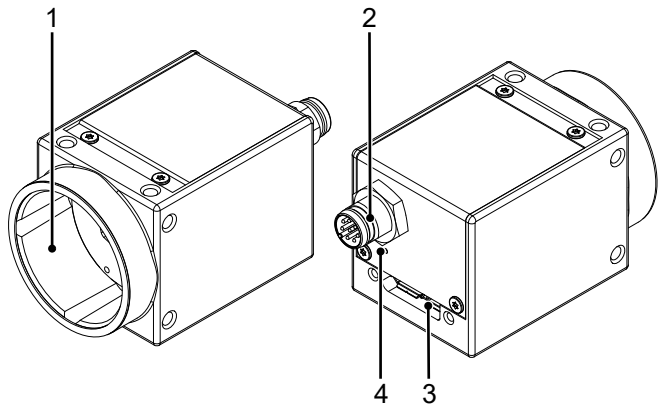

1	Lens connection (C-mount)	2	Digital-I/O
3	USB 3.0	4	LED

3.4.2

LED status indicator

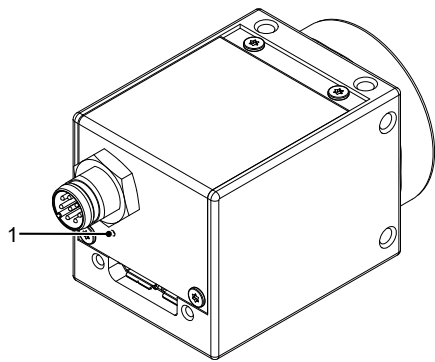


	Signal	Meaning
1	green flashing	Power on
	green continuous	Connection via USB 3.0
	red	Connection via USB 2.0
	yellow	Data traffic
	red flashing	Update

3.4.3

Camera models

Camera type	Sensor size	Resolution (Width × Height)	Max. FPS
Monochrom			
VCXU.2-13M	1/2"	1280 × 1024	222
VCXU.2-15M	1/2.9"	1440 × 1080	225
VCXU.2-31M	1/1.8"	2048 × 1536	120
VCXU.2-32M	1/1.8"	2048 × 1536	55.5
VCXU.2-50M	2/3"	2448 × 2048	73
VCXU.2-50MP	2/3"	2448 × 2048	73
VCXU.2-51M	2/3"	2448 × 2048	35
VCXU.2-57M	1/1.8"	2464 × 2048	75
VCXU.2-65M.R	1/1.8"	3072 × 2048	47
VCXU.2-123M	1.1"	4096 × 3000	31
VCXU.2-127M	1/1.1"	4096 × 2992	31
VCXU.2-201M.R	1"	5472 × 3648	15
VCXU.2-241M	1.2"	5312 × 4592	15
Color			
VCXU.2-13C	1/2"	1280 × 1024	222
VCXU.2-15C	1/2.9"	1440 × 1080	225
VCXU.2-31C	1/1.8"	2048 × 1536	120
VCXU.2-32C	1/1.8"	2048 × 1536	55.5
VCXU.2-5.C	2/3"	2448 × 2048	73
VCXU.2-51C	2/3"	2448 × 2048	35
VCXU.2-57C	1/1.8"	2464 × 2048	75
VCXU.2-65C.R	1/1.8"	3072 × 2048	47
VCXU.2-123C	1.1"	4096 × 3000	31
VCXU.2-127C	1/1.1"	4096 × 2992	31
VCXU.2-201C.R	1"	5472 × 3648	15
VCXU.2-241C	1.2"	5312 × 4592	12

3.4.4 Dimensional drawing

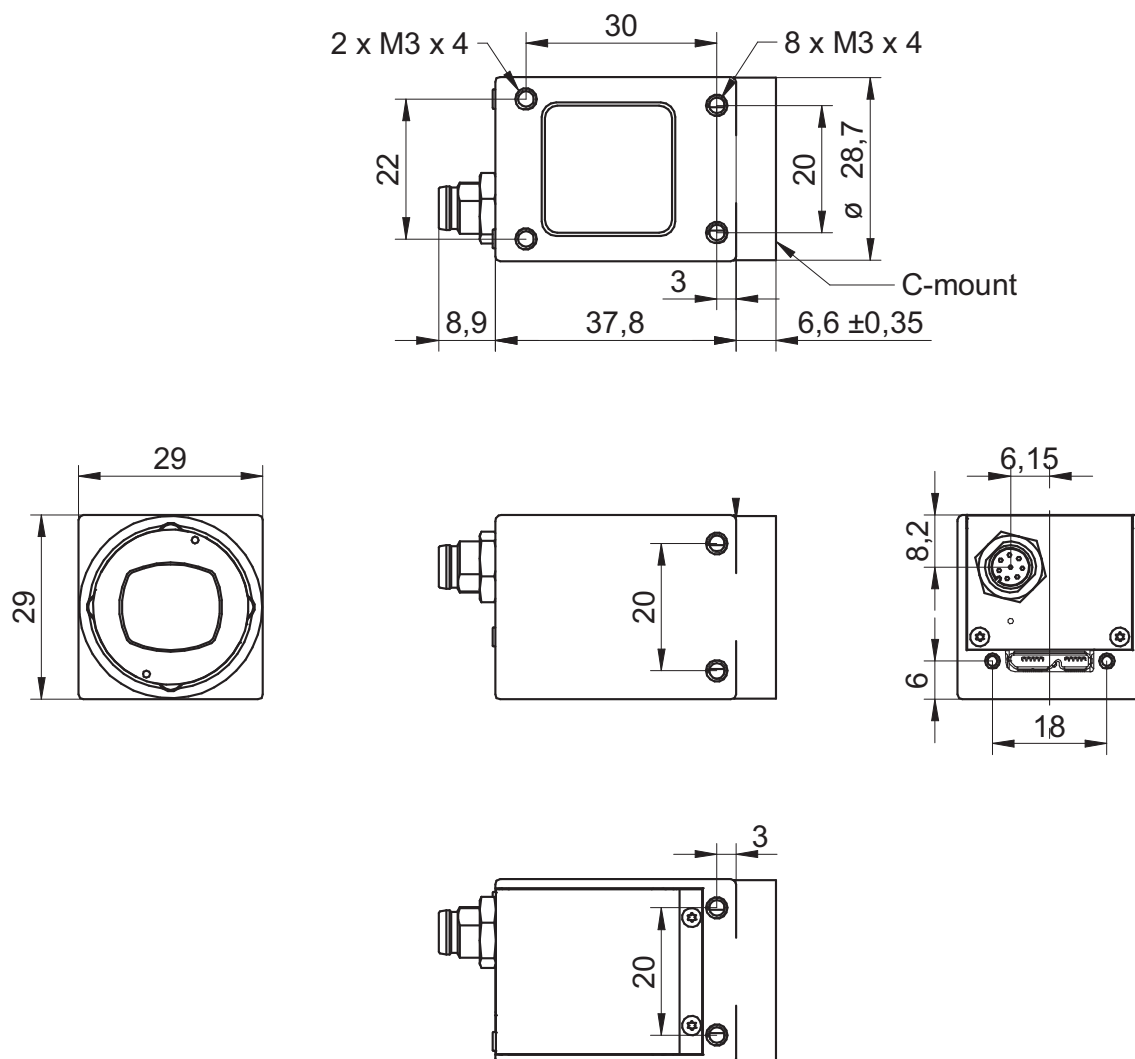

III. 4: Dimensional drawing - VCXU

4 Transport and storage

4.1 Transport

NOTICE

Material damage due to improper transport.

- a) Ensure maximum diligence when unloading the delivered packages as well as when transporting them inside the company.
- b) Note the information and symbols on the packaging.
- c) Only remove packaging immediately before mounting.

4.2 Delivery inspection

Upon receipt immediately inspect the delivery for completeness and transport damage.

Claim any defect as soon as it is detected. Damages can only be claimed within the applicable claims deadlines.

In case of externally visible transport damage, proceed as follows:

Instruction:

- a) Do not accept the delivery or only with reservations.
- b) Note the scope of the damage on the transport documents or the delivery slip of the carrier.
- c) Initiate the claim.

5 Installation

5.1 Environmental requirements

Storage temperature	VCXG.2	-20 °C (-4 °F) ... +70 °C (+158 °F)
	VCXG.2.XC	-20 °C (-4 °F) ... +70 °C (+158 °F)
	VCXG.2.I	-20 °C (-4 °F) ... +70 °C (+158 °F)
	VCXU.2	-20 °C (-4 °F) ... +70 °C (+158 °F)
Operating temperature	VCXG.2	0 °C (32 °F) ... 60 °C (140 °F) ¹⁾ */** / 65 °C (149 °F)*/**
	VCXG.2.XC	0 °C (32 °F) ... 65 °C (149 °F) */** / 75 °C (167 °F)*/**
	VCXG.2.I	0 °C (32 °F) ... 65 °C (149 °F)*/***
	VCXU.2	0 °C (32 °F) ... 60 °C (140 °F) ¹⁾ */** / 65 °C (149 °F)*/**
Humidity		10 % ... 90 % non condensing

¹⁾ VCXU.2-201M.R / C.R

*/ at T (measuring point)

/** Ambient temperatures of more than 28 °C (82.4 °F) / 34 °C (93.2 °F) / 32 °C (89.6 °F) / 39 °C (102.2 °F) (depending on the camera model) require heat dissipation measures.

/*** Ambient temperatures higher than 45 °C (113 °F) require heat dissipation measures.



INFO

Ambient temperature in UL applications


The maximum ambient temperature for UL applications is 40 °C (104 °F). A circulating air flow (1 m/s) is required at any temperature.

5.2 Mechanical Tests

Baumer cameras are tested towards the following standards to ensure industrial suitability.

Test environment	Standard	Parameter	
Vibration, sinusoidal	IEC 60068-2-6	Continuous oscillation	10-2000 Hz
		Amplitude underneath crossover frequencies	1.5 mm
		Acceleration	10 g
		Test duration	150 min (axis)
Vibration, broad band	IEC 60068-2-64	Frequency range	
		VCXG.2 (.XC) / VCXU.2	10-2000 Hz
		VCXG.2.I	5 - 2000 Hz
		Acceleration	10 g
		Test duration	300 min (axis)
Shock	IEC 60068-2-27	Pulse Time	11 ms / 6 ms
		Acceleration	50 g / 100 g
Shocks	IEC60068-2-29	Pulse Time	2 ms
		Acceleration	100 g
		Number of shocks per direction and axis	5000

Vibrationen

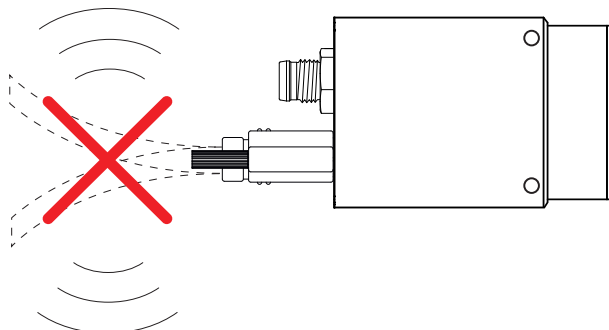

NOTICE

Vibration affecting the camera

Non-decoupled vibration may damage the camera connections.

Secure cables in a way making sure the camera is isolated against vibration.


5.3 Emergency shutdown at critical temperatures

To prevent damage to hardware by critical temperature, the camera features emergency shut-down. Use the *DeviceTemperatureStatusTransitionSelector* (Category: *DeviceControl*) feature to select different temperature thresholds that can be freely programmed:

- *NormalToHigh*: freely programmable
- *HighToExceeded*: permanent value (when being exceeded, image sensor switches off)
- *ExceededToNormal*: freely programmable, temperature for error-free camera reactivation
- *NormalToUnderrun*: (depending on model): permanent value (when dropping below, camera switches off or would not start image acquisition)

Feature *DeviceTemperatureStatusTransition* is for setting the transition temperatures or readout of the permanently set values.

Event *DeviceTemperatureStatusChanged* as soon as *DeviceTemperatureStatus* has changed.

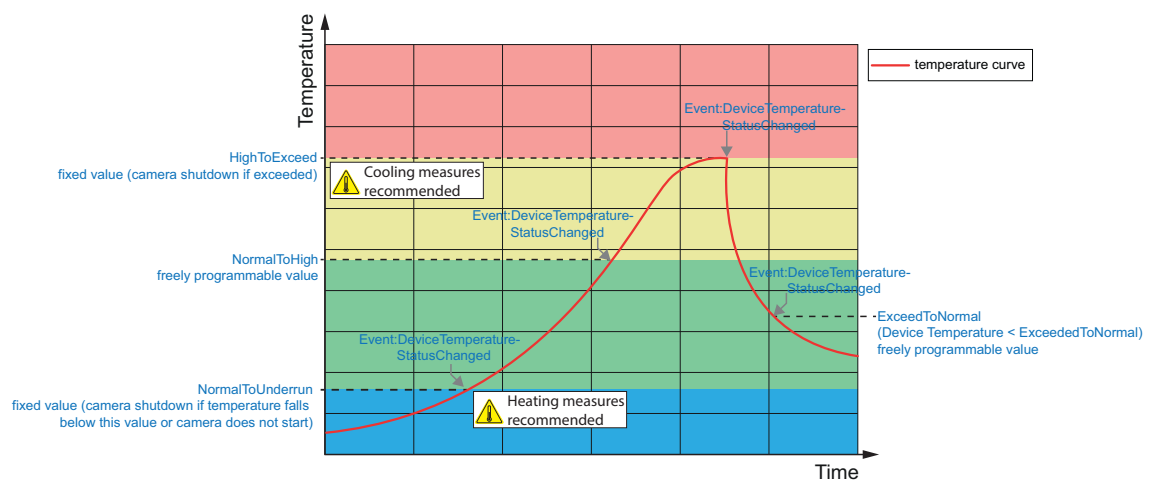

Excessive heat

Temperature exceeding the value set at *HighToExceeded* or function *DeviceTemperatureExceeded* being set to *True* would switch off the sensor, the LED status indicator will be on red. This usually entails temperature reduction. Further rising temperature inside the camera due to ambient temperature may damage the hardware.

For further use, disconnect the camera from power supply after cool down or execute *DeviceReset*.

The sufficient cooling is recognizable when the event *DeviceTemperatureStatusChanged* (Device Temperature < *ExceededToNormal*) is output.

Low temperature

Temperature falling below the value set at *NormalToUnderrun* or starting the camera at a temperature inferior to *NormalToUnderrun* will set function *DeviceTemperatureUnderrun* to *True*, sensor would switch off and the LED status indicator would be on red.

For further use, disconnect the heated camera from power supply or execute *DeviceReset*.

Sufficient heating is indicated by output of the event *DeviceTemperatureStatusChanged* (device temperature > *NormalToUnderrun*).

Temperature for emergency shutdown in the event of overtemperature

VCXG.2

Camera type	max. temperature (internal sensor)
Monochrom / Color	
VCXG.2-13M / VCXG.2-13C	75 °C (167 °F)
VCXG.2-15M / VCXG.2-15C	75 °C (167 °F)
VCXG.2-25M / VCXG.2-25C	75 °C (167 °F)
VCXG.2-32M / VCXG.2-32C	72 °C (161.6 °F)
VCXG.2-51M / VCXG.2-51C	75 °C (167 °F)
VCXG.2-51MP	75 °C (167 °F)
VCXG.2-57M / VCXG.2-57C	75 °C (167 °F)
VCXG.2-65M.R / VCXG.2-65C.R	72 °C (163.4 °F)
VCXG.2-82M / VCXG.2-82C	75 °C (167 °F)
VCXG.2-83UV / .TCG.2	75 °C (167 °F)
VCXG.2-124M / VCXG.2-124C	75 °C (167 °F)
VCXG.2-127M / VCXG.2-127C	75 °C (167 °F)
VCXG.2-201M.R / VCXG.2-201C.R	75 °C (167 °F)
VCXG.2-204M / VCXG.2-204C	75 °C (167 °F)
VCXG.2-241M / VCXG.2-241C	75 °C (167 °F)

VCXG.2.XC

Camera type	max. temperature (internal sensor)
Monochrom / Color	
VCXG.2-51M.XC	75 °C (167 °F)
VCXG.2-241M.XC	75 °C (167 °F)

VCXG.2.I

Camera type	max. temperature (internal sensor)
Monochrom / Color	
VCXG.2-15M.I / VCXG.2-15C.I	70 °C (158 °F)
VCXG.2-32M.I / VCXG.2-32C.I	70 °C (158 °F)
VCXG.2-51M.I / VCXG.2-51C.I	70 °C (158 °F)
VCXG.2-57M.I / VCXG.2-57C.I	75 °C (167 °F)
VCXG.2-82M.I / VCXG.2-82C.I	75 °C (167 °F)
VCXG.2-127M.I / VCXG.2-127C.I	75 °C (167 °F)
VCXG.2-201M.R.I / VCXG.2-201C.R.I	75 °C (167 °F)
VCXG.2-241M.I / VCXG.2-241C.I	75 °C (167 °F)

VCXU.2

Camera type	Max. temperature (internal sensor)
Monochrom / Color	
VCXU.2-13M / VCXU.2-13C	75 °C (167 °F)
VCXU.2-15M / VCXU.2-15C	72 °C (161.6 °F)
VCXU.2-31M / VCXU.2-31C	72 °C (161.6 °F)
VCXU.2-32M / VCXU.2-32C	72 °C (161.6 °F)
VCXU.2-50M / VCXU.2-50C	72 °C (161.6 °F)
VCXU.2-50.MP	72 °C (161.6 °F)
VCXU.2-51M / VCXU.2-51C	72 °C (161.6 °F)
VCXU.2-57M / VCXU.2-57C	75 °C (167 °F)
VCXU.2-65M.R / VCXU.2-65C.R	73 °C (163.4 °F)
VCXU.2-123M / VCXU.2-123C	72 °C (161.6 °F)
VCXU.2-127M / VCXU.2-127C	75 °C (167 °F)
VCXU.2-201M.R / VCXU.2-201C.R	75 °C (167 °F)
VCXU.2-241M / VCXU.2-241C	75 °C (167 °F)




5.4 Heat dissipation

NOTICE

Heat accumulation in the device

Heat can damage the device. Ensure adequate heat dissipation. In view of the varied installation options Baumer does not make any recommendation for heat dissipation, but we suggest the following:


- Any form of convection around device and mounting helps reduce temperature. Prevent any heat accumulation!
- Mounting combined with forced convection may provide proper heat dissipation.
- Avoid mounting on stainless steel surfaces. The thermal conductivity of stainless steel is about 10 times worse compared to aluminium.
- To ensure heat dissipation on both sides, do not install the device at the end of a profile (larger surface for increased temperature reduction)!
- Do not operate other devices close to the camera. Any waste heat might further heat up the camera.

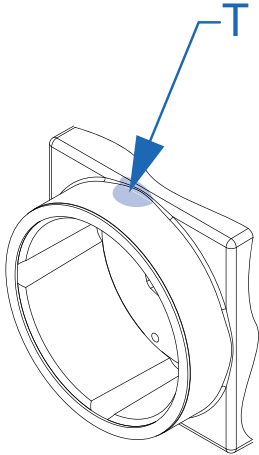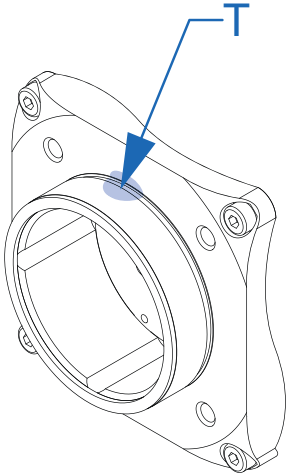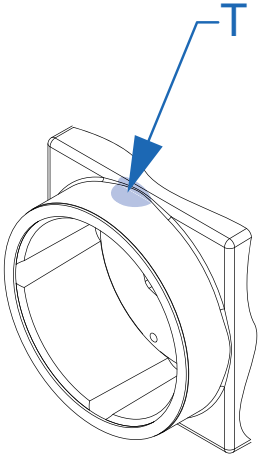VCXG.2 / .XC / .R	VCXG.2.I	VCXU.2
		
Temperature measuring point (T) / Maximum temperature		
65 °C (149 °F)	65 °C (149 °F)	65 °C (149 °F) 60 °C (140 °F) ¹ 1) VCXU.2-201M.R/C.R

5.4.1 Cooling channel (VCXG.2.XC only)

The camera features housing-integrated cooling pipe. This is to feed compressed air or tempering fluid for camera temperature control.

For compressed air / tempering fluid connection (inlet (1) / outlet (2) use male threaded M3 push-in fittings and plastic hoses, e.g. FESTO QSM-M3-3-I and FESTO PUN-H-3x0.5.

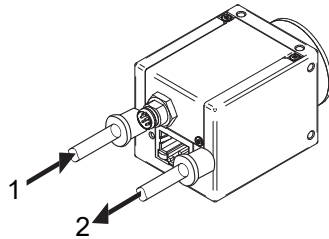


1 Cooling channel (inlet)

2 Cooling channel (outlet)

Cooling by air

The camera was tested with compressed air at 3 bar according to ISO 8573-1:2010 [1:4:2] [Particle:Water:Oil]. Maximum permitted pressure is 6 bar.

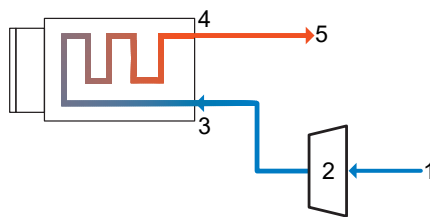

1 cold air

2 Compressor

3 Cooling channel (inlet)

4 Cooling channel (outlet)

5 warm air


Compressed air contamination and cleanliness classes (ISO 8573-12010)

Class	Particle				Water		Oil	
	According to particle size (maximum total of particles per m³)			Accord- ing to mass	Dew point		Fluid	Fluid, aerosol and vapor
	0.10 - 0.5 microns	0.5 - 1.0 microns	1.0 - 5.0 microns	mg/m³	°C	°F	g/m³	mg/m³
0	As specified by user or supplier and more stringent than Class 1							
1	≤ 20,000	≤ 400	≤ 10	-	≤ -70	≤ -94	-	≤ 0.01
2	≤ 400.000	≤ 6.000	≤ 100	-	≤ -40	≤ -40	-	≤ 0.1
3	-	≤ 90.000	≤ 1.000	-	≤ -20	≤ -4	-	≤ 1
4	-	-	≤ 10.000	-	≤ +3	≤ +37	-	-
5	-	-	≤ 100.000	-	≤ +7	≤ +45	-	-
6	-	-	-	0 - ≤ 5	≤ +10	≤ +50	-	-
7	-	-	-	5 - ≤ 10	-	-	≤ 0.5	-

Class	Particle				Water			Oil
8	-	-	-	-	-	-	≤ 5	-
9	-	-	-	-	-	-	≤ 10	-
X	-	-	-	> 10	-	-	> 10	> 5

Cooling by tempering fluid

The tempering fluid is an efficient way for taking heat away from the camera.

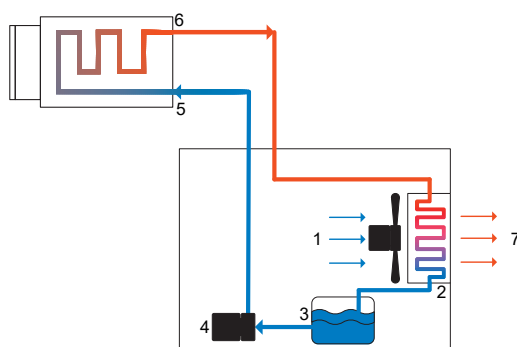

1	cold air	2	Heat exchanger
3	Tank	4	Pump
5	Cooling channel (inlet)	6	Cooling channel (outlet)
7	warm air		



! DANGER

Danger by improper system components

Risk of electric shock. Electric shock can cause fatal or serious injury.

- a) The system components, cables, tempering fluid connections and hoses as well as lens must be selected in compliance with operating conditions.

The maximum ambient temperature of +85 °C (185 °F) must not be exceeded neither for the camera nor the components since it is the maximum temperature specified for the connectors (RJ45 and M8). At temperatures below freezing point, ensure tempering fluid supply without any interruptions.

The tempering fluid must meet the following criteria:

- Compatible to aluminum
- must provide bio-growth inhibiting properties
- must contain anti-corrosion agents
- maximum pressure 6 bar
- Recommended fluid temperature range is from 1 °C (33.8 °F)... 50 °C (122 °F), in relation to the ambient temperature
- The camera was tested at a flow rate of 0.9l/h. The flow rate depends on applied the pump performance.

As cooling fluid, we recommend *innovatek Protect PRO Konzentrat* in combination with distilled water.

5.5 Lens mount

Avoid contamination of the sensor and the lens by dust and airborne particles when mounting the lens to the device!

Therefore the following points are very important:

- Install the camera in an environment that is as dust free as possible!
- Keep the lens mount covered if no lens is attached
- Hold the camera downwards with unprotected sensor.
- Avoid contact with any optical surface of the camera!

5.6 Filter exchange

Color cameras integrate a filter. This filter may limit the sensor use in certain applications.


To replace the filter, proceed as follows.

NOTICE

Dust-contaminated optical surfaces

Prevent filter, sensor and lens from contamination by dust and suspended matter!

Any filter exchange only in a dust-free room and using clean tools!

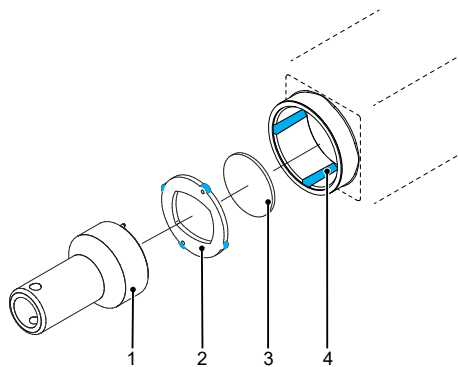

1	Assembly tool	2	Filter support
3	Filter	4	Guide grooves

Instruction:

- a) Place the mounting tool (1) into the sensor opening. Place both front pins into the holes provided at the filter support (2).
- b) Turn filter support (2) until the lugs can be seen in the guide grooves (4).
- c) Remove the filter support (2).
- d) Carefully remove the filter (3). When doing so, do not touch the sensor!
- e) Insert a new filter into the sensor opening.
- f) Replace the filter support (2).
- g) Turn the filter support (2) until the lugs are no longer visible in the guide grooves (4).

5.7 Modular tube system (please order separately)

For lens protection, specific cameras provide various *modular tube systems*.




INFO

Several additional housings as lens and camera protection are still available for particular camera models.

Mounting the modular tube system

Instruction:

- Mount the *modular tube system* as shown in the illustration below.
- For eased seal assembly (6) Baumer recommends grease ELKALUB GLS 867.
- Tighten the screws (3) to 0.9 Nm using a torque wrench.
- If a lens should require more space use a corresponding spacer ring (2).

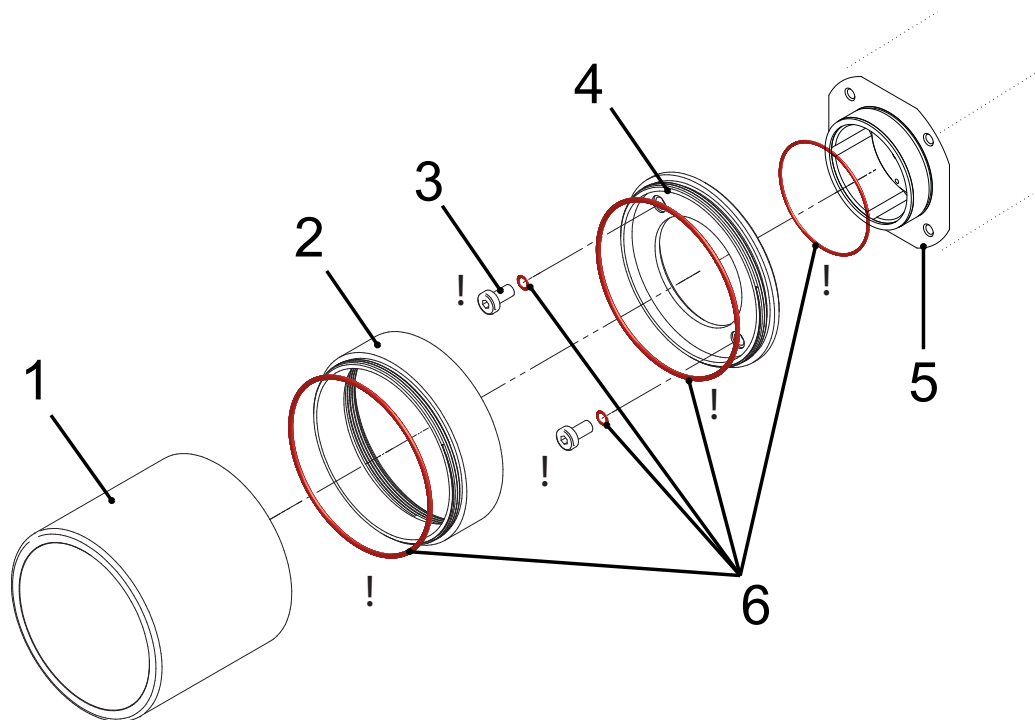

1	Tube	2	Spacer
3	Screw	4	Tube adapter
5	Camera	6	Sealings

Mounting the modular tube system (VCXG.XC only)




INFO

The modular tube system mounted to the VCXG.XC does not improve the camera's protection rating (IP40). For this reason no seals are assembled. However, this way Tubes an overheating protection feature at (e.g. filter for heat reflection) can be attached to the camera.


Instruction:

- Mount the *modular tube system* as shown in the illustration below.
- Tighten the screws (3) to 0.9 Nm using a torque wrench.
- If a lens should require more space use a corresponding spacer ring (2).

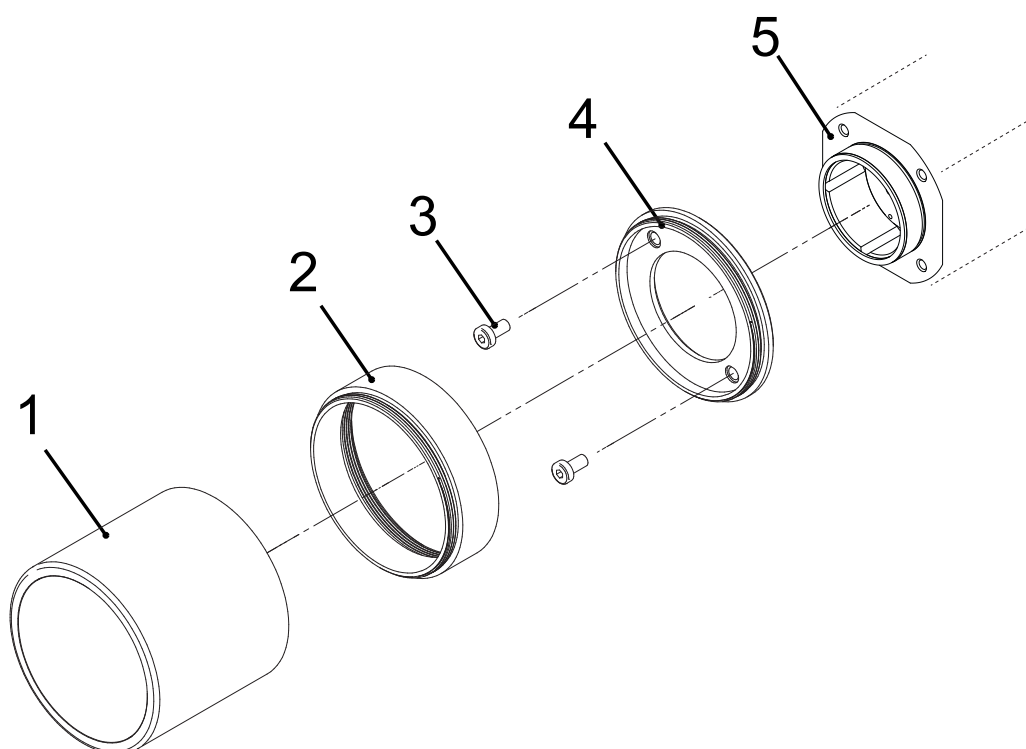


1	Tube	2	Spacer
3	Screw	4	Tube adapter
5	Camera		


Tube adapter

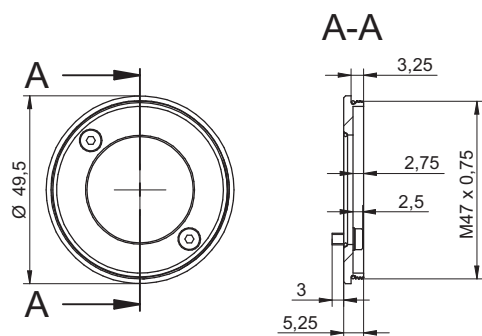M 47


Art. No.: 11185373

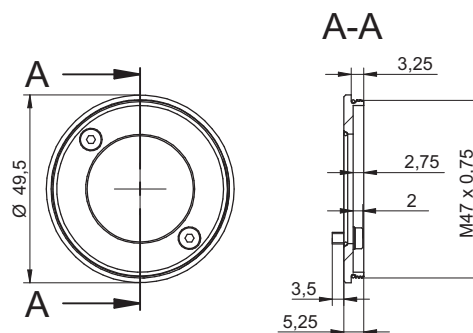M 47 (VCXG.XC)

Art. No.: 11726478

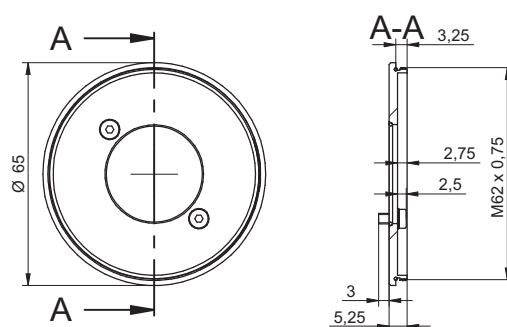
M 62

Art. No.: 11185377

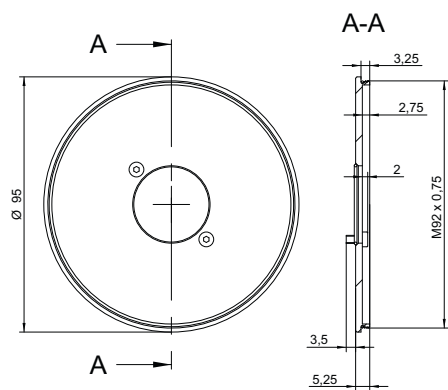
M 92

Art. No.: 11704311


Spacer

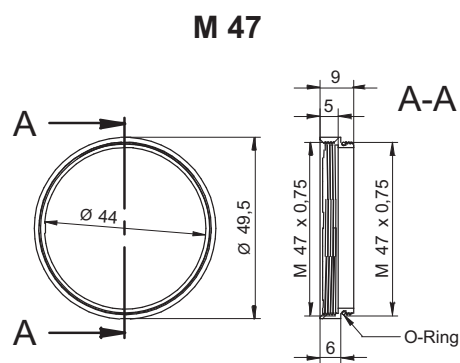


Art. No.: 11185372

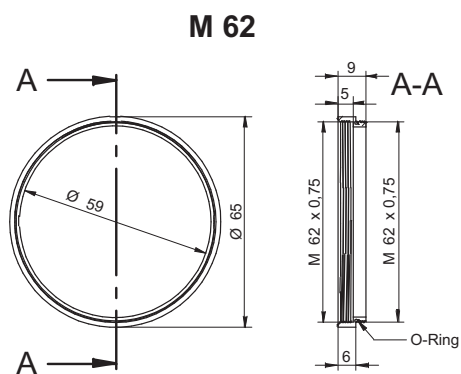


Art. No.: 11185376

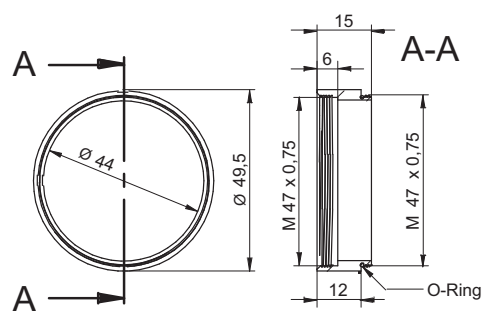


Art. No.: 11185371

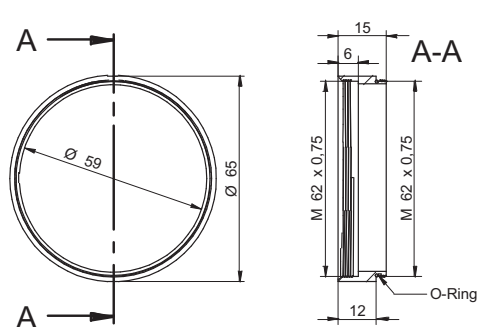

Art. No.: 11185375

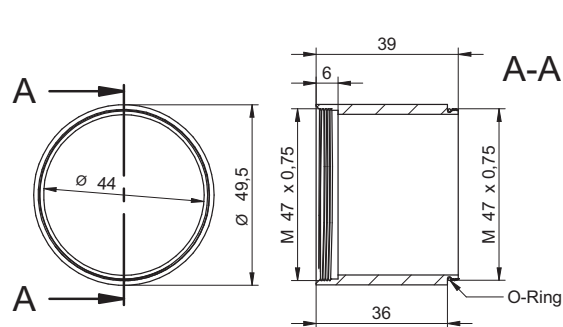


Art. No.: 11211571

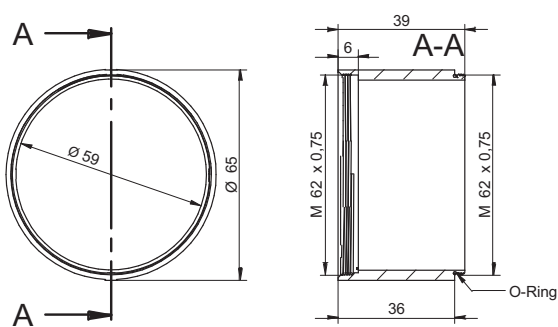


Art. No.: 11198906


M 92

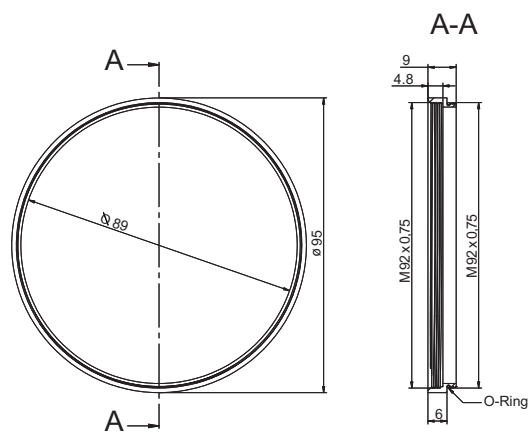


Art. No.: 11704395

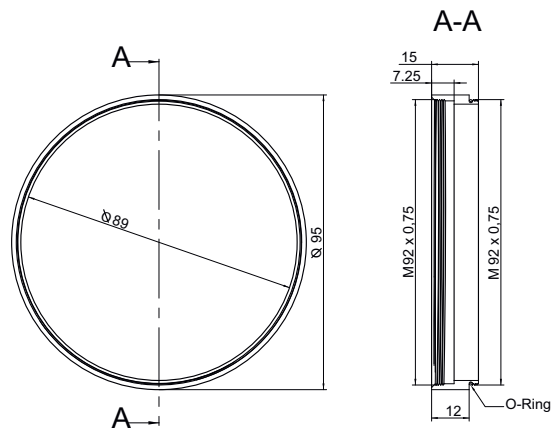


Art. No.: 11704397

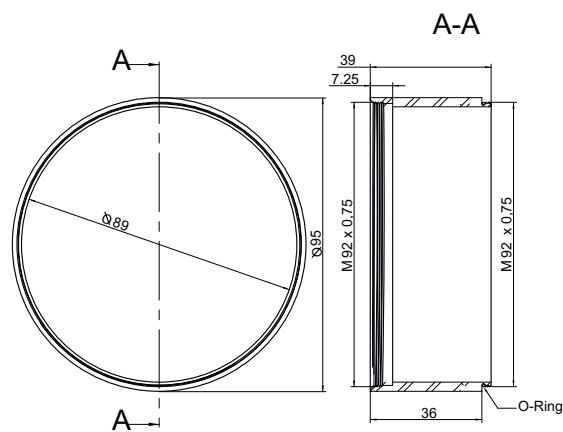

Art. No.: 11704394

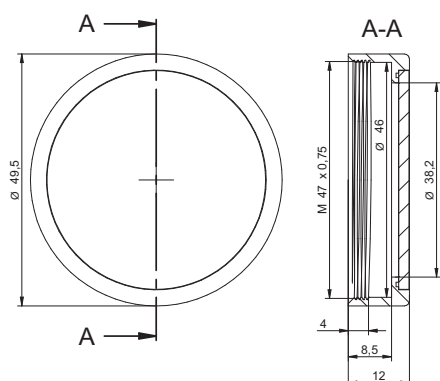Tube**M 47**


Art. No.: 11702640 (Cover Glass: PMMA, acrylic glass)

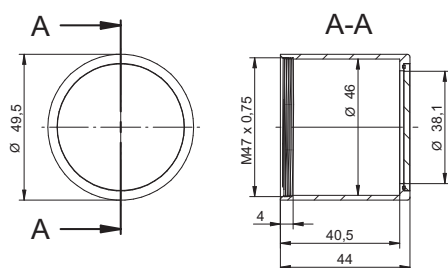M 47

Art. No.: 11185370 (Cover Glass: PMMA, acrylic glass)

Art. No.: 11701124 (Cover Glass: Corning® Gorilla® glass, scratchproof laminated safety glass)


Art. No.: 11727393 (Cover Glass: Corning® Gorilla® glass with heat reflecting filter)

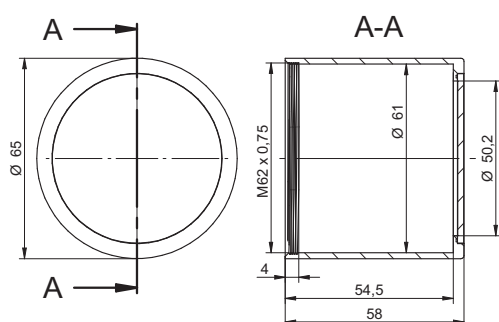M 62

Art. No.: 11185374 (Cover Glass: PMMA, acrylic glass)

Art. No.: 11701125 (Cover Glass: Corning® Gorilla® glass, scratchproof laminated safety glass)


M 92

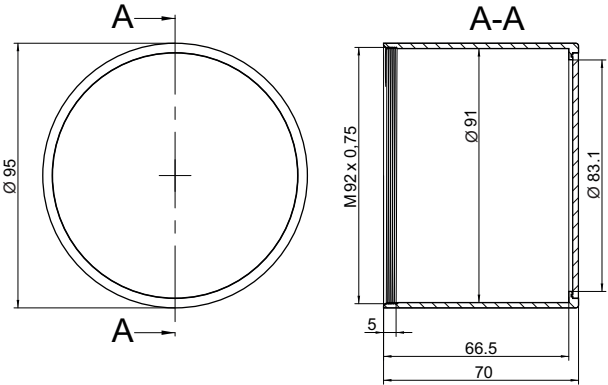


Art. No.: 11704312 (Cover glass: Cover Glass: PMMA, acrylic glass)

Tube: inner dimensions


M 47

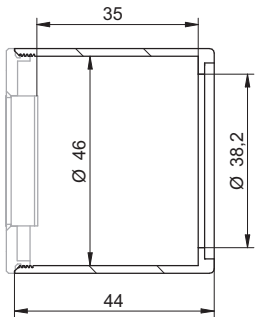

M 62

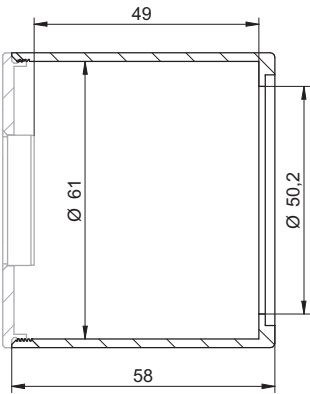

M 92

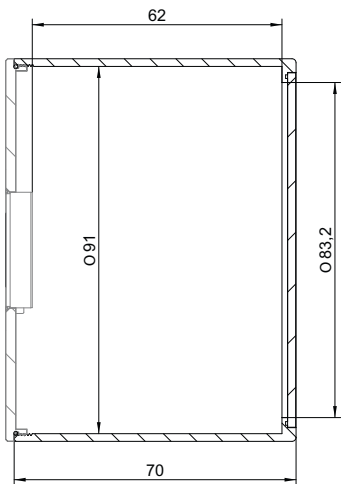

5.8 Cable requirements for UL conformity

In UL-compliant installation, the cables used must meet the following requirements:



- Shielding for optimum electrical interference immunity
- IP protection class covering the intended use
- UL approval
- Dielectric strength according to the applied operating voltage (min. 30 V)
- Temperature stability within the specified device temperature range (min. 70 °C (158 °F))
- Minimum cable cross-section for maximum output current

6 Optical specification

6.1 VCXG.2

6.1.1 Sensor position accuracy

Typical precision under assumption of the average square root value is shown in the figure and table(s) below.

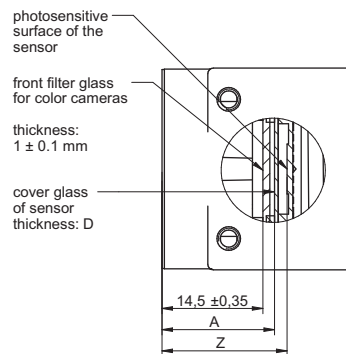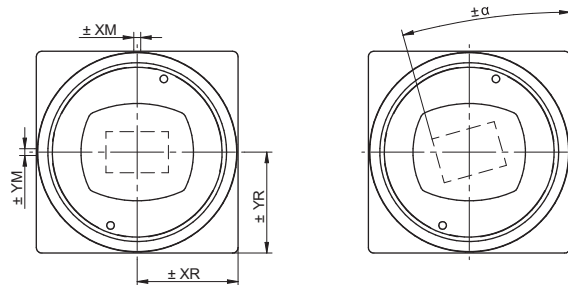

Camera type	± xM [mm]	± yM [mm]	± xR [mm]	± YR [mm]	z***typ [mm]	± αtyp [°]	A*** [mm]	D** [mm]
VCXG.2-13*	0.05	0.05	0.05	0.05	17.55 ± 0.100	0.6	16.6	0.55
VCXG.2-15*	0.07	0.07	0.07	0.07	17.63 ± 0.070	0.6	16.4	0.70
VCXG.2-25*	0.05	0.05	0.05	0.05	17.65 ± 0.070	0.6	16.5	0.55
VCXG.2-32*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-51*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-57*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	16.4	0.50
VCXG.2-65*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	16.4	0.50
VCXG.2-82*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-83*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-124*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-127*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-201*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50
VCXG.2-204*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-241*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50

typical accuracy by assumption of the root mean square value


* C or M

** Dimension D in this table is from manufacturer datasheet

*** For color add 0.35 mm to nominal value

6.1.2

Filter glass (color cameras)

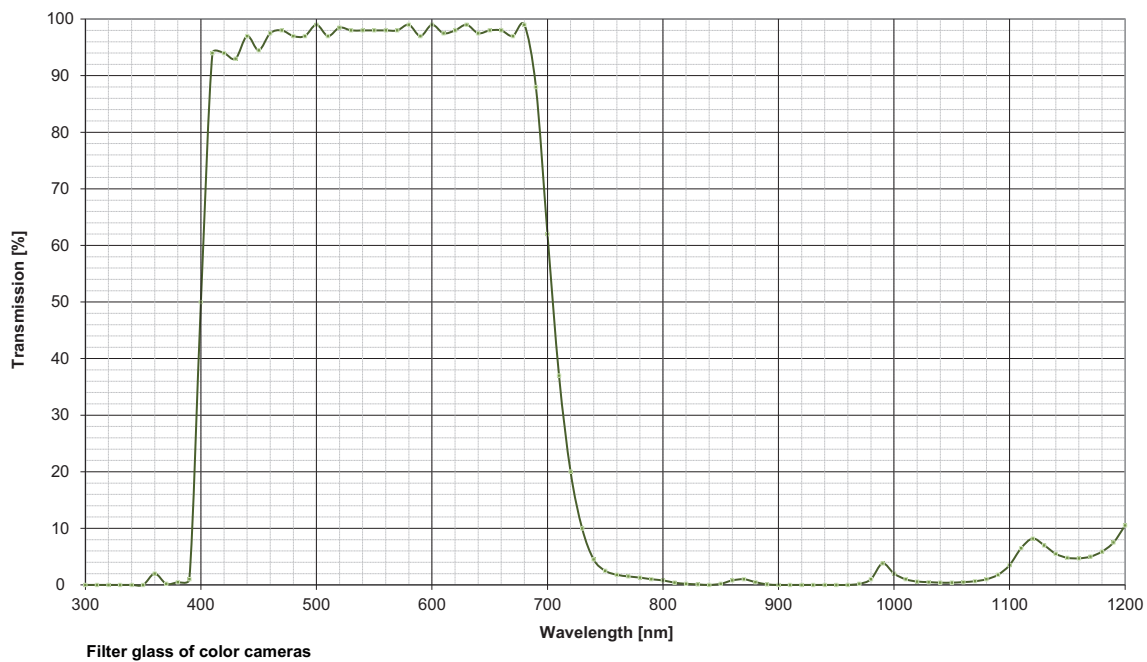

6.1.3 Filter glass (UV sensor)

Cameras with UV sensors are available with permanently attached or removable cover glass. Transmission of the permanently attached cover glass is shown below.

	permanently attached sensor cover glass	removable sensor cover glass
VCXG.2-83UV	■	□
VCXG.2-83UV.TCG.2	□	■




INFO

Vendor's warranty obligation extends to product defects before the risk transfer according to the agreed Incoterm. Vendor's product warranty expires immediately when the buyer has changed the product in any way, e.g. having removed the sensor glass. Please observe any deviating warranty terms.



INFO

To remove the sensor's cover glass, please follow the related instructions and safety instructions in the technical documentation.

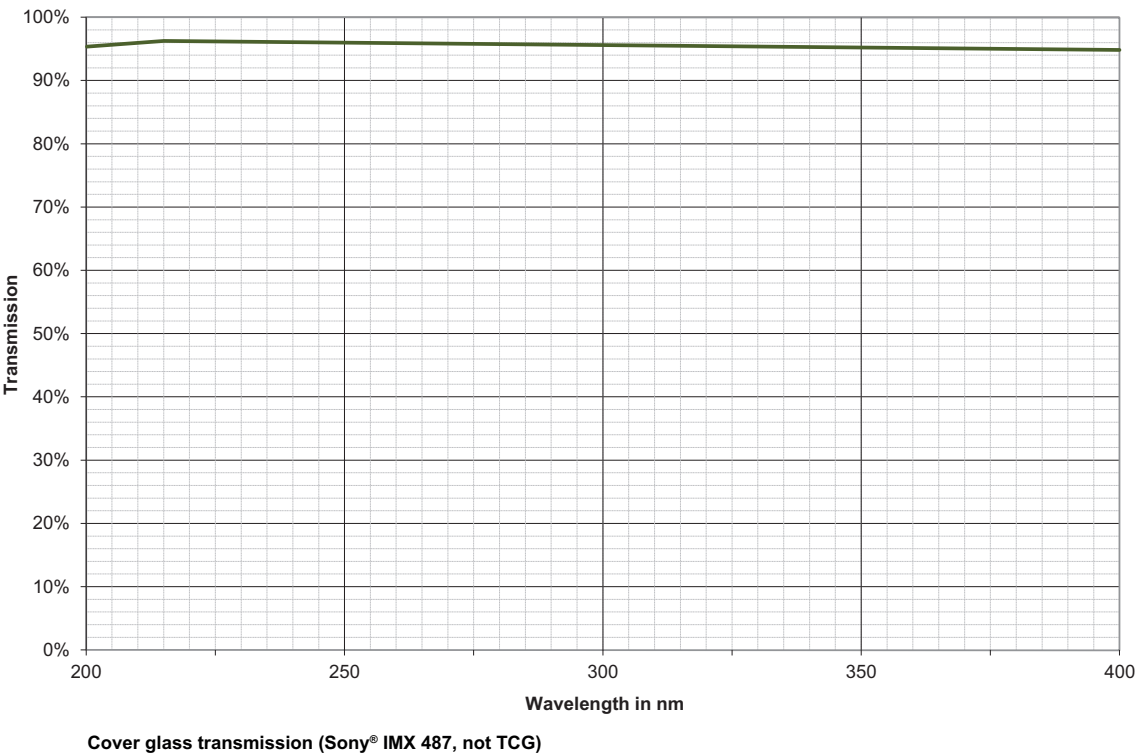


6.1.4 Spectral sensitivity


The following diagrams show the spectral sensitivity characteristics for this camera series. The characteristic curves for the sensors do not take the characteristics of lenses and light sources without filters into consideration.

The values refer to the related data sheets.


Cameras

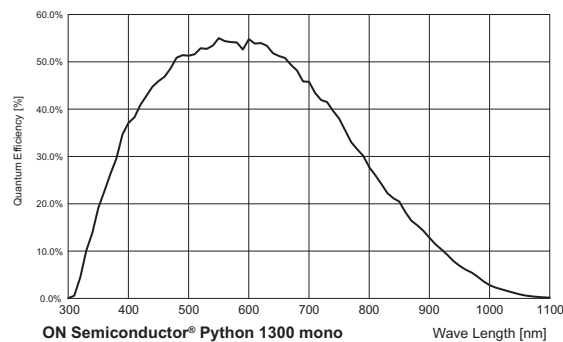


Spectral sensitivity VCXG.2-13M
(PYTHON1300)

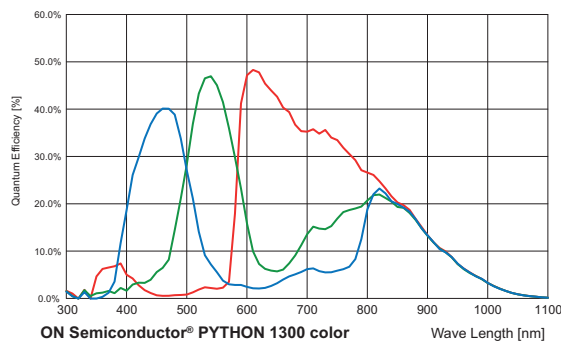


Spectral sensitivity VCXG.2-13C
(PYTHON1300)

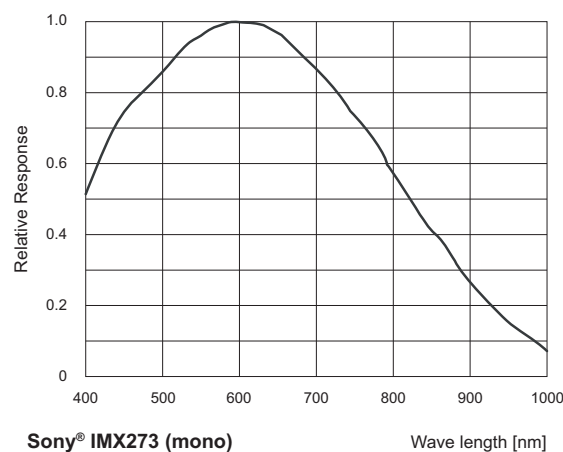


Spectral sensitivity VCXG.2-15M
(Sony® IMX273)

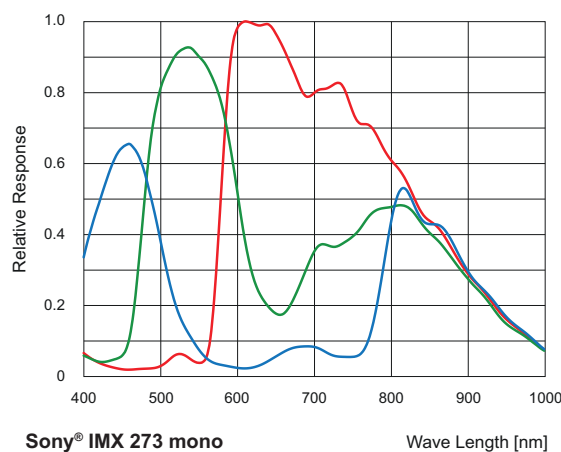


Spectral sensitivity VCXG.2-15C
(Sony® IMX273)

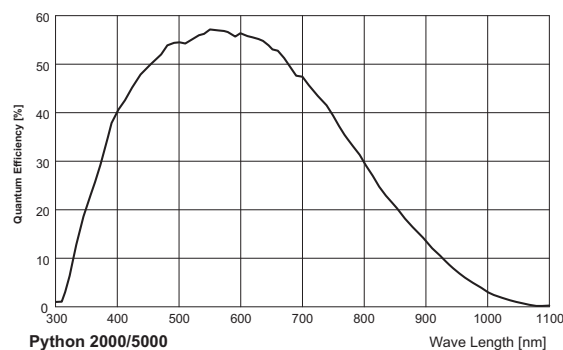


Spectral sensitivity VCXG.2-25M
(PYTHON2000)

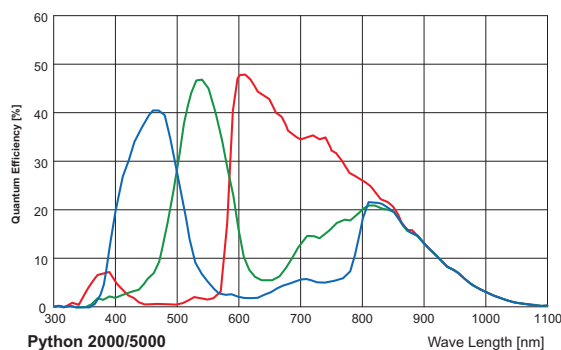


Spectral sensitivity VCXG.2-25C
(PYTHON2000)

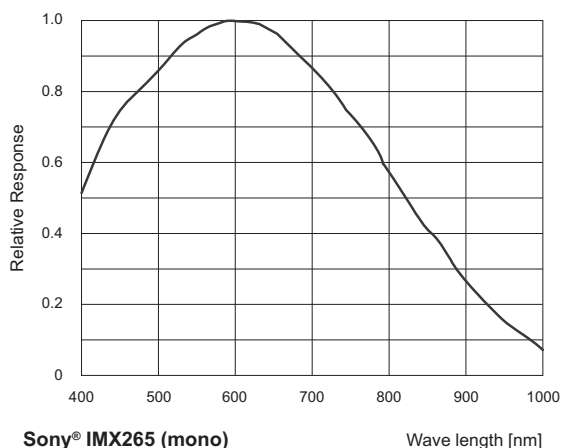


Spectral sensitivity VCXG.2-32M
(Sony® IMX265)

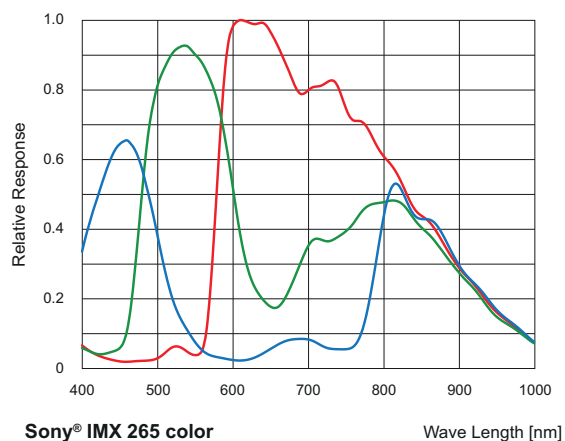


Spectral sensitivity VCXG.2-32C
(Sony® IMX265)

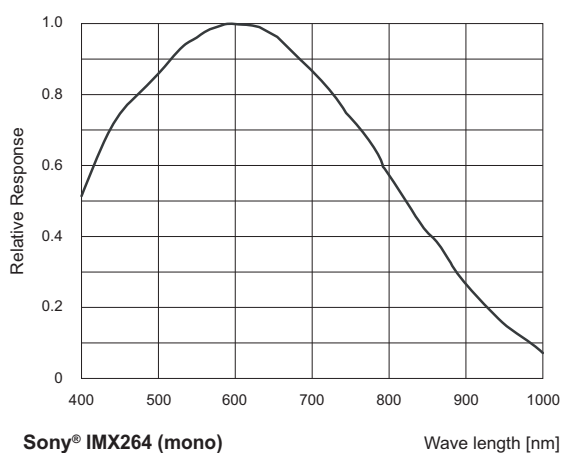


Spectral sensitivity VCXG.2-51M /
VCXG.2-51MP (Sony® IMX264)

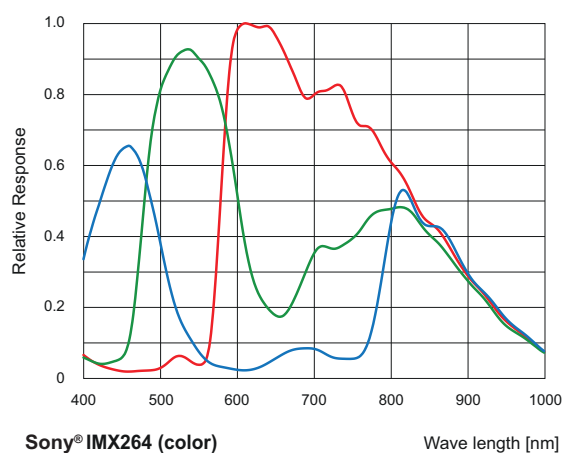


Spectral sensitivity VCXG.2-51C
(Sony® IMX264)

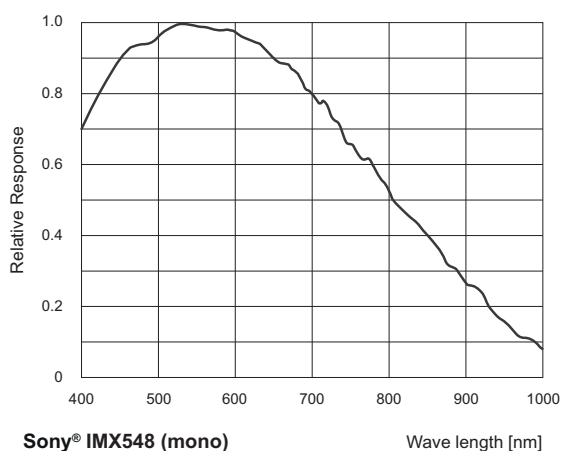


Spectral sensitivity VCXG.2-57M
(Sony® IMX548)

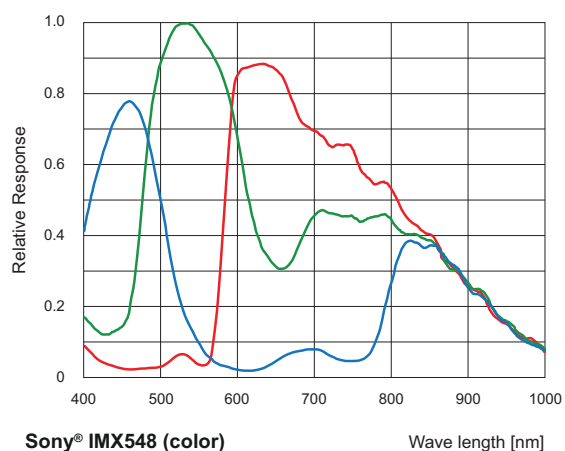


Spectral sensitivity VCXG.2-57C
(Sony® IMX548)

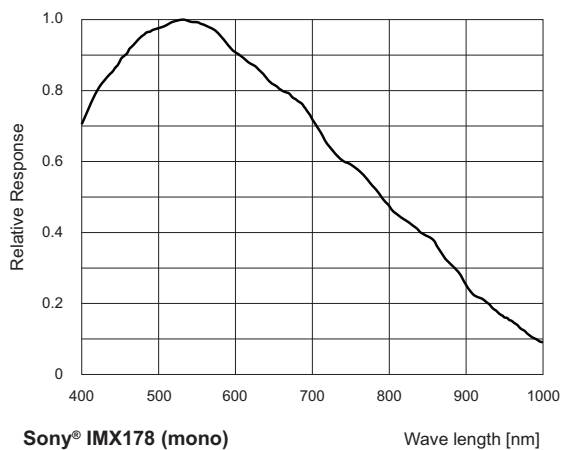


Spectral sensitivity VCXG.2-65M.R
(Sony® IMX178)

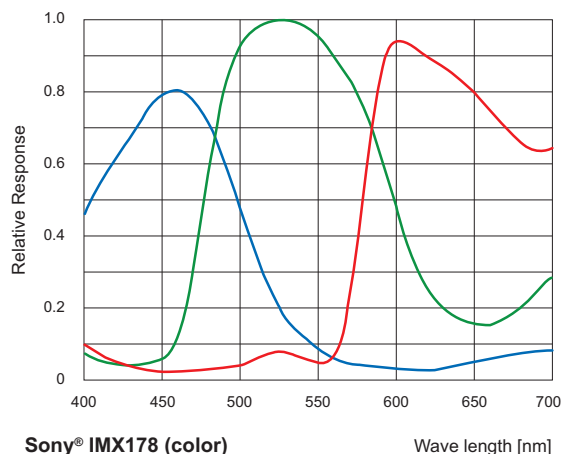


Spectral sensitivity VCXG.2-65C.R
(Sony® IMX178)

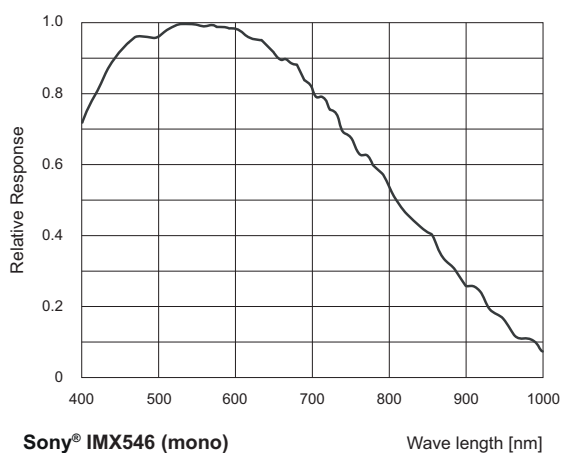


Spectral sensitivity VCXG.2-82M
(Sony® IMX546)

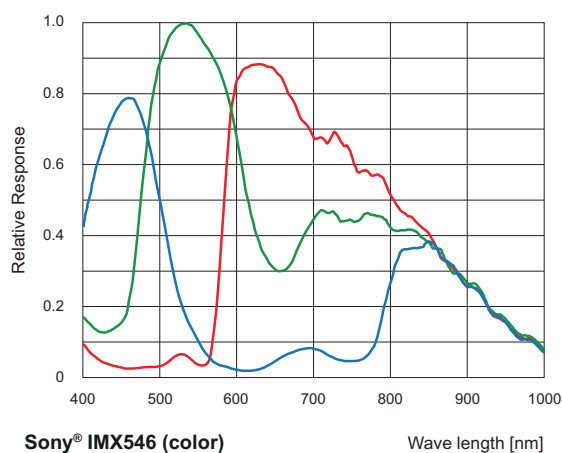


Spectral sensitivity VCXG.2-82C
(Sony® IMX546)

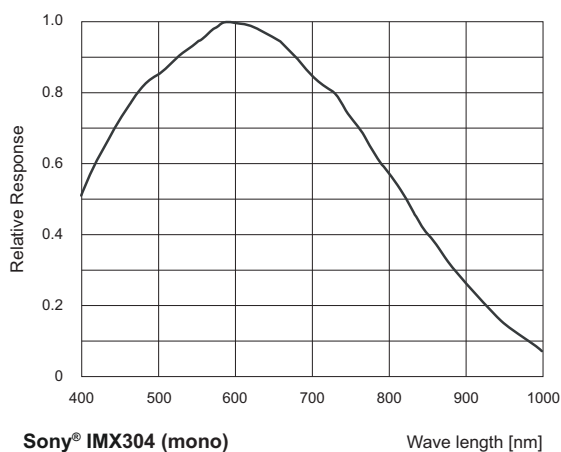

Spectral sensitivity VCXG.2-124M
(Sony® IMX304)

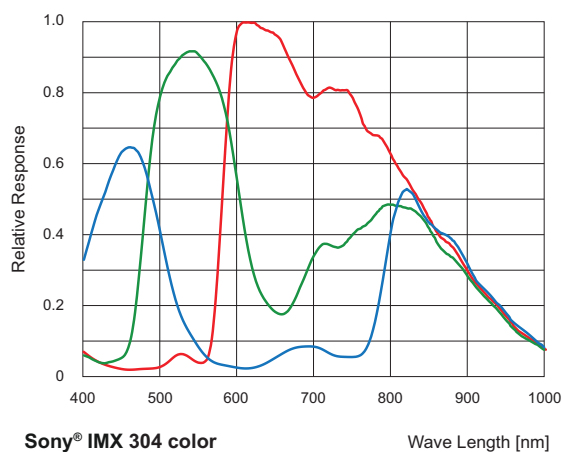


Spectral sensitivity VCXG.2-124C
(Sony® IMX304)

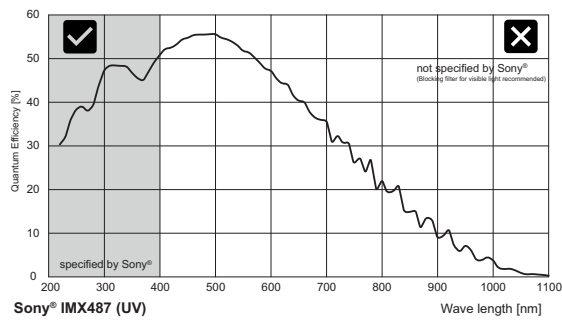


INFO: Sony IMX 487 is designed for UV wavelengths from 200 nm - 400 nm. Sensitivity within the visible wavelength range is not ensured.


Spectral sensitivity VCXG.2-83UV / .TCG.2
(Sony® IMX487)

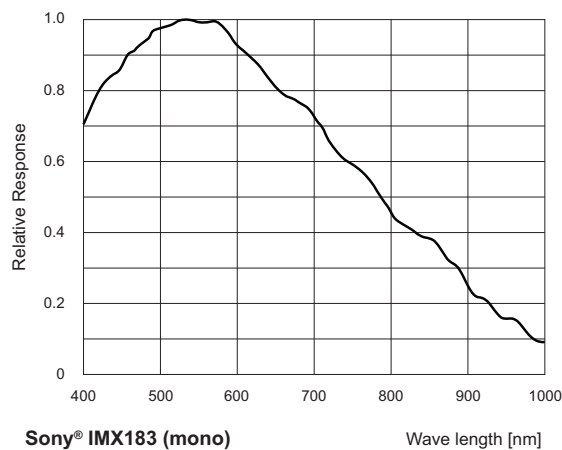


Spectral sensitivity VCXG.2-201M.R
(Sony® IMX183)

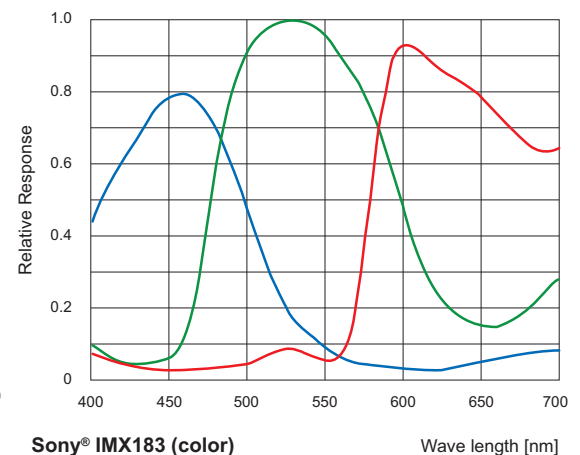


Spectral sensitivity VCXG.2-201C.R
(Sony® IMX183)

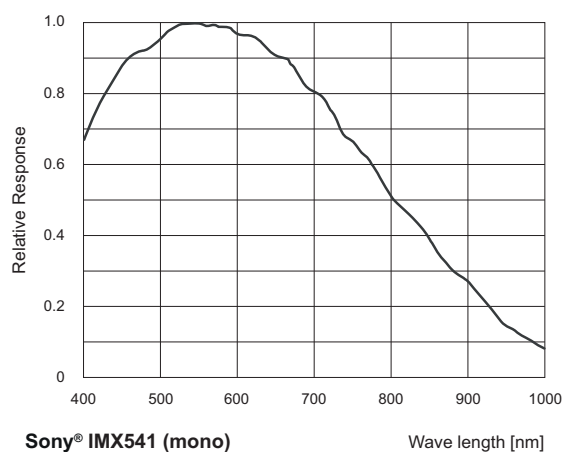


Spectral sensitivity VCXG.2-204M
(Sony® IMX541)

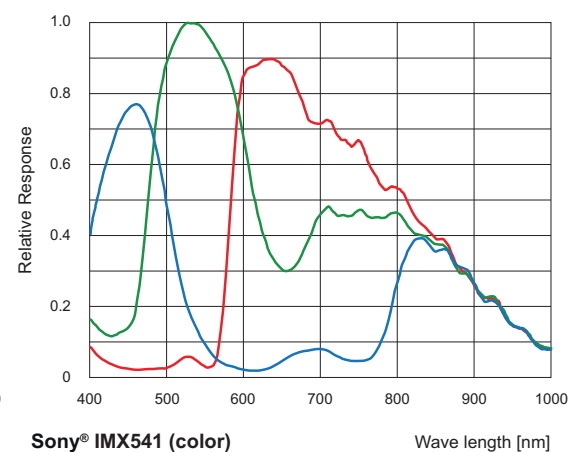

Spectral sensitivity VCXG.2-204C
(Sony® IMX541)

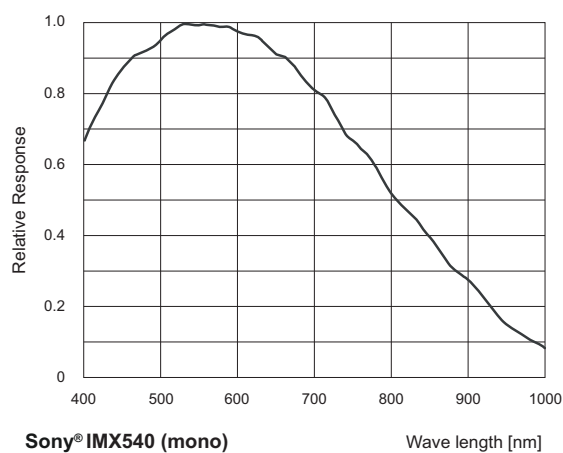

Spectral sensitivity VCXG.2-241M
(Sony® IMX540)


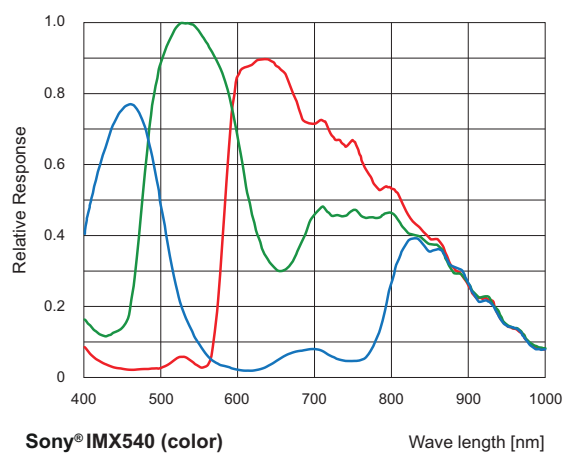


Spectral sensitivity VCXG.2-241C
(Sony® IMX540)

6.2 VCXG.2.XC

6.2.1 Sensor position accuracy

Typical precision under assumption of the average square root value is shown in the figure and table(s) below.

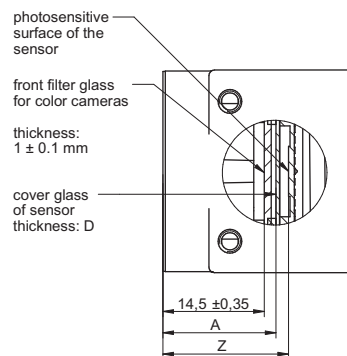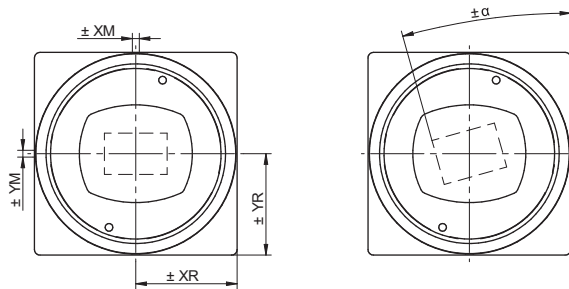

Camera type	$\pm xM$ [mm]	$\pm yM$ [mm]	$\pm xR$ [mm]	$\pm YR$ [mm]	z^{***typ} [mm]	$\pm \alpha_{typ}$ [°]	A^{***} [mm]	D^{**} [mm]
VCXG.2-51.XC*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-241.XC*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50

typical accuracy by assumption of the root mean square value

* C or M


** Dimension D in this table is from manufacturer datasheet

*** For color add 0.35 mm to nominal value

6.2.2 Cover glasses Tubes

Tube cover glass Acrylic

Acrylic (PMMA) with very good price-performance ratio is used in most applications. It provides high transmission and therefore is used as protective lens cover.

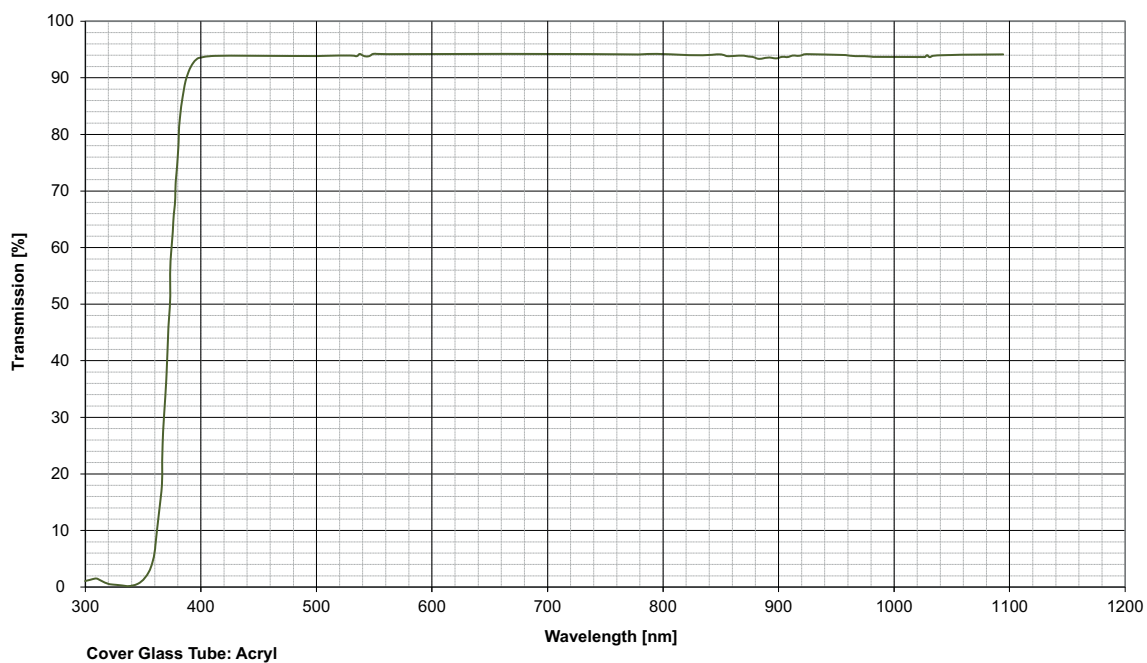


Tube cover glass: hardened, scratch-resistant laminated safety glass

The laminated safety glass comprises two panes Corning® Gorilla® glass (Generation 3), with thickness 0.7 mm and bonded to 0.38 mm PVB film. This is why the glass is scratch-resistant and unbreakable. The glass is used for areas where high crack resilience is required, e.g. in the food industry.. In the event of break, the film will prevent any glass fragments from falling down. Thanks to its high scratch resistance, the glass is very durable and withstands many cleaning cycles.





INFO

For reason of production technology, the glass comes with a slightly wavy surface. Please take this into account in the events of high requirements on precision (e.g. when applied in measuring operations).

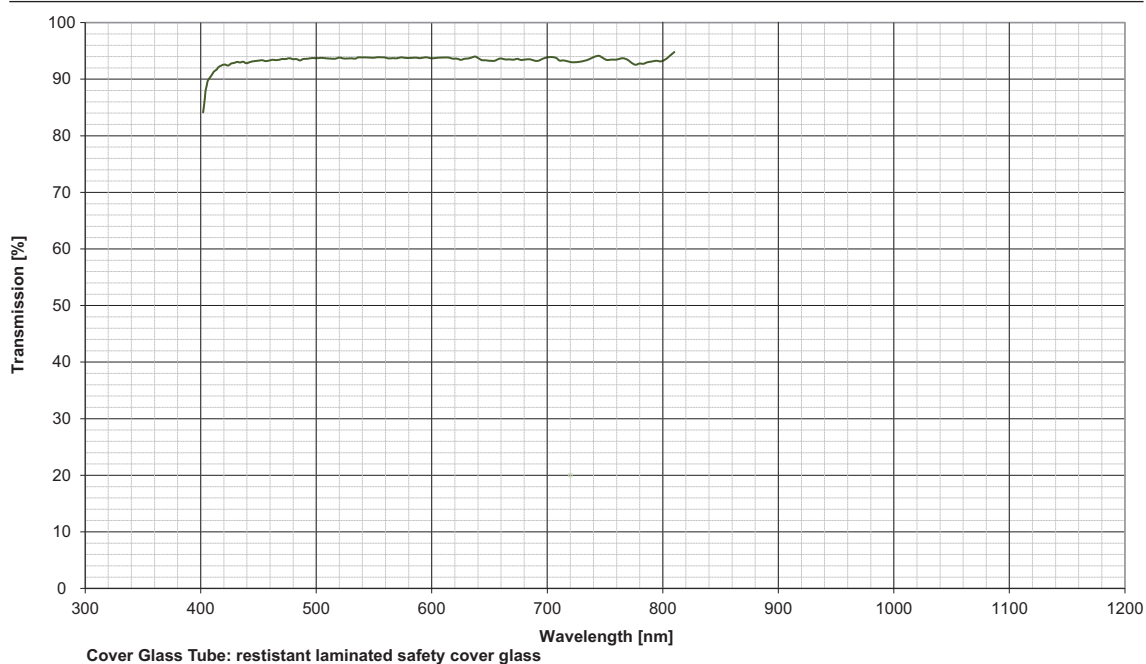

Tube cover glass: hardened, scratch-resistant laminated safety glass with heat-reflective finish

The cover glass is made of scratch-resistant single-pane glass with heat-reflective finish. This way it is ideal as lens and camera protection near sources of heat.

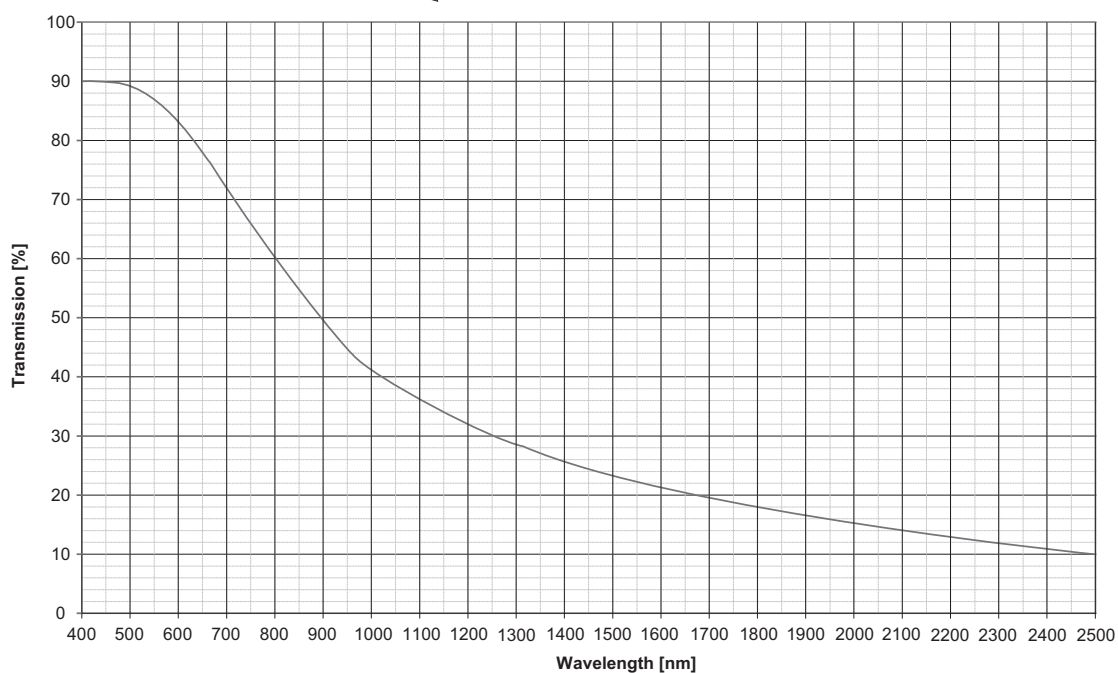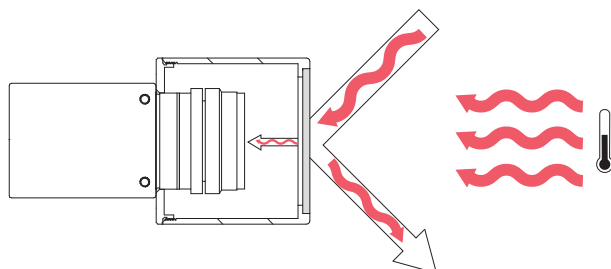


hardened scratch-resistant Corning® Gorilla® glass (generation 3), equipped with heat-reflective coating

6.2.3 Spectral sensitivity


The following diagrams show the spectral sensitivity characteristics for this camera series. The characteristic curves for the sensors do not take the characteristics of lenses and light sources without filters into consideration.

The values refer to the related data sheets.

Cameras

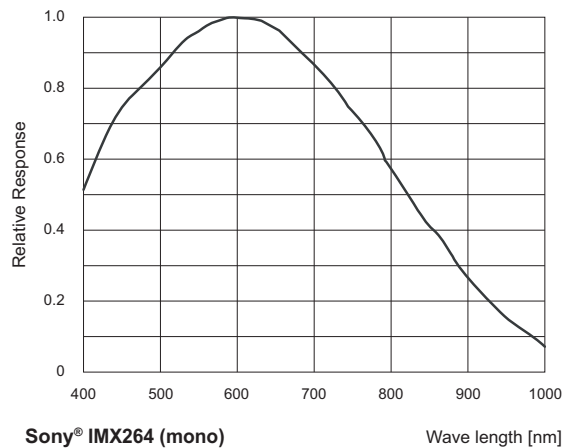

Spectral sensitivity VCXG.2-51M.XC
(Sony® IMX264)


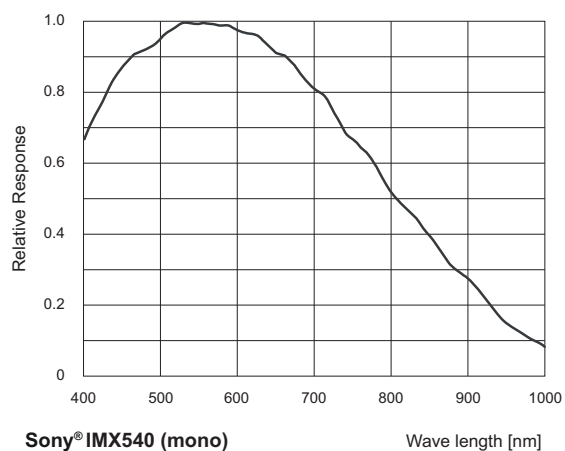


Spectral sensitivity VCXG.2-241M.XC
(Sony® IMX540)

6.3 VCXG.2.I

6.3.1 Sensor position accuracy

Typical precision under assumption of the average square root value is shown in the figure and table(s) below.

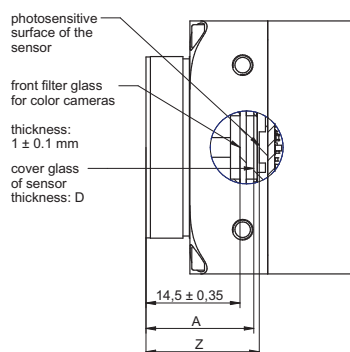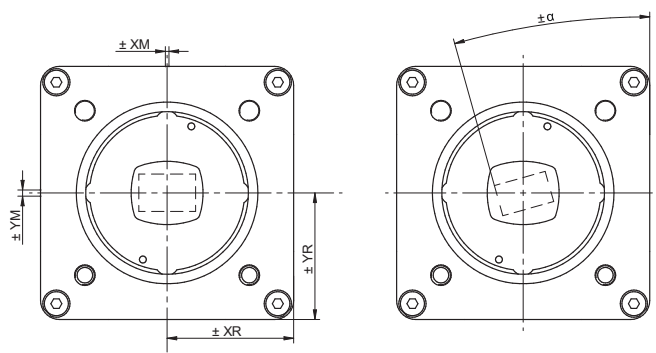

Camera type	± xM [mm]	± yM [mm]	± xR [mm]	± yR [mm]	z***typ [mm]	± αtyp [°]	A*** [mm]	D** [mm]
VCXG.2-15.I*	0.07	0.07	0.07	0.07	17.63 ± 0.070	0.6	16.4	0.70
VCXG.2-32.I*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-51.I*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXG.2-57.I*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	16.5	0.50
VCXG.2-82.I*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-127.I*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXG.2-201.I*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50
VCXG.2-241.I*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50


typical accuracy by assumption of the root mean square value

* C or M

** Dimension D in this table is from manufacturer datasheet

*** For color add 0.35 mm to nominal value


6.3.2 Filter glass (color cameras)

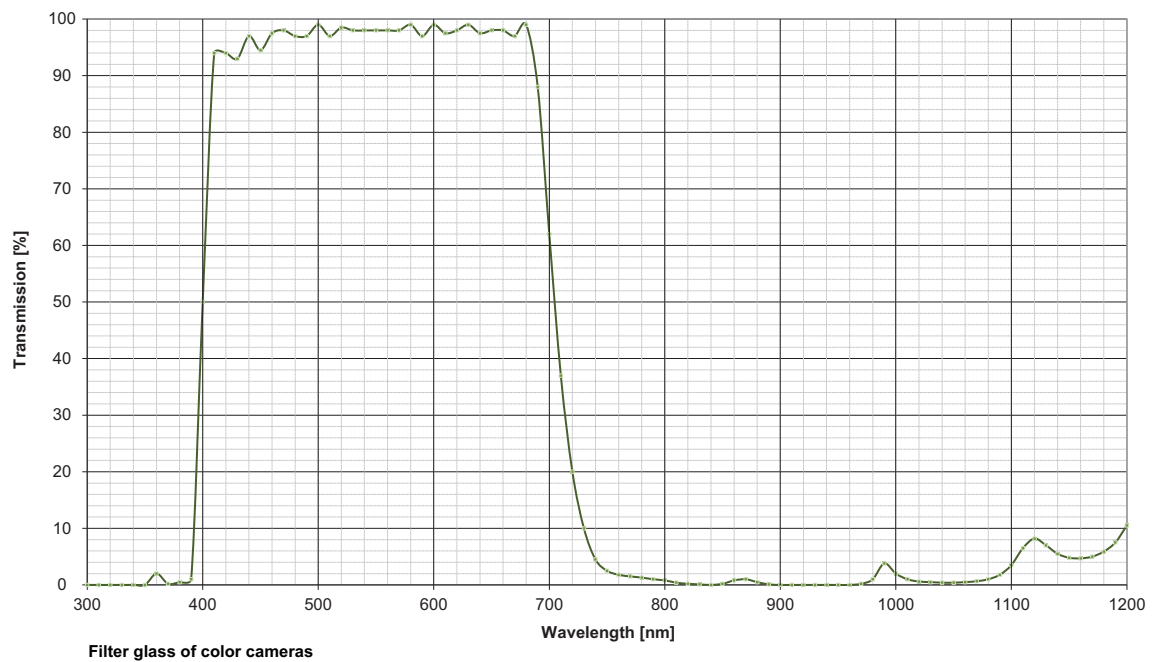

6.3.3 Cover glasses Tubes

Tube cover glass Acrylic

Acrylic (PMMA) with very good price-performance ratio is used in most applications. It provides high transmission and therefore is used as protective lens cover.

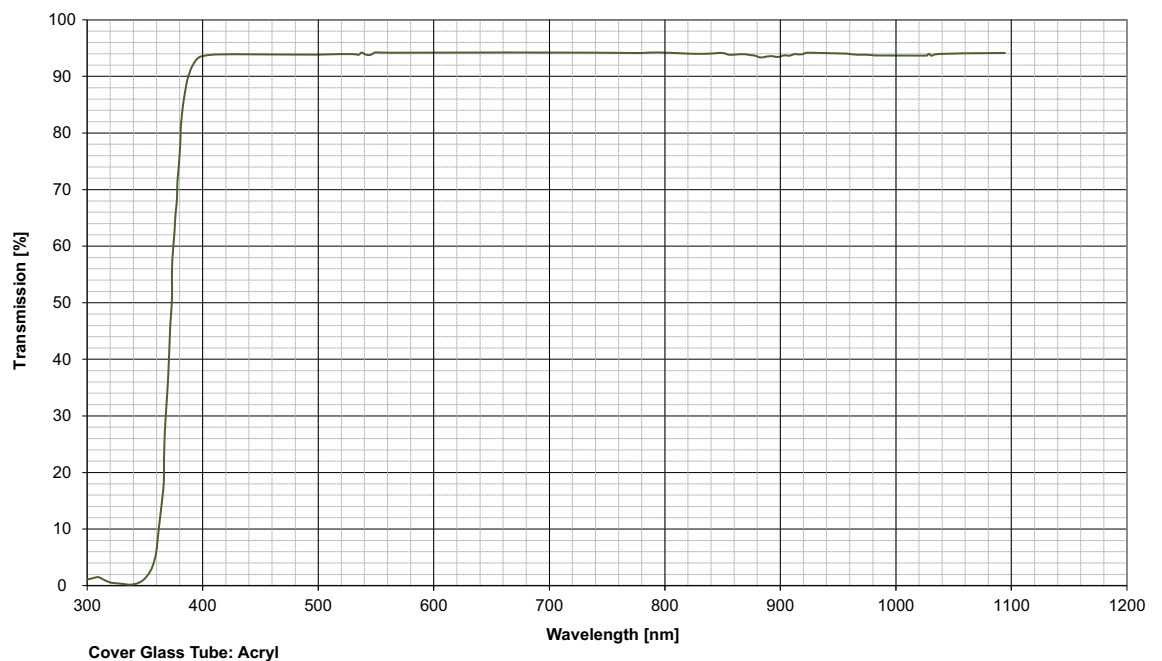


Tube cover glass: hardened, scratch-resistant laminated safety glass

The laminated safety glass comprises two panes Corning® Gorilla® glass (Generation 3), with thickness 0.7 mm and bonded to 0.38 mm PVB film. This is why the glass is scratch-resistant and unbreakable. The glass is used for areas where high crack resilience is required, e.g. in the food industry.. In the event of break, the film will prevent any glass fragments from falling down. Thanks to its high scratch resistance, the glass is very durable and withstands many cleaning cycles.





INFO

For reason of production technology, the glass comes with a slightly wavy surface. Please take this into account in the events of high requirements on precision (e.g. when applied in measuring operations).

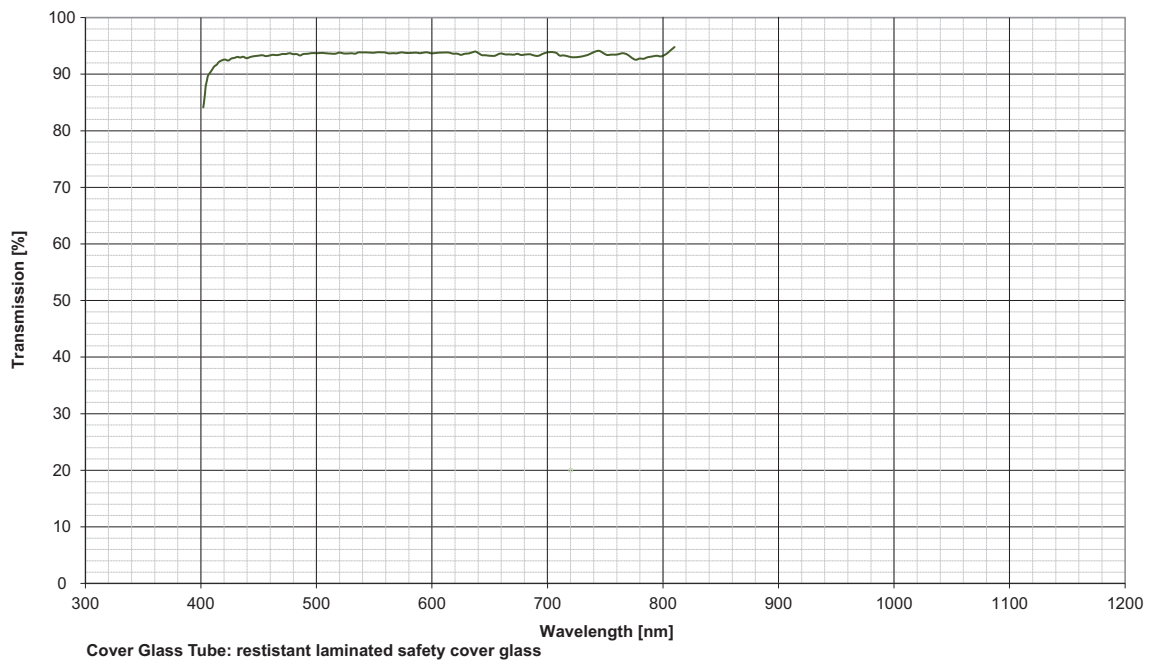

Tube cover glass: hardened, scratch-resistant laminated safety glass with heat-reflective finish

The cover glass is made of scratch-resistant single-pane glass with heat-reflective finish. This way it is ideal as lens and camera protection near sources of heat.

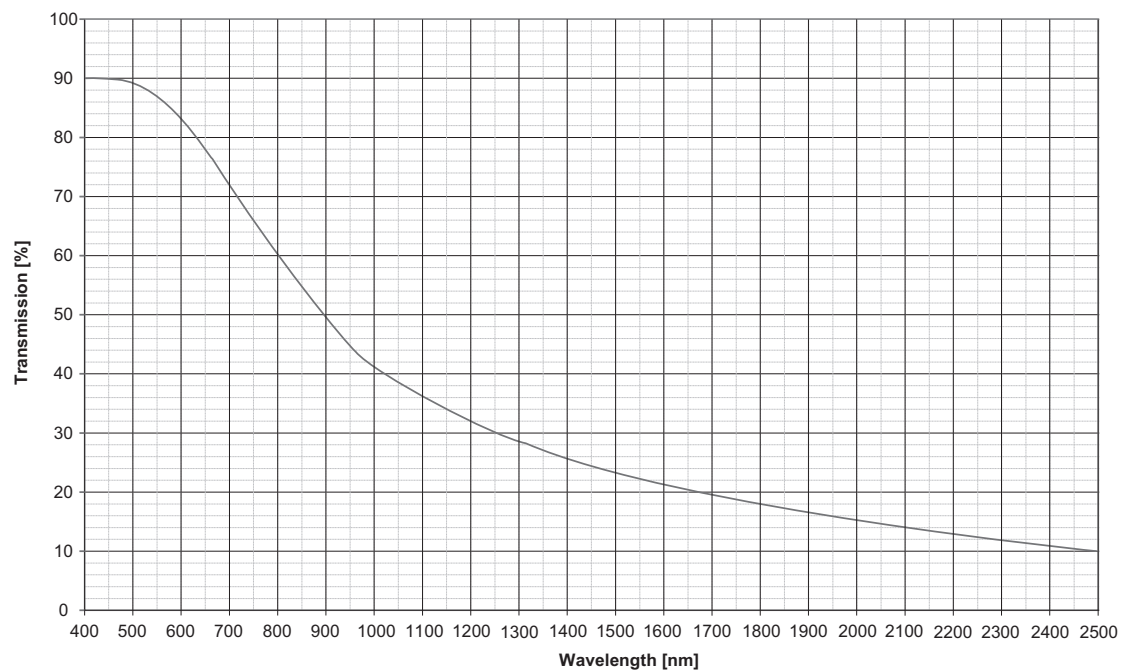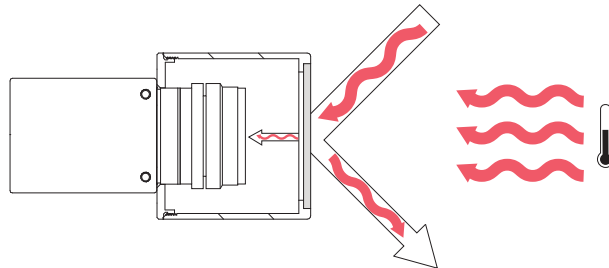


hardened scratch-resistant Corning® Gorilla® glass (generation 3), equipped with heat-reflective coating

6.3.4 Spectral sensitivity

The following diagrams show the spectral sensitivity characteristics for this camera series. The characteristic curves for the sensors do not take the characteristics of lenses and light sources without filters into consideration.

The values refer to the related data sheets.


Cameras

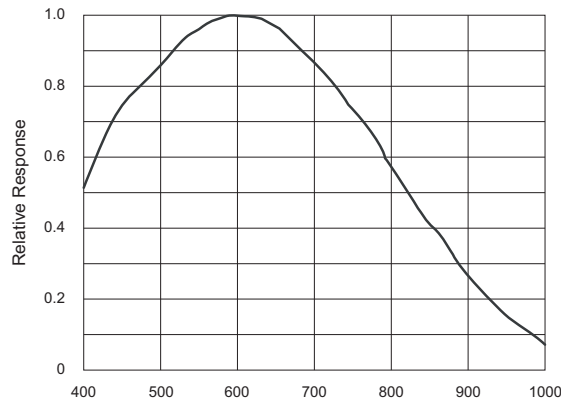

Sony® IMX273 (mono)

Wave length [nm]


Spectral sensitivity VCXG.2-15M.I
(Sony® IMX273)

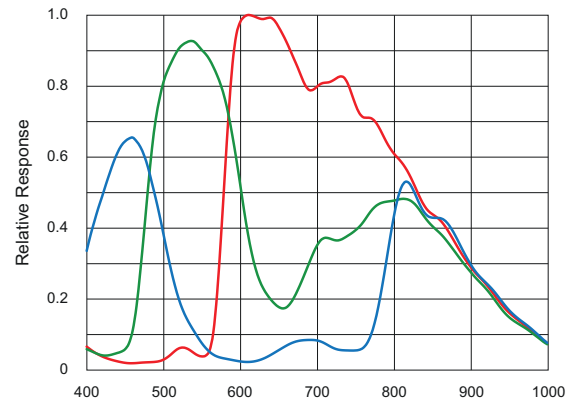

Sony® IMX 273 mono

Wave Length [nm]


Spectral sensitivity VCXG.2-15C.I
(Sony® IMX273)

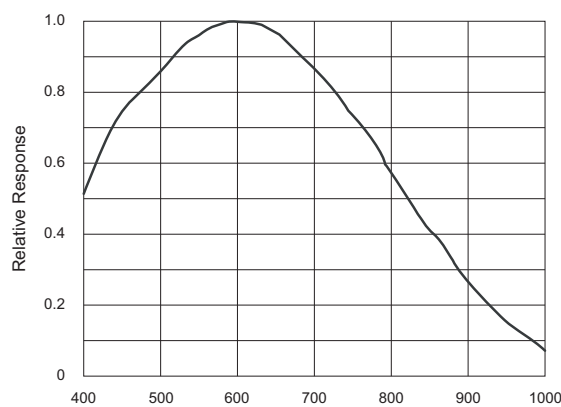

Sony® IMX265 (mono)

Wave length [nm]


Spectral sensitivity VCXG.2-32M.I
(Sony® IMX265)

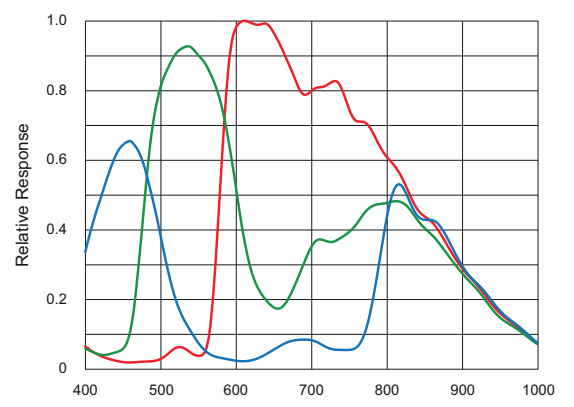


Sony® IMX 265 color

Wave Length [nm]


Spectral sensitivity VCXG.2-32C.I
(Sony® IMX265)

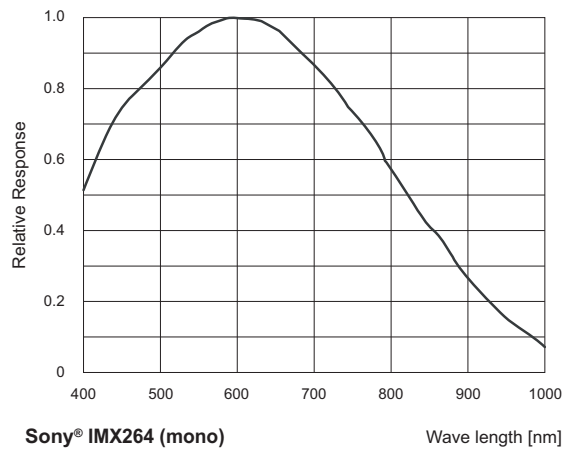


Spectral sensitivity VCXG.2-51M.I
(Sony® IMX264)

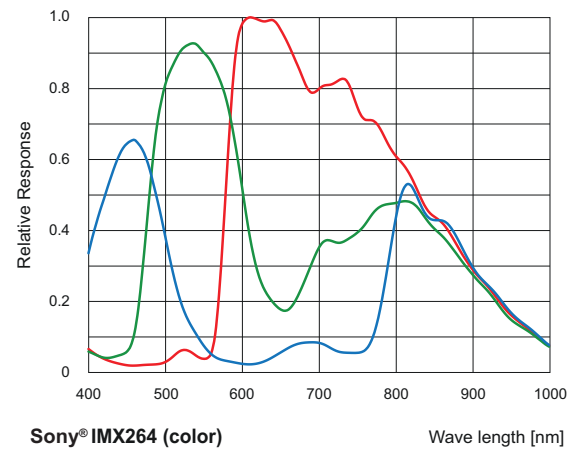


Spectral sensitivity VCXG.2-51C.I
(Sony® IMX264)

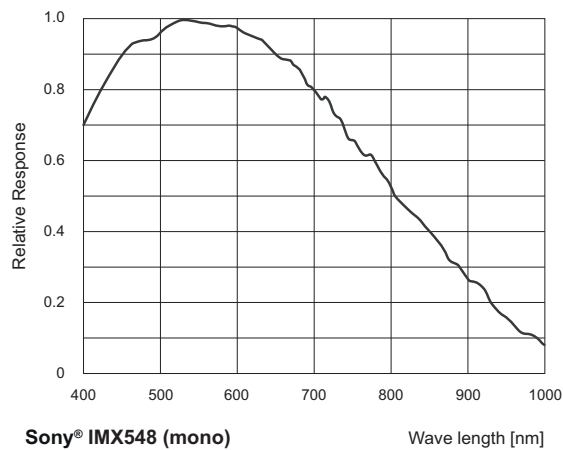


Spectral sensitivity VCXG.2-57M.I
(Sony® IMX548)

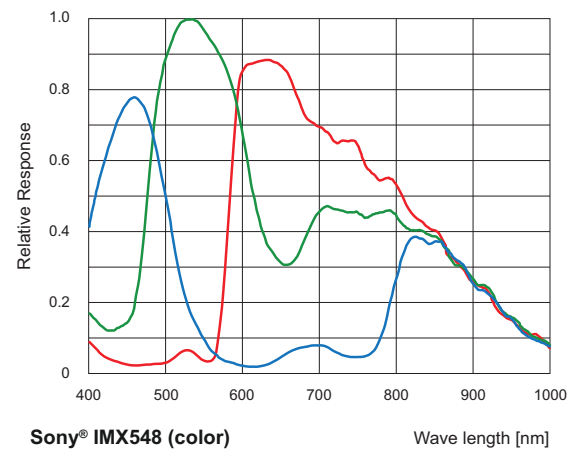


Spectral sensitivity VCXG.2-57C.I
(Sony® IMX548)

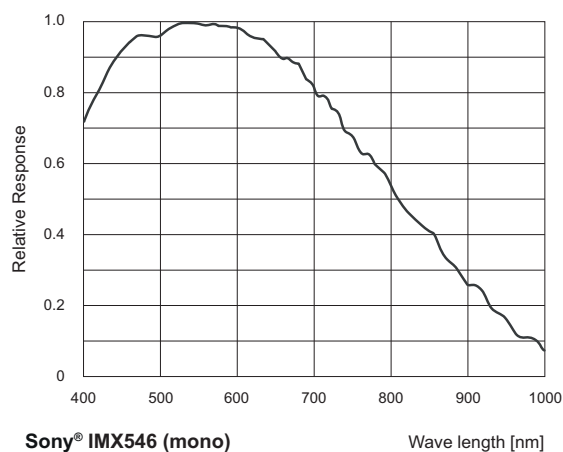


Spectral sensitivity VCXG.2-82M.I
(Sony® IMX546)

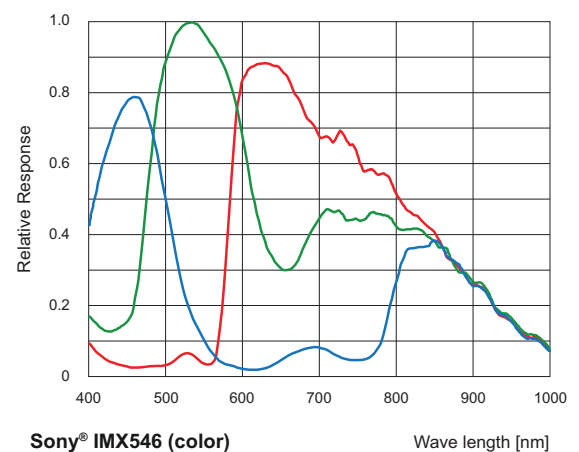


Spectral sensitivity VCXG.2-82C.I
(Sony® IMX546)

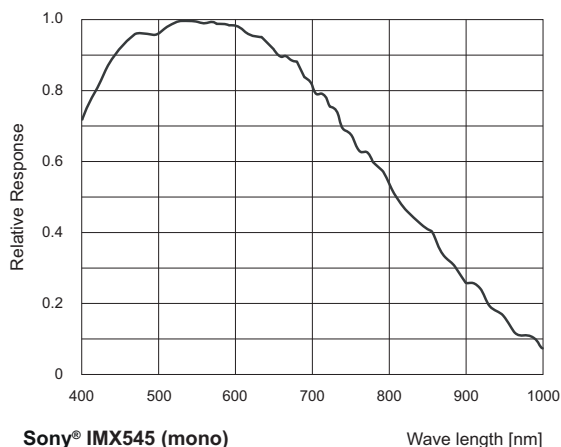


Spectral sensitivity VCXG.2-127M.I
(Sony® IMX545)

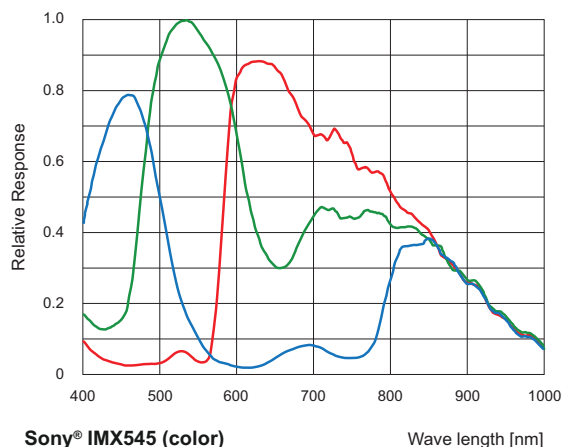


Spectral sensitivity VCXG.2-127C.I
(Sony® IMX545)

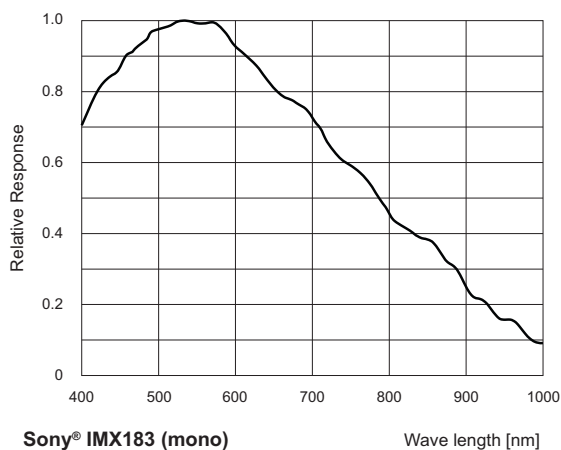


Spectral sensitivity VCXG.2-201M.R.I
(Sony® IMX183)

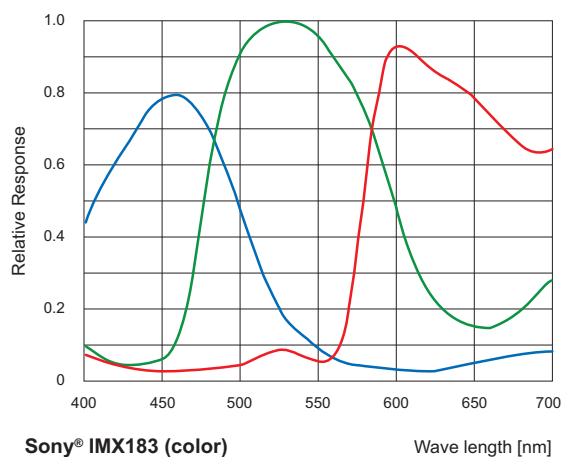

Spectral sensitivity VCXG.2-201C.R.I
(Sony® IMX183)

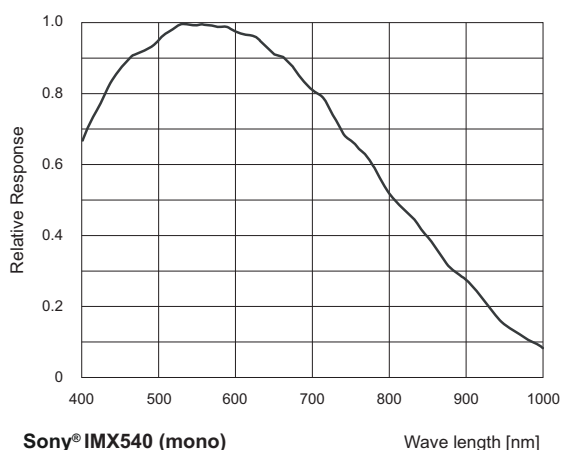

Spectral sensitivity VCXG.2-241M.I
(Sony® IMX540)


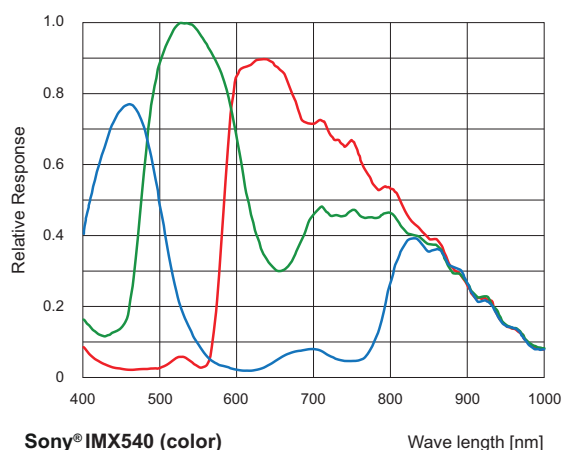


Spectral sensitivity VCXG.2-241C.I
(Sony® IMX540)

6.4 VCXU.2

6.4.1 Sensor position accuracy

Typical precision under assumption of the average square root value is shown in the figure and table(s) below.

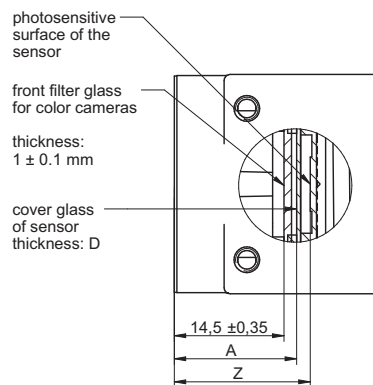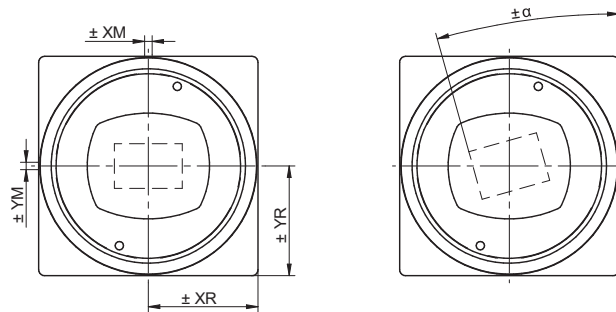

Camera type	± xM [mm]	± yM [mm]	± xR [mm]	± YR [mm]	z***typ [mm]	± αtyp [°]	A*** [mm]	D** [mm]
VCXU.2-13*	0.05	0.05	0.05	0.05	17.55 ± 0.100	0.6	16.6	0.55
VCXU.2-15*	0.07	0.07	0.07	0.07	17.63 ± 0.070	0.6	16.4	0.70
VCXU.2-31*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXU.2-32*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXU.2-50*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXU.2-51*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXU.2-57*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	16.4	0.50
VCXU.2-65*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	16.4	0.50
VCXU.2-123*	0.17	0.17	0.17	0.17	17.63 ± 0.070	0.6	16.5	0.70
VCXU.2-127*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.4	15.8	0.50
VCXU.2-201*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50
VCXU.2-241*	0.06	0.06	0.06	0.06	17.63 ± 0.070	0.6	15.8	0.50


typical accuracy by assumption of the root mean square value

* C or M

** Dimension D in this table is from manufacturer datasheet

*** For color add 0.35 mm to nominal value

6.4.2 Filter glass (color cameras)

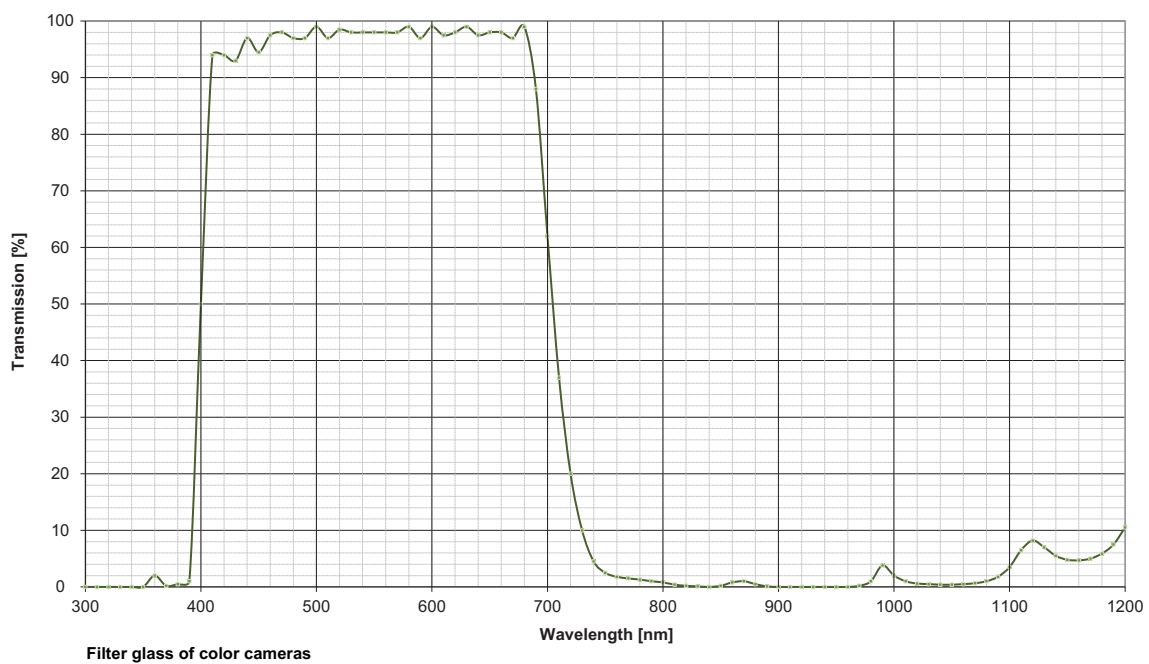


6.4.3 Spectral sensitivity


The following diagrams show the spectral sensitivity characteristics for this camera series. The characteristic curves for the sensors do not take the characteristics of lenses and light sources without filters into consideration.

The values refer to the related data sheets.


Cameras

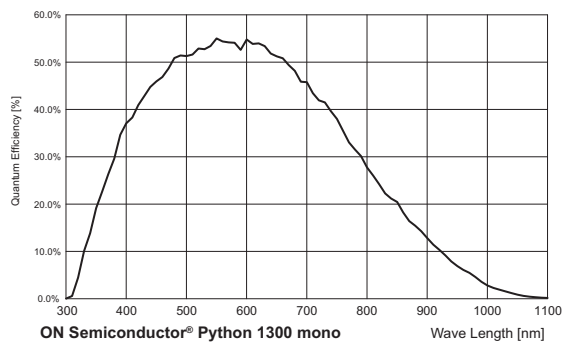


Spectral sensitivity VCXU.2-13M
(PYTHON1300)

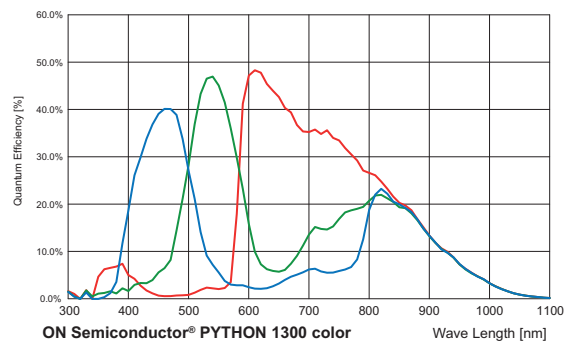


Spectral sensitivity VCXU.2-13C
(PYTHON1300)

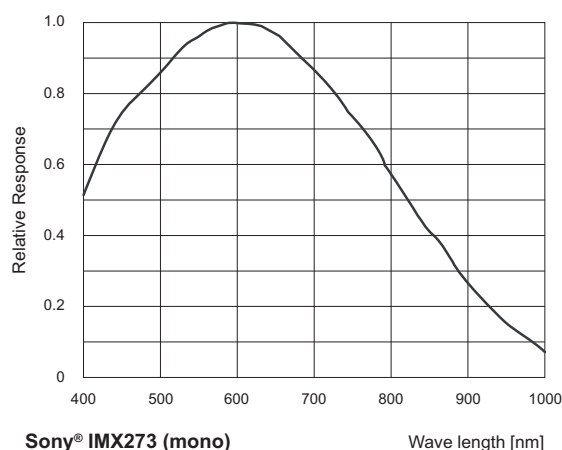


Spectral sensitivity VCXU.2-15M
(Sony® IMX273)

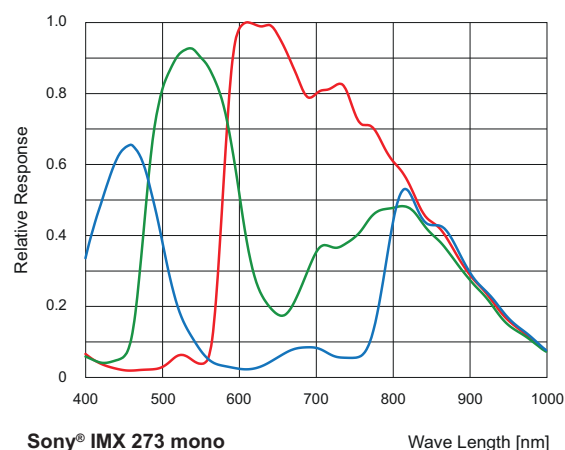


Spectral sensitivity VCXU.2-15C
(Sony® IMX273)

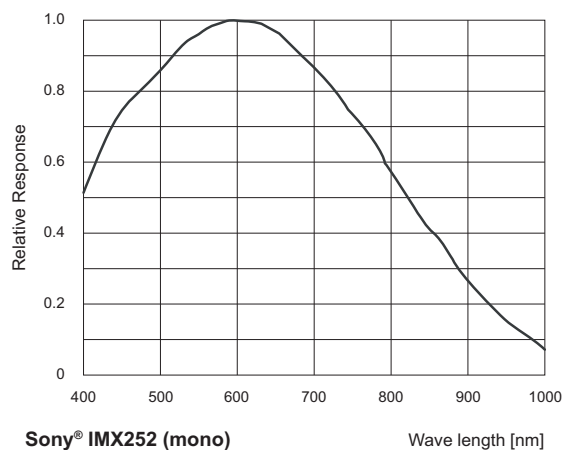

Spectral sensitivity VCXU.2-31M
(Sony® IMX252)

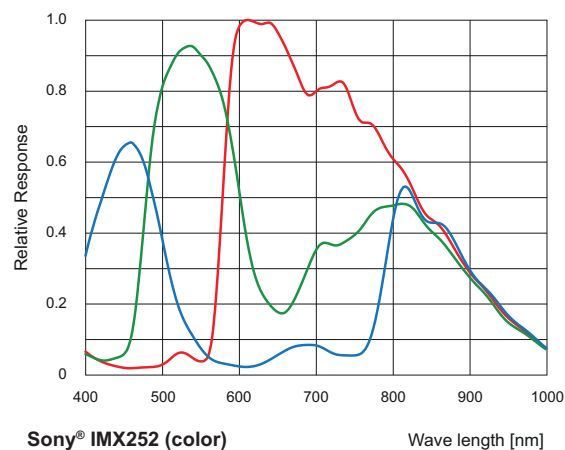


Spectral sensitivity VCXU.2-31C
(Sony® IMX252)

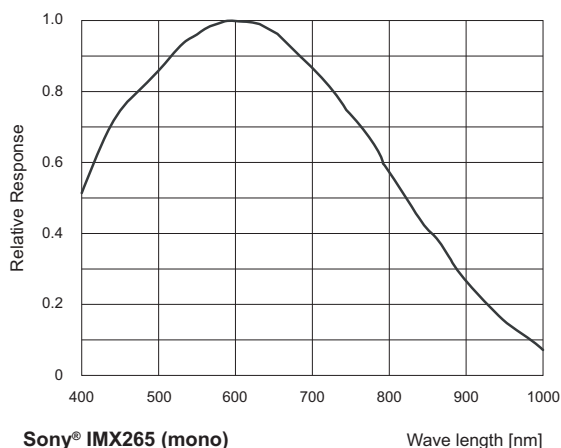


Sony® IMX265 (mono)

Spectral sensitivity VCXU.2-32M
(Sony® IMX265)

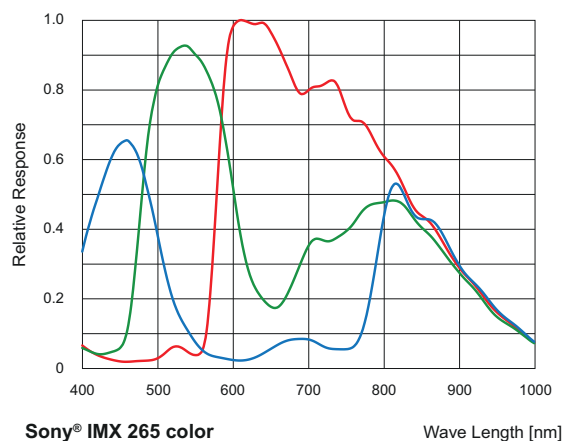


Sony® IMX 265 color

Spectral sensitivity VCXU.2-32C
(Sony® IMX265)

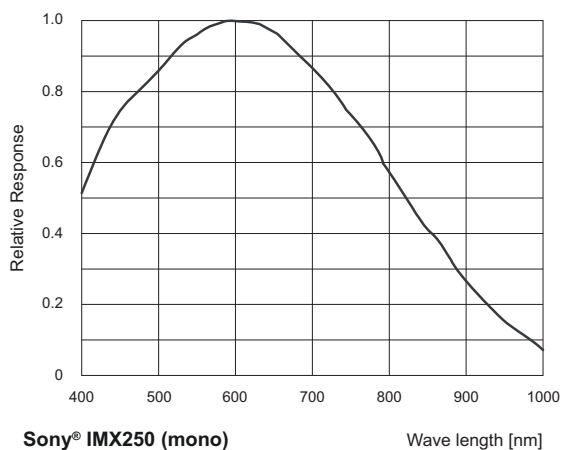


Sony® IMX250 (mono)

Spectral sensitivity VCXU.2-50M
(Sony® IMX250)

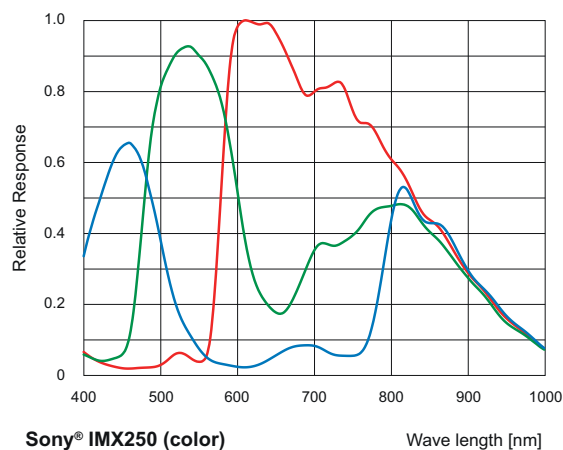


Sony® IMX250 (color)

Spectral sensitivity VCXU.2-50C
(Sony® IMX250)

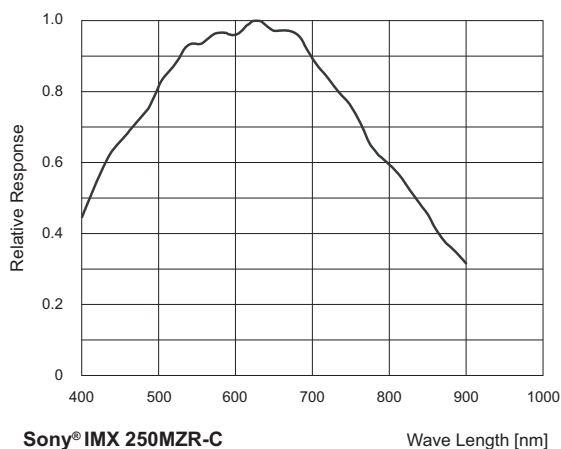


Sony® IMX 250MZR-C


Spectral sensitivity VCXU.2-50MP
(Sony® IMX250MZR-C)

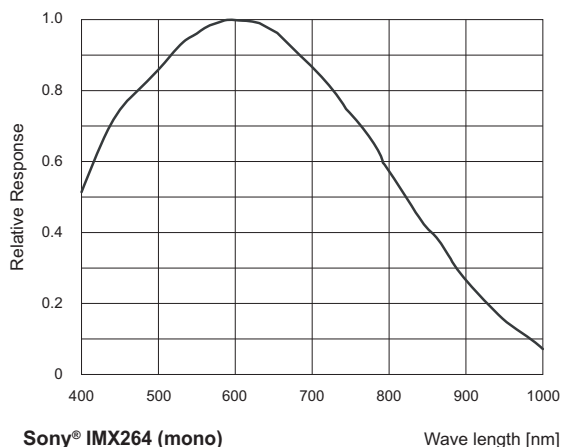


Spectral sensitivity VCXU.2-51M
(Sony® IMX264)

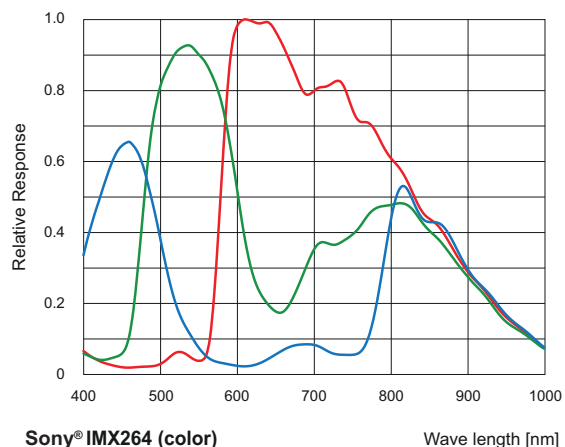


Spectral sensitivity VCXU.2-51C
(Sony® IMX264)

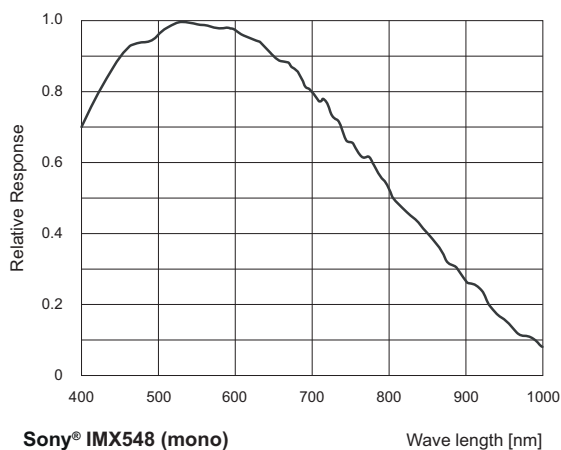


Spectral sensitivity VCXU.2-57M
(Sony® IMX548)

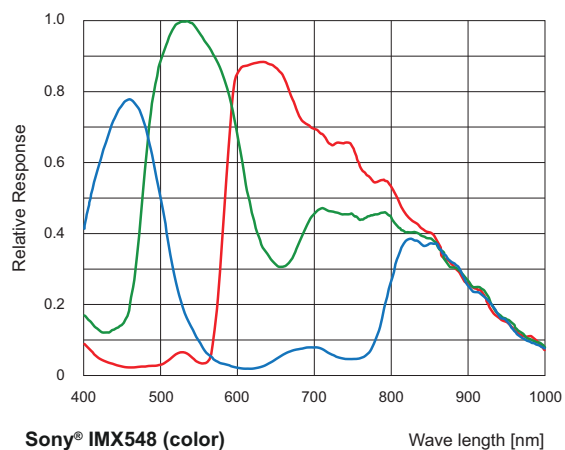


Spectral sensitivity VCXU.2-57C
(Sony® IMX548)

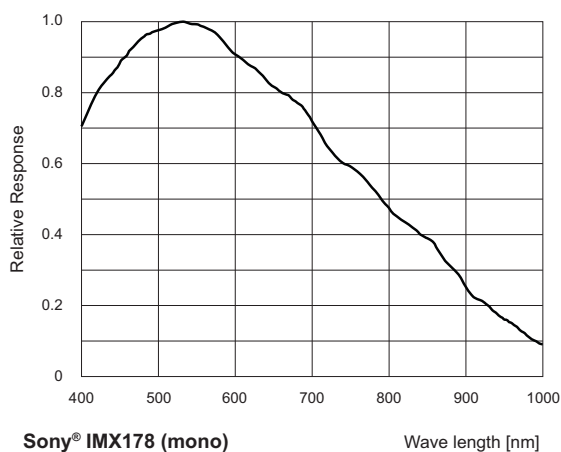


Spectral sensitivity VCXU.2-65M.R
(Sony® IMX178)

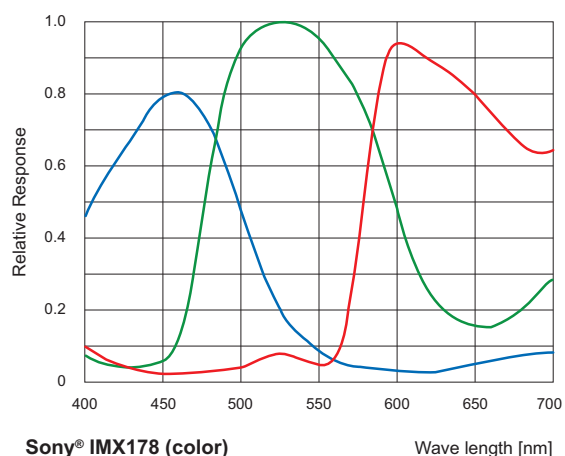


Spectral sensitivity VCXU.2-65C.R
(Sony® IMX178)

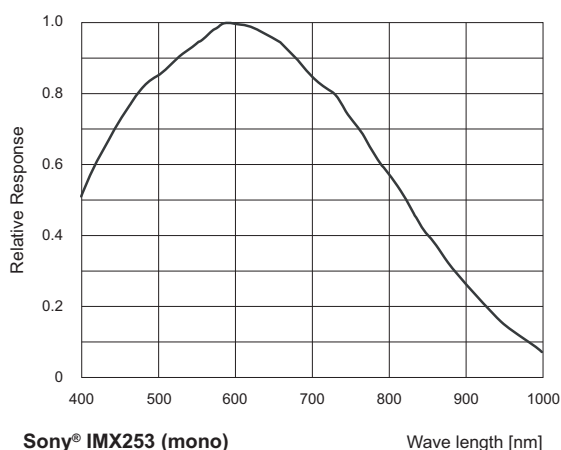


Spectral sensitivity VCXU.2-123M
(Sony® IMX253)

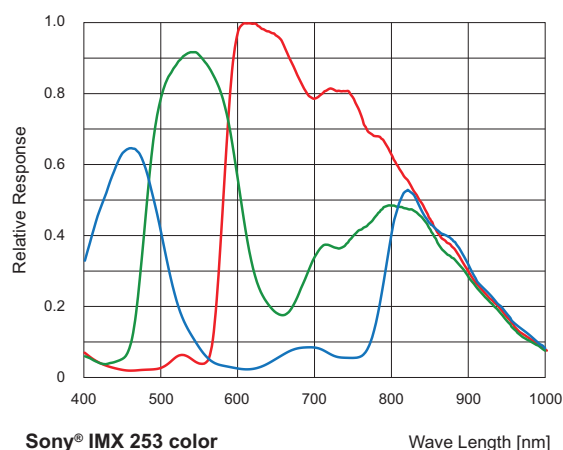


Spectral sensitivity VCXU.2-123C
(Sony® IMX253)

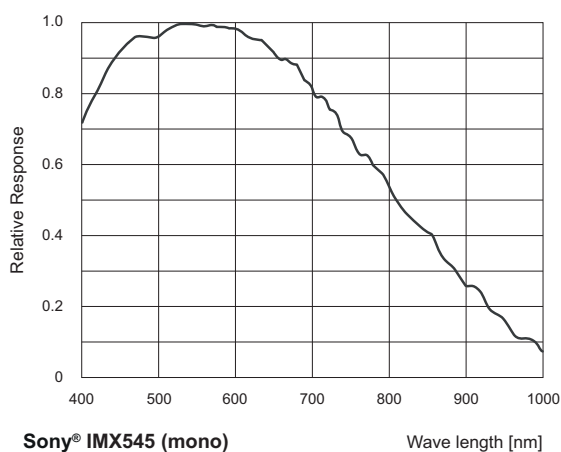


Spectral sensitivity VCXU.2-127M
(Sony® IMX545)

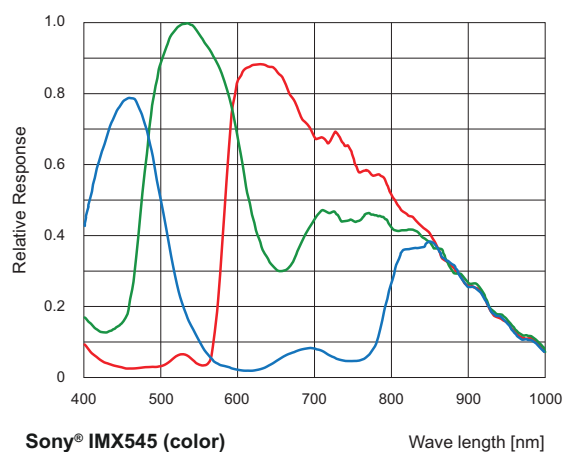


Spectral sensitivity VCXU.2-127C
(Sony® IMX545)

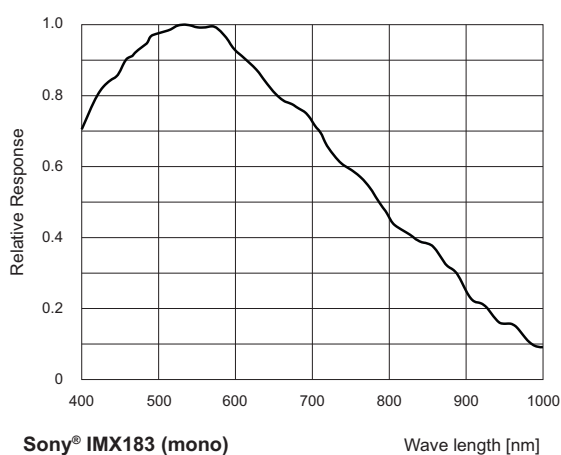


Spectral sensitivity VCXU.2-201M.R
(Sony® IMX183)

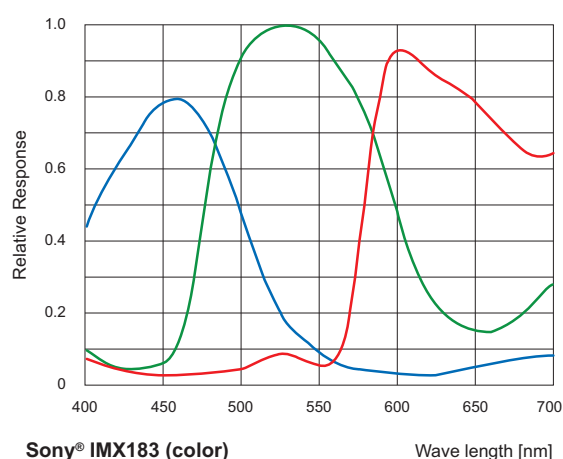

Spectral sensitivity VCXU.2-201C.R
(Sony® IMX183)

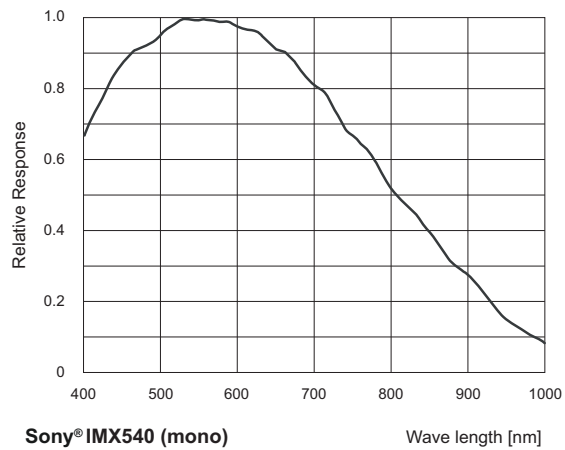

Spectral sensitivity VCXU.2-241M
(Sony® IMX540)

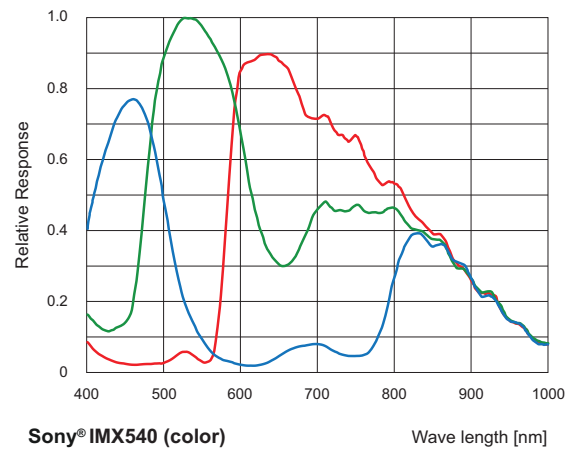

Spectral sensitivity VCXU.2-241C
(Sony® IMX540)

7 Electrical installation

7.1 General instructions for electric installation

NOTICE

Device damage due to faulty power supply.

The device can be damaged due to faulty power supply.

- a) Operate the device only with protected low voltage and safe electrical isolation of protection class III.

NOTICE

Device damage or unintended operation due to work on live parts.

Any wiring work on live parts may lead to unintentional operation.

- a) Prior to performing any wiring work disconnect power supply.
- b) Only connect or disconnect any terminals when not live.

NOTICE

Device damage or unwanted operation caused by voltage fluctuation

Only connect the device to internal networks without exposure to voltage in the telecommunications network.



INFO

Class 2 according to NEC / protection class III

The devices are designed for being supplied by an isolated power source with limited power according to UL61010-1, 3rd ed cl. 9.4 or a current source with limited power according to UL60950-1 or Class 2 according to NEC.

NOTICE

Functional errors in residential areas.

Devices of EMC Class A may cause interference in residential areas.

- a) The user must take appropriate measures.

NOTICE

EMC measures for long cable runs

Typically, cameras are deployed in applications with long cable runs of less than 30 m. Longer cable runs may require additional EMC measures.




DANGER

Risk of electric shock.

Electric shock can cause fatal or serious injury.

- a) Use in damp environments requires IP67 protection.
- b) Use only permitted if compliant to pollution degree 2 and overvoltage category 2.
- c) Connectors must comply with the IEC 61076-2-101 standard. Dielectric strength and that of the connector/mating connector combination must be tested at 60 V in accordance with DIN EN 60664-1:2008-01.

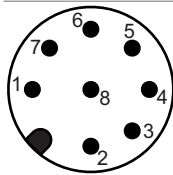7.2**VCXG.2****7.2.1****Pin assignment****Power supply / Digital IO**


1	GPIO (Line2)	2	Power V _{CC} (12 ... 24 VDC ± 20%)
3	IN1 (Line0)	4	GND IN1
5	Power V _{CC} (OUT1)	6	OUT1 (Line3)
7	GND (Power, GPIO)	8	GPIO (Line1)

Power supply

Power Vcc	12 V ... 24 V (± 20%) (Power consumption: max. 4.2 W)
-----------	--

Cable core colors (cable not included in delivery)

1	WH – White	2	BN – Brown
3	GN – Green	4	YE – Yellow
5	GY – Grey	6	PK – Pink
7	BU – Blue	8	RD – Red

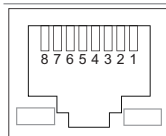Ethernet interface

1	MX1+	2	MX1-
3	MX2+	4	MX3+
5	MX3-	6	MX2-
7	MX4+	8	MX4-

**NOTICE****Power supply via PoE and digital IO connection**

The camera supports power supply via PoE (Power over Ethernet) IEEE 802.3af Clause 33, 48V.

Parallel power supply via Ethernet interface and digital IO port is subject to deviations and tolerances. These might damage the camera.

- a) Only use a single form of power supply!

NOTICE**Damage caused by incorrect tightening torque**


Tighten connector for power supply / digital IO at a torque of 0.2 Nm. Appropriate tools are available from Baumer.

NOTICE**Ethernet interface damaged by inappropriate connectors**

The camera features TYPE090 Ethernet interface. Using any other connector than TYPE090 could damage the connection.

- a) Only use cables with TYPE090 connector.

"The TYPE090 connector is recommended for new designs."
 (GigE Vision® Mechanical Supplement v1.0)

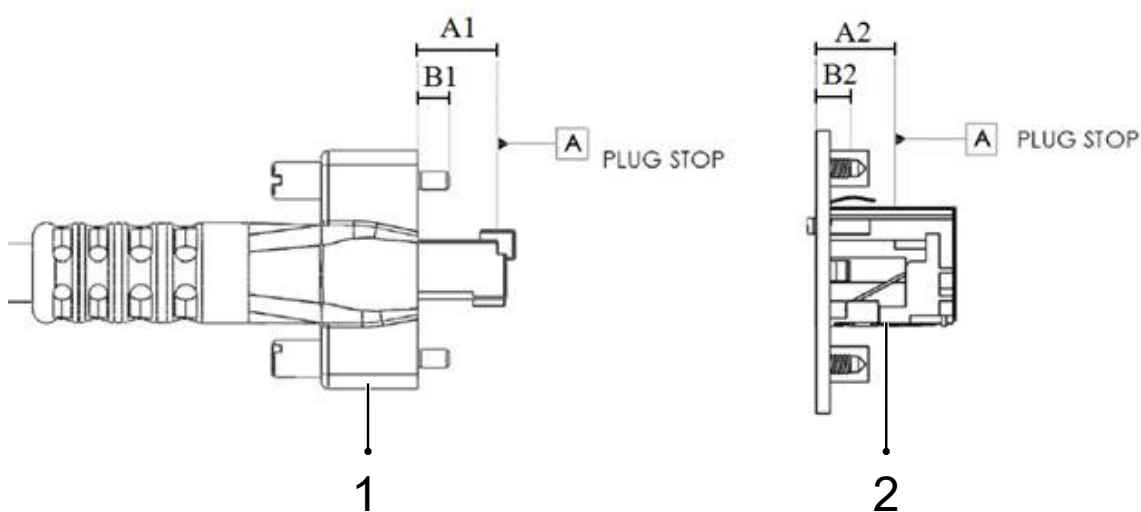

Ground connection (1)


	TYPE090	TYPE110 (Do not use!)
A1	9.0 mm (-0.50 + 0.00)	11.0 mm (-0.47 + 0.00)
B1	4.25 mm (-1.00 + 0.25)	4.25 mm (-1.00 + 0.25)

Ground female connector (2)

	TYPE090
A2	9.0 mm (-0.00 + 1.00)
B2	4.5 mm (-0.00 + 1)

7.2.2

Digital IO

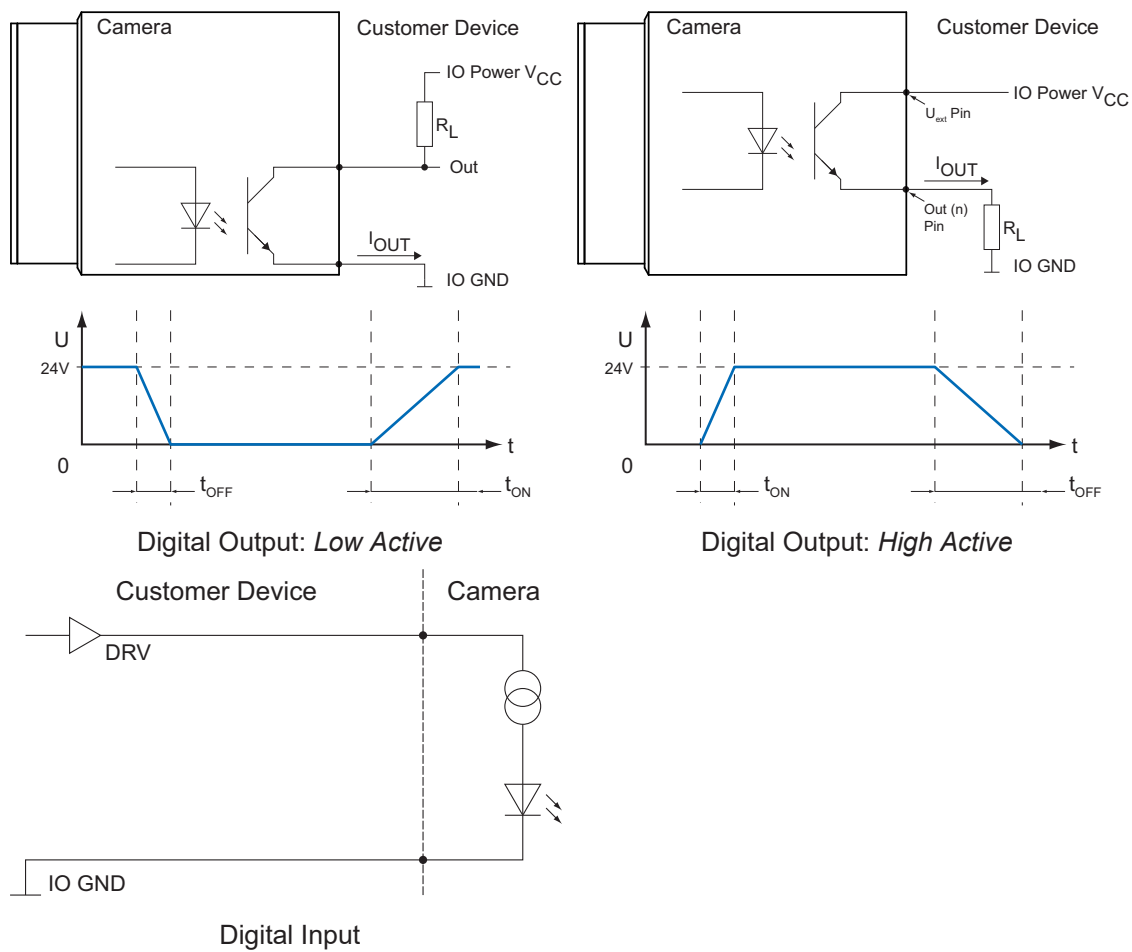

7.2.3 GPIO (General Purpose Input / Output)

Line1 and *Line2* are GPIOs and can be both *Input* and *Output*.

Input: (0 ... 0.8 V low, 2.0 ... 3.0 V high).

Output: (0 ... 0.4 V low, 2.4 ... 3.3 V high), @ 1 mA load (high) / 50 mA sink (low)



NOTICE


Overvoltage, undervoltage or inverted polarity can result in defect!


General Purpose IOs (GPIOs) are not potential-free and do not feature overvoltage power off. Incorrect wiring, overvoltage, undervoltage or reverse polarity can damage the electronics.

GPIO power supply VCC: 3.3 V DC

Load resistance for TTL high level: approx. 2.7 kΩ

GPIO configuration is by default an in the camera as *Input*. They have to assigned to GPIO_GND if not used or configured as *Output*. Configuration as *Output* by default (saved in *User Set*) is feasible.

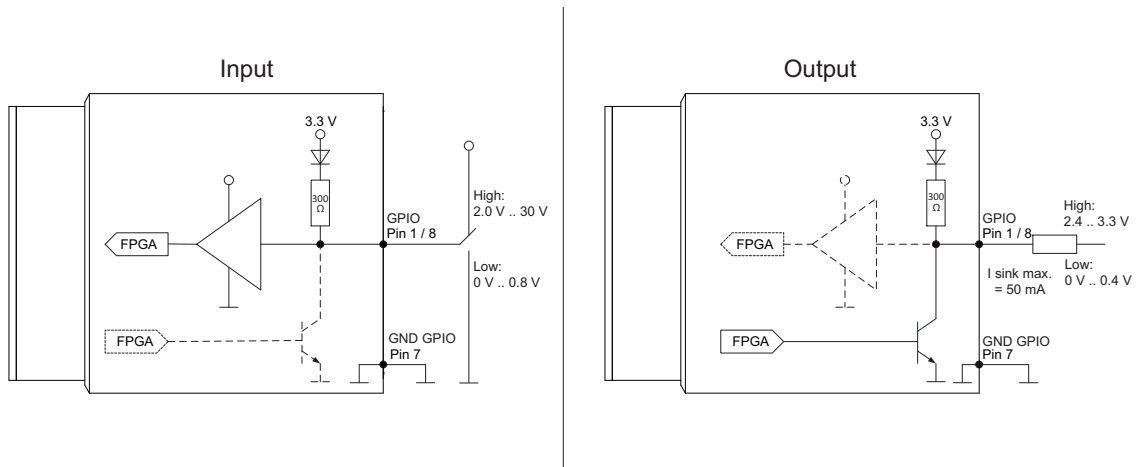

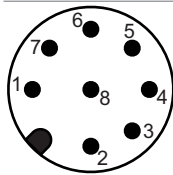7.3**VCXG.2.XC****7.3.1****Pin assignment****Power supply / Digital IO**


1	GPIO (Line2)	2	Power V _{CC} (12 ... 24 VDC ± 20%)
3	IN1 (Line0)	4	GND IN1
5	Power V _{CC} (OUT1)	6	OUT1 (Line3)
7	GND (Power, GPIO)	8	GPIO (Line1)

Power supply

Power V _{CC}	12 V ... 24 V (± 20%) (Power consumption: max. 4.2 W)
-----------------------	--

Cable core colors (cable not included in delivery)

1	WH – White	2	BN – Brown
3	GN – Green	4	YE – Yellow
5	GY – Grey	6	PK – Pink
7	BU – Blue	8	RD – Red

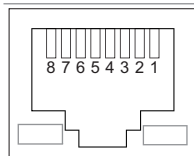Ethernet interface

1	MX1+	2	MX1-
3	MX2+	4	MX3+
5	MX3-	6	MX2-
7	MX4+	8	MX4-

**NOTICE****Power supply via PoE and digital IO connection**

The camera supports power supply via PoE (Power over Ethernet) IEEE 802.3af Clause 33, 48V.

Parallel power supply via Ethernet interface and digital IO port is subject to deviations and tolerances. These might damage the camera.

a) Only use a single form of power supply!

NOTICE**Damage caused by incorrect tightening torque**


Tighten connector for power supply / digital IO at a torque of 0.2 Nm. Appropriate tools are available from Baumer.

NOTICE**Ethernet interface damaged by inappropriate connectors**

The camera features TYPE090 Ethernet interface. Using any other connector than TYPE090 could damage the connection.

a) Only use cables with TYPE090 connector.

"The TYPE090 connector is recommended for new designs."
 (GigE Vision® Mechanical Supplement v1.0)

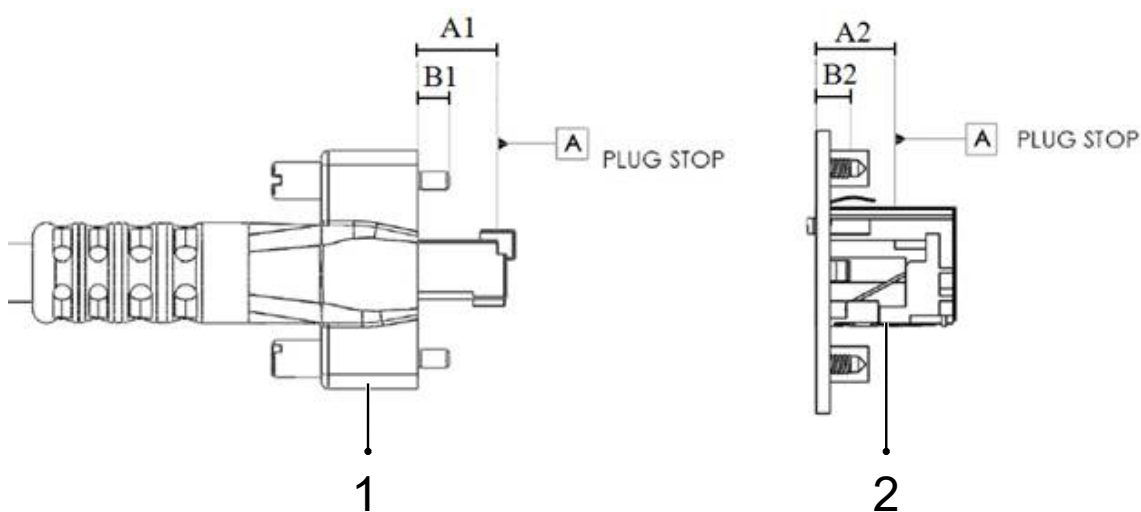

Ground connection (1)


	TYPE090	TYPE110 (Do not use!)
A1	9.0 mm (-0.50 + 0.00)	11.0 mm (-0.47 + 0.00)
B1	4.25 mm (-1.00 + 0.25)	4.25 mm (-1.00 + 0.25)

Ground female connector (2)

	TYPE090
A2	9.0 mm (-0.00 + 1.00)
B2	4.5 mm (-0.00 + 1)

7.3.2

Digital IO

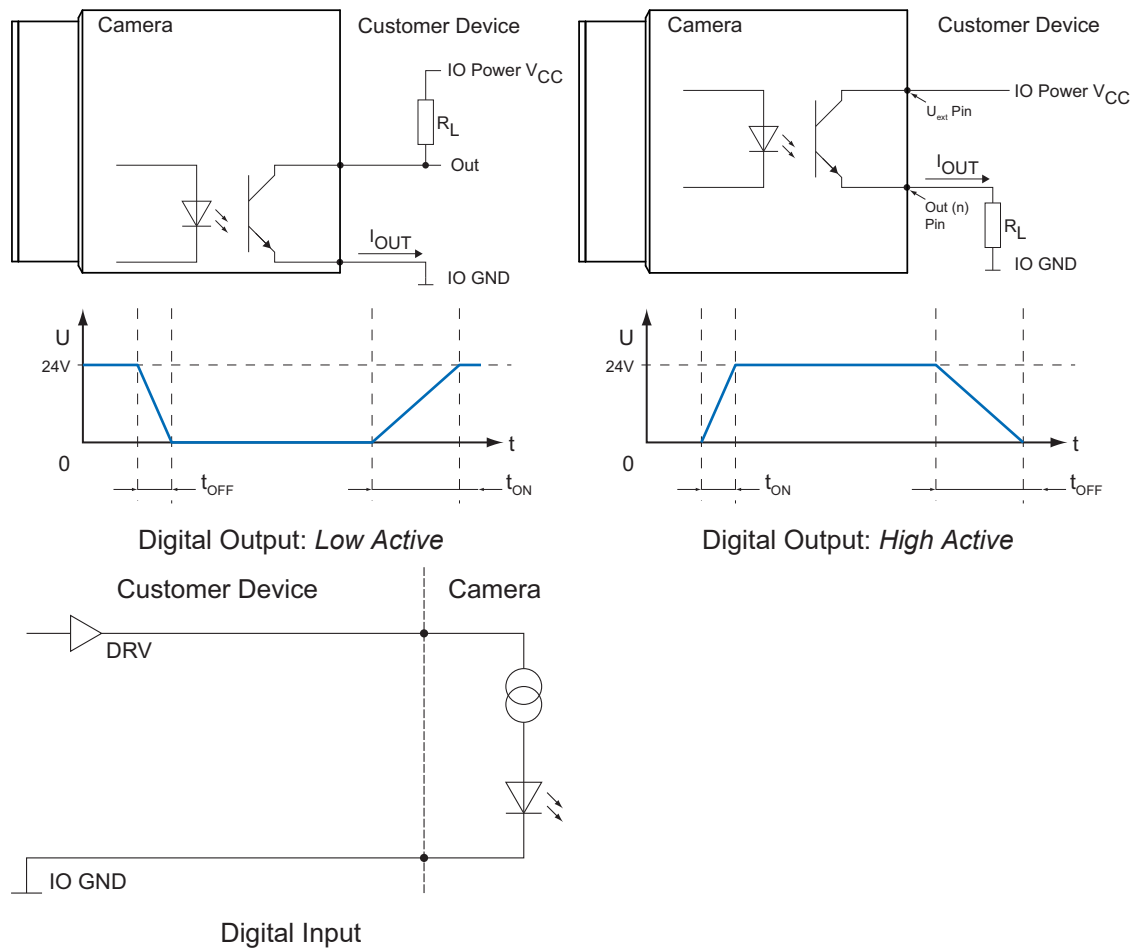

7.3.3 GPIO (General Purpose Input / Output)

Line1 and *Line2* are GPIOs and can be both *Input* and *Output*.

Input: (0 ... 0.8 V low, 2.0 ... 3.0 V high).

Output: (0 ... 0.4 V low, 2.4 ... 3.3 V high), @ 1 mA load (high) / 50 mA sink (low)



NOTICE


Overvoltage, undervoltage or inverted polarity can result in defect!


General Purpose IOs (GPIOs) are not potential-free and do not feature overvoltage power off. Incorrect wiring, overvoltage, undervoltage or reverse polarity can damage the electronics.

GPIO power supply VCC: 3.3 V DC

Load resistance for TTL high level: approx. 2.7 kΩ

GPIO configuration is by default an in the camera as *Input*. They have to assigned to GPIO_GND if not used or configured as *Output*. Configuration as *Output* by default (saved in *User Set*) is feasible.

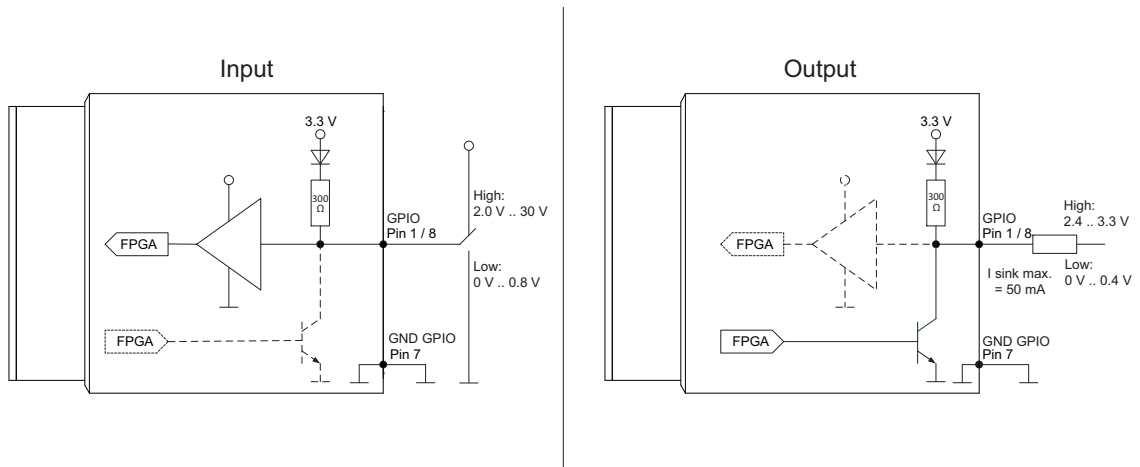

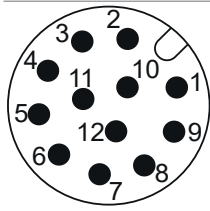7.4**VCXG.2.I****7.4.1****Pin assignment****Power supply / Digital IO**


1	Power V_{CC} (12 ... 24 VDC $\pm$ 20%)	2	GND (Power)
3	IN1 (Line0)	4	OUT1 (Line4)
5	IN2 (Line1)	6	OUT2 (Line5)
7	OUT3 (Line6)	8	IN3 (Line2)
9	OUT4 (Line7)	10	IN4 (Line3)
11	GND (IO)	12	Power (IO)

Power supply

Power V_{CC}	12 V ... 24 V ($\pm$ 20%) (Power consumption: max. 4.6 W)
Power (IO)	UL-compliant installation: 12 V (- 20 %) ... 24 V (+ 20 %) UL non-compliant installation: 12 V (- 20 %) ... 48 V (+ 10 %)

Cable core colors (cable not included in delivery)

1	BN – Brown	2	BU – Blue
3	WH – White	4	GN – Green
5	PK – Pink	6	YE – Yellow
7	BK – Black	8	GY – Grey
9	RD – Red	10	VT – Violet
11	GY-PK – Grey Pink	12	RD-BU – Red Blue

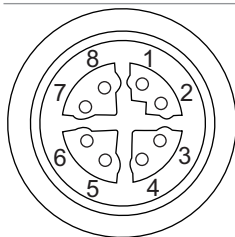Ethernet interface

1	MX1+	2	MX1-
3	MX2+	4	MX2-
5	MX4+	6	MX4-
7	MX3-	8	MX3+-


**NOTICE****Power supply via PoE and digital IO connection**


The camera supports power supply via PoE (Power over Ethernet) IEEE 802.3af Clause 33, 48V.

Parallel power supply via Ethernet interface and digital IO port is subject to deviations and tolerances. These might damage the camera.

a) Only use a single form of power supply!

7.4.2 Digital-IO

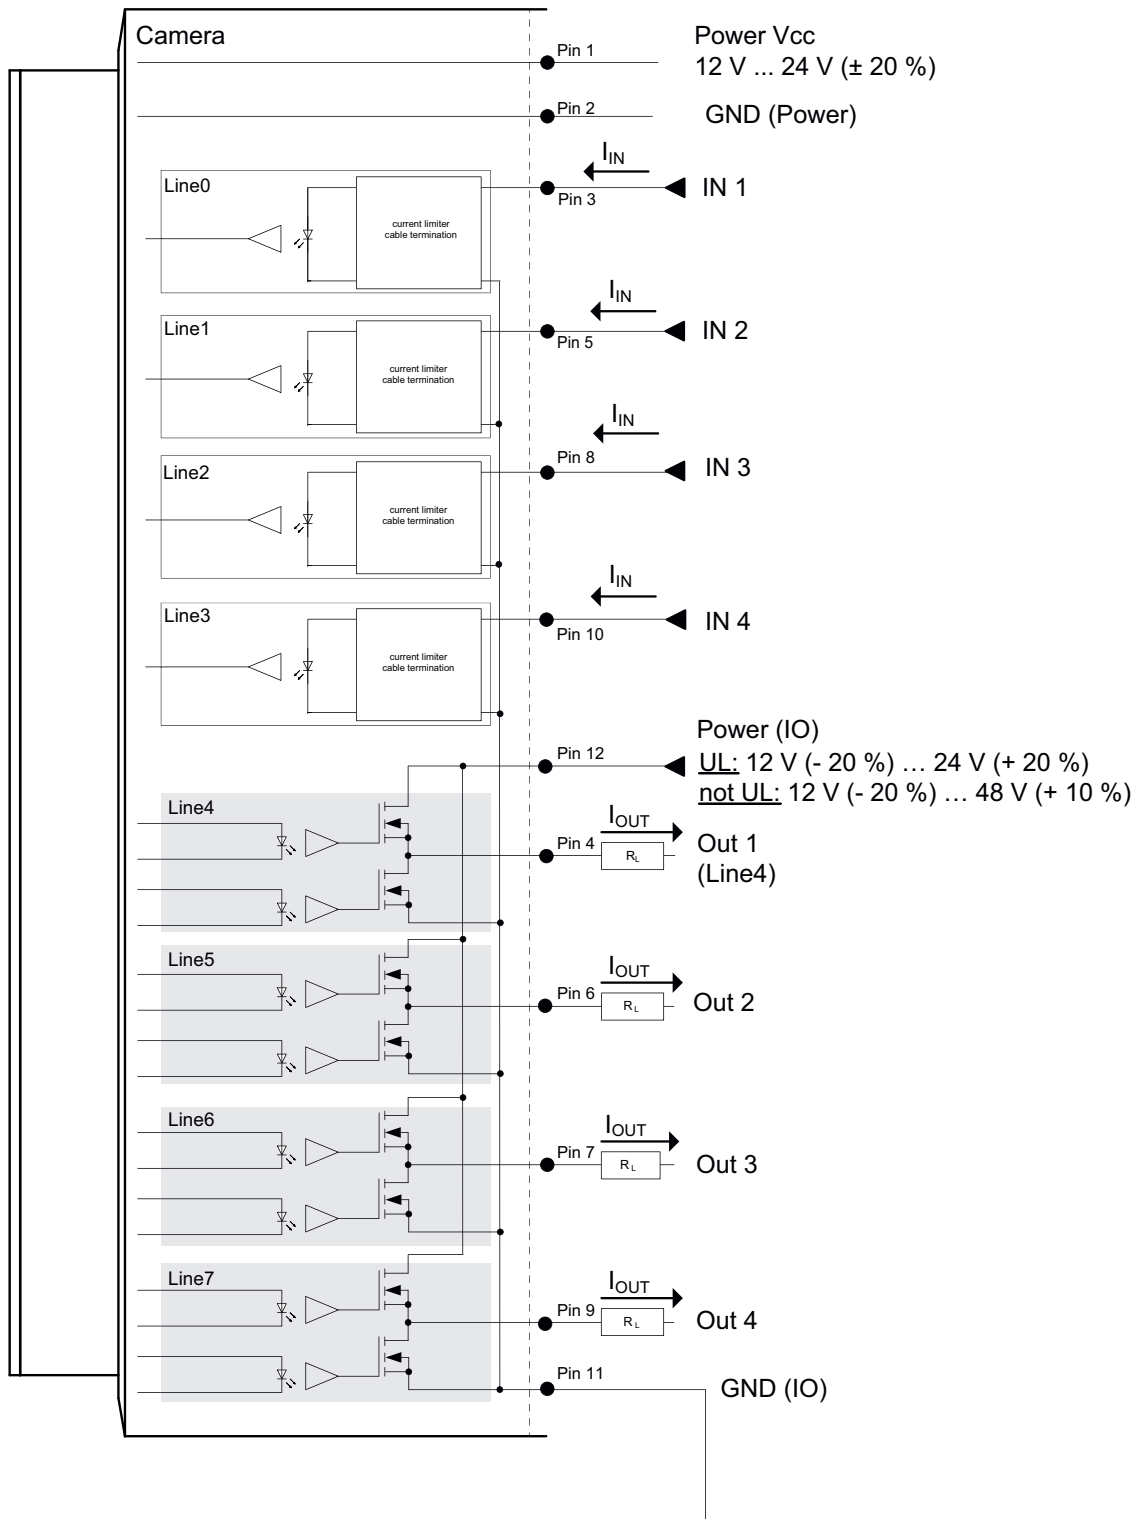

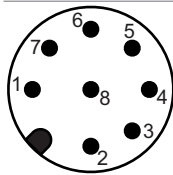7.5**VCXU.2****7.5.1****Pin assignment****Digital-IO**


1	GPIO (Line2)	2	not connected
3	IN1 (Line0)	4	GND IN1
5	Power V _{CC} (OUT1)	6	OUT1 (Line3)
7	GND (Power, GPIO)	8	GPIO (Line1)

Power supply

Power Vcc	5 V via USB (power consumption: max. 4 W)
-----------	---

Cable core colors (cable not included in delivery)


1	WH – White	2	BN – Brown
3	GN – Green	4	YE – Yellow
5	GY – Grey	6	PK – Pink
7	BU – Blue	8	RD – Red

 USB 3.0 interface (Micro B)

1	VBUS	2	D-
3	D+	4	ID
5	GND	6	MicB_SSTX-
7	MicB_SSTX+	8	GND_DRAIN
9	MicB_SSRX-	10	MicB_SSRX+

7.5.2

Digital IO

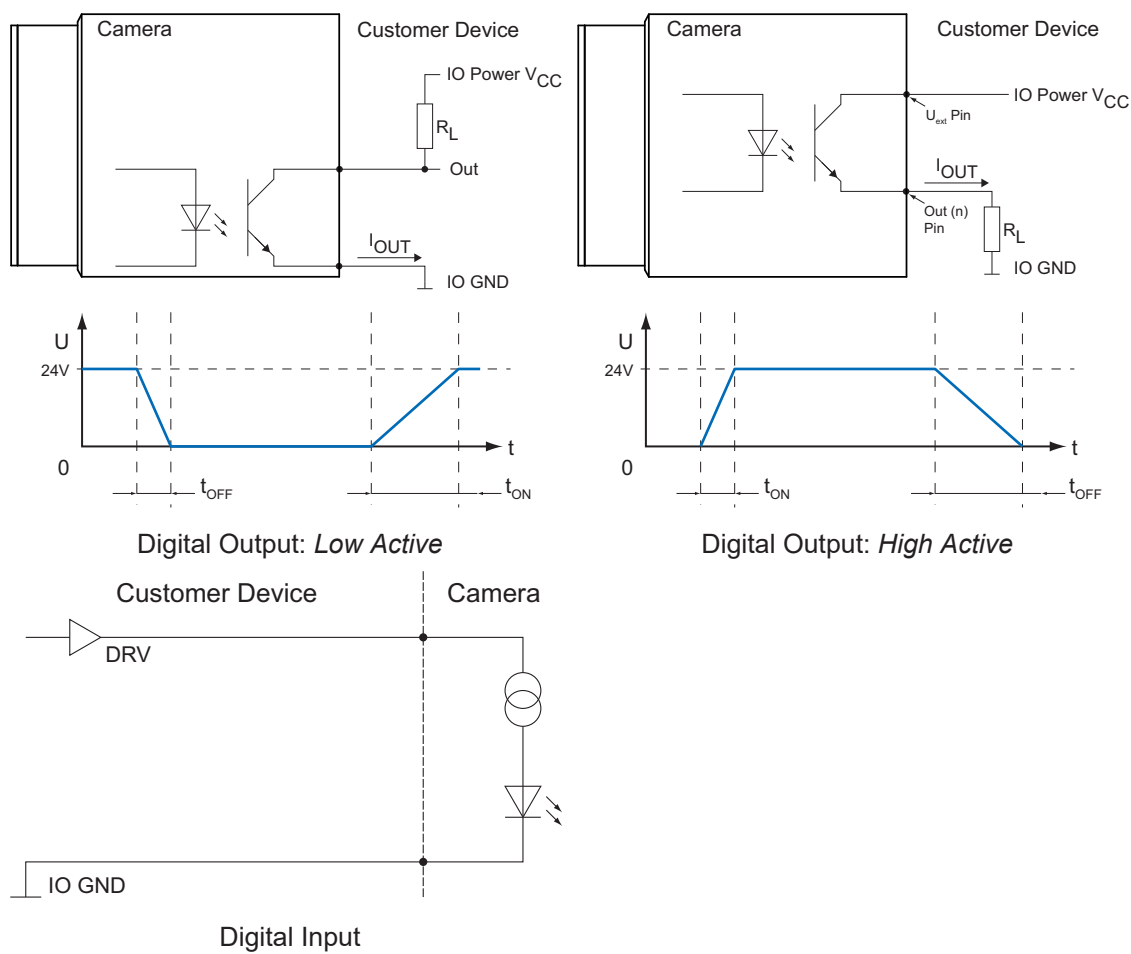

7.5.3 GPIO (General Purpose Input / Output)

Line1 and *Line2* are GPIOs and can be both *Input* and *Output*.

Input: (0 ... 0.8 V low, 2.0 ... 3.0 V high).

Output: (0 ... 0.4 V low, 2.4 ... 3.3 V high), @ 1 mA load (high) / 50 mA sink (low)



NOTICE



Overvoltage, undervoltage or inverted polarity can result in defect!

General Purpose IOs (GPIOs) are not potential-free and do not feature overvoltage power off. Incorrect wiring, overvoltage, undervoltage or reverse polarity can damage the electronics.

GPIO power supply VCC: 3.3 V DC

Load resistance for TTL high level: approx. 2.7 kΩ

GPIO configuration is by default an in the camera as *Input*. They have to assigned to GPIO_GND if not used or configured as *Output*. Configuration as *Output* by default (saved in *User Set*) is feasible.

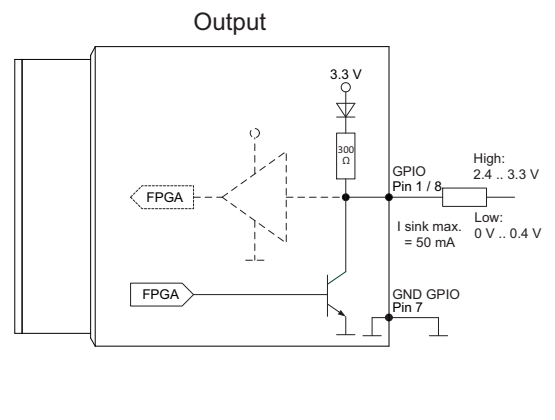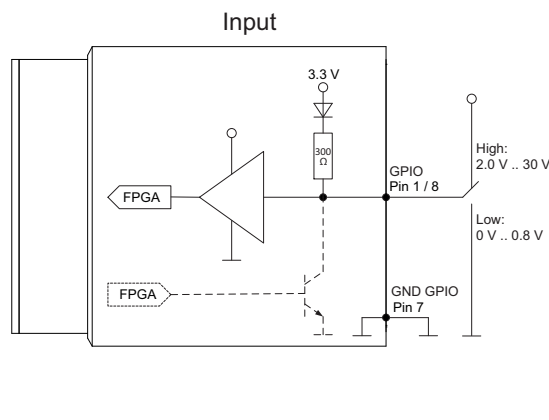

8 Maintenance

The sensor is maintenance-free. No special preventive maintenance is required. Regular cleaning and visual inspection of the plug connections are recommended.

8.1 Cleaning

Due to its compact design, the device is characterized by almost maintenance-free operation. When used for the intended purpose, it is possible that the device may need to be cleaned from time to time. Very clean optical surfaces (cover glass) are required for the consistent and reproducible operation of the device.

The device requires cleaning if the captured frames resemble the following example. In order to test the camera, capture a homogenous image (test target could be a white sheet of paper).



Filter / Cover glass sensor

NOTICE

Cleaning with compressed air

Compressed air may force dust into the camera.

Never use compressed air to clean the filter / cover glass!

Use a soft, lint free cloth dampened with a small amount of pure methanol for cleaning.

Housing

NOTICE

Cleaning with volatile solvents

Volatile solvents can damage the surface of the camera.

Never use volatile solvents (benzene, thinner) for cleaning!

Use a soft, dry cloth to clean the surface of the camera housing. To remove persistent stains, use a soft cloth dampened with a small quantity of neutral detergent. Then wipe dry

Tube cover glass

For cleaning, use a soft, lint-free cloth to clean the surface of the tube cover glass with a gentle pressure, without scratching.

To clean stubborn dirt, commonly available window cleaning agent is recommended.

- Ensure that no residues of the cleaning agent or scratches remain on the glass. These can permanently damage the reproducibility of the results from the device.
- As so many cleaning agents are available, we hope you understand that we cannot test every single one. Resistance to cleaning agents and areas of use depends upon the specific application.
- Cleaning agents must be tested on an discreet area of the device under application conditions to evaluate if they are suitable.

9 Troubleshooting

9.1 Support

In case of any questions please contact our Technical & Application Support Center.

Worldwide

Baumer Optronic GmbH

Badstrasse 30f

DE - 01454 Radeberg

www.baumer.com

Tel.: +49 (0)3528 4386 845

support.cameras@baumer.com

9.2 Accessories

You can find accessories at the website at:

www.baumer.com

10 Software

10.1 Baumer GAPI

Baumer GAPI stands for Baumer **G**eneric **A**pplication **P**rogramming Interface. With this API Baumer offers an interface for fast and easy integration of Baumer industrial cameras in C++, C and C# (Windows only®). The software interface allows for switchover to other camera models.

The API supports Windows®, Linux® and ARM®-based platforms.

For more information, please visit: <https://www.baumer.com/vision/software>

10.2 Baumer neoAPI

The neoAPI is a high-performant and user-friendly API for camera integration. Using few code lines only, it enables fast integration of Baumer cameras into C++, C# and Python™.

The API supports Windows®, Linux® and ARM®-based platforms.

For more information, please visit: <https://www.baumer.com/neoAPI>

10.3 Baumer Camera Explorer

Easy-to-use Baumer *Camera Explorer* allows for camera evaluation and configuration within the least amount of time. It helps get to know and try the diversified functions of the Baumer cameras for configuration to the application.

Baumer *Camera Explorer* supports Windows®, Linux® and ARM®-based platforms.

More information is available at: <https://www.baumer.com/camera-explorer>

10.4 3rd Party Software

Strictly adhering to the GenICam™ standard, Baumer is in a position to offer the 3rd party software for use with this camera series.


A current listing of 3rd party software that has been successfully tested with Baumer cameras is accessible at: <https://www.baumer.com/c/14180>.

11 GenICam Camera Features

A GenICam™-compliant XML-description file presents the camera's Features. The following chapter describes all included and accessible functions. Most of the camera's functions are standardized in *GenICam™ SFNC* and must use the name defined in there. Particular Features, which cannot be assigned to an existing *GenICam™ SFNC* name come as vendor-specific in the "Custom" namespace.

The Features are clustered in categories according to their function. The software uses them to present the functions more clearly.

You can see your camera's Features functionalities in *Feature Tree (1)* of the *Camera Explorer*. Please refer to the appropriate documentation.

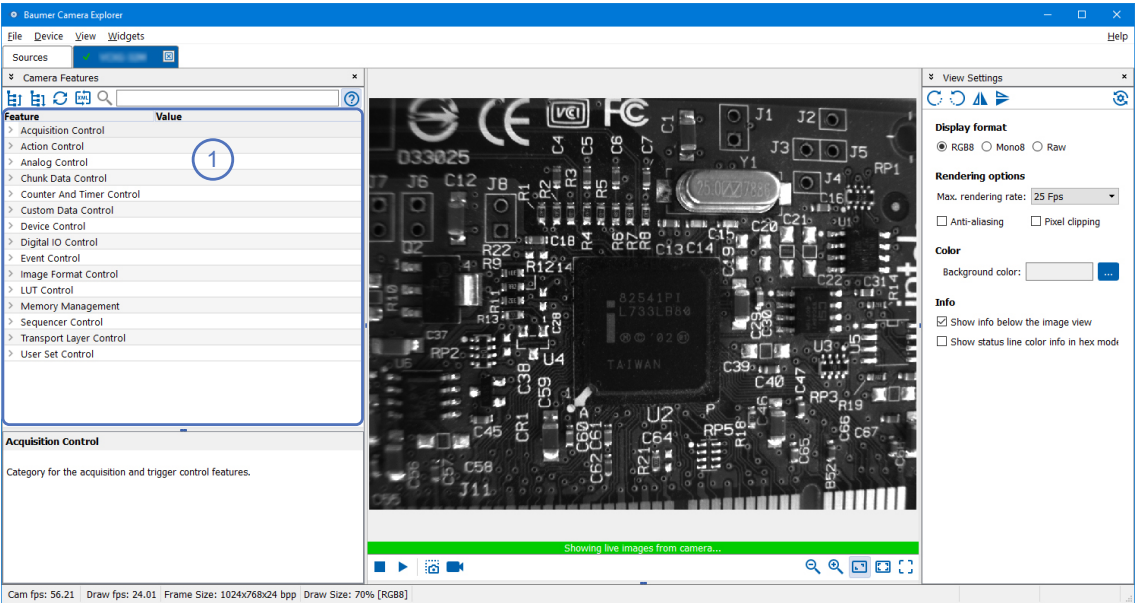

11.1 Category: AcquisitionControl

This chapter describes all features related to image acquisition, including the trigger and exposure control.

11.1.1 AcquisitionAbort

The abort of the image acquisition is a special case, where the ongoing acquisition is stopped. If an exposure is running, the exposure is aborted immediately and the image is not read out.

Name	AcquisitionAbort
Category	AcquisitionControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.1.2 AcquisitionFrameCount

Number of frames to acquire in MultiFrame Acquisition mode.

Name	AcquisitionFrameCount
Category	AcquisitionControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	1 - 65535 (Increment: 1)

11.1.3 AcquisitionFrameRate

Controls the acquisition rate (in Hertz) at which the frames are captured.

Name	AcquisitionFrameRate
Category	AcquisitionControl
Interface	IFloat
Access	Read / Write
Unit	Hz
Values	depends on camera

11.1.4 AcquisitionFrameRateEnable

Enables the acquisition at the framerate specified by AcquisitionFrameRate.

Name	AcquisitionFrameRateEnable
Category	AcquisitionControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.1.5 AcquisitionMode

Sets the acquisition mode of the device. It defines mainly the number of frames to capture during an acquisition and the way the acquisition stops.

**INFO**

The camera must be stopped before this feature can be edited.

Name	AcquisitionMode
Category	AcquisitionControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXx.2

Values	Description
Continuous	Without external events frames are continuously acquired until stop by command <i>AcquisitionStop</i> .
MultiFrame	In this mode a predefined number of frames will be captured after <i>AcquisitionStart</i> . The <i>AcquisitionFrameCount</i> controls the number of acquired frames. Next acquisition stops automatically.
SingleFrame	In this mode the camera will acquire another frame after <i>AcquisitionStart</i> . Next acquisition stops.

11.1.6 AcquisitionStart

Once image acquisition has started, the camera processes the images in three steps:

1. Determining the current set of image parameters
2. Sensor exposure
3. Readout from the sensor

This process is then repeated until the camera is stopped.

Name	AcquisitionStart
Category	AcquisitionControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.1.7 AcquisitionStatus

Reads the state of the internal acquisition signal selected using AcquisitionStatusSelector.

Name	AcquisitionStatus
Category	AcquisitionControl
Interface	IBoolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.1.8 AcquisitionStatusSelector

Selects the internal acquisition signal to be read by *AcquisitionStatus*.

Name	AcquisitionStatusSelector	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Acquisition Active	Device is currently doing an acquisition of one or many frames.
	Acquisition Trigger Wait	Camera awaits <i>Trigger</i> to acquire a single or several images.

11.1.9 AcquisitionStop

Stops the acquisition of the device at the end of the current frame.

Name	AcquisitionStop
Category	AcquisitionControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.1.10 ExposureAuto

Sets exposure mode to automatic if *ExposureMode* = *Timed*. The exact algorithm used for implementation is device-specific.

Name	ExposureAuto
Category	AcquisitionControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXx.2

Values [ExposureAuto]	Description
Continuous	The camera is continuously adapting the exposure time for maximized dynamic range.
Off	Exposure duration is user controlled using <i>ExposureTime</i> .
Once	Exposure time is adapted once. Once it has converged, it returns to the <i>Off</i> state.


11.1.11 ExposureMode

Sets the operation mode of the Exposure.

Name	ExposureMode	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Timed	Time-controlled exposure. The exposure duration time is set using the <i>ExposureTime</i> or <i>ExposureAuto</i> features and the exposure starts with the <i>FrameStart</i> or <i>LineStart</i> .

11.1.12 ExposureTime

On exposure of the sensor, the inclination of photons produces a charge separation on the semiconductors of the pixels. This results in a voltage difference, which is used for signal extraction.

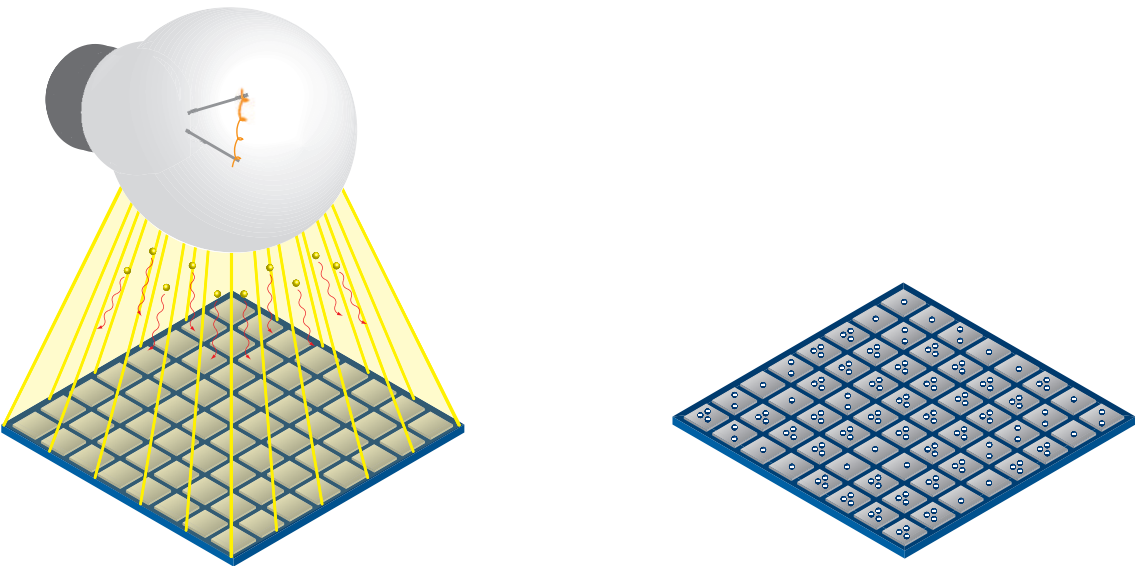

The signal strength is influenced by the incoming amount of photons. It can be increased by increasing the exposure time (texposure).

Name	ExposureTime
Category	AcquisitionControl
Interface	IFloat
Access	Read / Write
Unit	µs
Values	see table(s) below



INFO

Only for cameras with Rolling Shutter sensors!

ExposureTime is modified by sensor reconfiguration.

If the modification occurs during a sensor readout, the update will be delayed until the end of the current readout.



INFO

Sequencer will not be accessible if function *ShortExposureTimeEnable* is enabled.

VCXG.2

	Texposure min [µsec] ¹⁾	Tnon- selectable range ²⁾ [µsec]	Texposure min [µsec] (Default)	Texposure max [sec]
Monochrom				
VCXG.2-13M	-	-	20	1
VCXG.2-15M	1	-	15	60

	Texposure min [μsec] ¹⁾	Tnon- selectable range ²⁾ [μsec]	Texposure min [μsec] (Default)	Texposure max [sec]
VCXG.2-25M	-	-	20	1
VCXG.2-32M	1	-	15	60
VCXG.2-51M	1	-	15	60
VCXG.2-51MP	1	-	15	60
VCXG.2-57M	1	4-19	20	60
VCXG.2-65M.R	-	-	16* / 34**	16.3* / 60**
VCXG.2-82M	1	4 - 22	23	60
VCXG.2-83UV /.TCG.2	1	4 - 22	23	60
VCXG.2-124M	1	-	15	60
VCXG.2-127M	1	4 - 14	31	60
VCXG.2-201M.R	-	-	29* / 58**	60* / 60**
VCXG.2-204M	1	4 - 33	34	60
VCXG.2-241M	1	4 - 38	39	60
Color				
VCXG.2-13C	-	-	20	1
VCXG.2-15C	1	-	15	60
VCXG.2-25C	-	-	20	1
VCXG.2-32C	1	-	15	60
VCXG.2-51C	1	-	15	60
VCXG.2-57C	1	4-19	20	60
VCXG.2-65C.R	-	-	16* / 34**	16.3* / 60**
VCXG.2-82C	1	4 - 22	23	60
VCXG.2-124C	1	-	15	60
VCXG.2-127C	1	4 - 30	31	60
VCXG.2-201C.R	-	-	29* / 58**	60* / 60**
VCXG.2-204C	1	4 - 33	34	60
VCXG.2-241C	1	4 - 38	39	60

¹⁾ only if *ShortExposureTimeEnable* is enabled

²⁾ Range (*ExposureTimeGapMin* – *ExposureTimeGapMax*) only relevant if *ShortExposureTimeEnable* is enabled

*) Shutter Mode: *Global Reset*

**) Shutter Mode: *Rolling Shutter (Default)*

VCXG.2.XC

	Texposure min [µsec] ¹⁾	Tnon- selectable range ²⁾ [µsec]	Texposure min [µsec] (Default)	Texposure max [sec]
Monochrom				
VCXG.2-51M.XC	1	-	15	60
VCXG.2-241M.XC	1	4 - 38	39	60

¹⁾ only if *ShortExposureTimeEnable* is enabled

²⁾ Range (*ExposureTimeGapMin* – *ExposureTimeGapMax*) only relevant if *ShortExposureTimeEnable* is enabled

VCXG.2.I

	Texposure min [µsec] ¹⁾	Tnon- selectable range ²⁾ [µsec]	Texposure min [µsec] (Default)	Texposure max [sec]
Monochrom				
VCXG.2-15M.I	1	-	15	60
VCXG.2-32M.I	1	-	15	60
VCXG.2-51M.I	1	-	15	60
VCXG.2-57M.I	1	4-19	20	60
VCXG.2-82M.I	1	4 - 22	23	60
VCXG.2-127M.I	1	4 - 30	31	60
VCXG.2-201M.R.I	-	-	29* / 58**	60* / 60**
VCXG.2-241M.I	1	4 - 38	39	60
Color				
VCXG.2-15C.I	1	-	15	60
VCXG.2-32C.I	1	-	15	60
VCXG.2-51C.I	1	-	15	60
VCXG.2-57C.I	1	4-19	20	60
VCXG.2-82C.I	1	4 - 22	23	60
VCXG.2-127C.I	1	4 - 30	31	60
VCXG.2-201C.R.I	-	-	29* / 58**	60* / 60**
VCXG.2-241C.I	1	4 - 38	39	60

¹⁾ only if *ShortExposureTimeEnable* is enabled

²⁾ Range (*ExposureTimeGapMin* – *ExposureTimeGapMax*) only relevant if *ShortExposureTimeEnable* is enabled

*) Shutter Mode: *Global Reset*

**) Shutter Mode: *Rolling Shutter (Default)*

VCXU.2

	Texposure min [μsec] ¹⁾	Tnon- selectable range ²⁾ [μsec]	Texposure min [μsec] (Default)	Texposure max [sec]
Monochrom				
VCXU.2-13.M	-	-	20	1
VCXU.2-15.M	1	-	15	60
VCXU.2-31.M	1	-	15	60
VCXU.2-32.M	1	-	15	60
VCXU.2-50.M	1	-	15	60
VCXU.2-50.MP	1	-	15	60
VCXU.2-51.M	1	-	15	60
VCXU.2-57.M	1	4 - 9	10	60
VCXU.2-65.M.R	-	-	10* / 22**	10.16* / 60**
VCXU.2-123.M	1	-	15	60
VCXU.2-127.M	1	4 – 14	15	60
VCXU.2-201.M.R	-	-	29* / 29**	60* / 60**
VCXU.2-241.M	1	4 - 16	17	60
Color				
VCXU.2-13.C	-	-	20	1
VCXU.2-15.C	1	-	15	60
VCXU.2-31.C	1	-	15	60
VCXU.2-32.C	1	-	15	60
VCXU.2-50.C	1	-	15	60
VCXU.2-51.C	1	-	15	60
VCXU.2-57.C	1	4 - 9	10	60
VCXU.2-65.C.R	-	-	10* / 22**	10.16* / 60**
VCXU.2-123.C	1	-	15	60
VCXU.2-127.C	1	4 - 14	15	60
VCXU.2-201.C.R	-	-	29* / 29**	60* / 60**
VCXU.2-241.C	1	4 - 16	17	60

¹⁾ only if *ShortExposureTimeEnable* is enabled

²⁾ Range (*ExposureTimeGapMin* – *ExposureTimeGapMax*) only relevant if *ShortExposureTimeEnable* is enabled

*) Shutter Mode: *Global Reset*

**) Shutter Mode: *Rolling Shutter (Default)*

11.1.13 ExposureTimeGapMax

Returns the maximum value of the exposure time gap.

Name	ExposureTimeGapMax
Category	AcquisitionControl
Interface	IFloat
Access	Read only
Unit	µs
Values	0 - 2,000,000.000000 (Increment: 1.00)

11.1.14 ExposureTimeGapMin

Returns the minimum value of the exposure time gap.

Name	ExposureTimeGapMin
Category	AcquisitionControl
Interface	IFloat
Access	Read only
Unit	µs
Values	0 - 2,000,000.000000 (Increment: 1.00)

11.1.15 ReadoutMode

Specifies the operation mode of the readout for the acquisition.

Image acquisition consists of two separate procedures carried out in succession.

Exposing the pixels on the photosensitive surface of the sensor is only the first part of the image acquisition process. Once this first step is completed, the pixels are read out.

The exposure time (*texposure*) can be adjusted by the user, however, the time needed for the readout (*treadout*) is determined by the particular sensor and image format in use.

Depending on mode and the combination of exposure and reading times, the cameras can operate in *Sequential* or *Overlapped*:

Overlapped		Sequential
In this operation mode, an image is being exposed whilst Frame (n) is being read.		Here, the time intervals are long enough for the exposure and readout to be processed successively.
Name	ReadoutMode	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Overlapped	Overlapped ReadoutMode.
	Sequential	Sequential ReadoutMode.

11.1.16 ShortExposureTimeEnable

Controls if short exposure time should be supported.



INFO

Sequencer will not be accessible if function *ShortExposureTimeEnable* is enabled.

Name	ShortExposureTimeEnable
Category	AcquisitionControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.1.17 TriggerActivation

Specifies the trigger activation mode.

Name	TriggerActivation
Category	AcquisitionControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXx.2

Values [TriggerActivation]	Description
FallingEdge	<i>Trigger</i> valid at falling edge of source signal.
RisingEdge	<i>Trigger</i> valid at rising edge of source signal.

11.1.18 TriggerDelay

Specifies the delay in microseconds (μ s) to apply after the trigger reception before activating it.

Name	TriggerDelay
Category	AcquisitionControl
Interface	IEnumeration
Access	Read / Write
Unit	μ s
Values	0 - 2,000,000.000000 (Increment: 1.00)

11.1.19 TriggerMode

Controls if the selected *Trigger* is active.

Name	TriggerMode	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	Disables selected <i>Trigger</i> .
	On	Enables selected <i>Trigger</i> .

Rolling Shutter cameras

With cameras featuring Rolling Shutter sensor, *TriggerMode* depends on *SensorShutterMode*.

Trigger Mode = On		Trigger Mode = Off	
ShutterMode	ReadoutMode	ShutterMode	ReadoutMode
GlobalReset	Non-overlapped	GlobalReset	Non-overlapped
Rolling	Non-overlapped	Rolling	Overlapped

11.1.20 TriggerOverlap

Specifies the type trigger overlap permitted with the previous frame.

Name	TriggerOverlap	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Read Out	<i>Trigger</i> is adopted immediately after exposure time.

11.1.21 TriggerSelector

Selects the type of trigger to configure.

Name	TriggerSelector	
Category	AcquisitionControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Frame Start	Selects the type of trigger to configure.

11.1.22 TriggerSoftware

Generates an internal trigger. TriggerSource must be set to Software.

Name	TriggerSoftware	
Category	AcquisitionControl	
Interface	ICommand	
Access	Write only	
Unit	-	
Values	-	

11.1.23 TriggerSource

Specifies the internal signal or physical input Line to use as the trigger source. The selected trigger must have its *TriggerMode* set to *On*.

Name	TriggerSource
Category	AcquisitionControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

TriggerSource	VCXG.2	VCXG.2.XC	VCXG.2.I	VCXU.2
All	■	■	■	■
Counter1End	■	■	■	■
Counter2End	■	■	■	■
Line0	■	■	■	■
Line1	■	■	■	■
Line2	■	■	■	■
Line3	■	■	■	■
Line4	□	□	■	□
Line5	□	□	■	□
Line6	□	□	■	□
Line7	□	□	■	□
Off	■	■	■	■
Software	■	■	■	■

11.2 Category: ActionControl (GigE only)

Category containing the Action Control functions.

General Information

The basic idea behind this function was realizing simultaneous trigger for multiple cameras.

For doing so, a broadcast Ethernet package was implemented. This package can act as trigger or be used for other actions.

The individual network components provide different latencies and jitter, so Ethernet trigger is not as synchronous as hardware trigger. However, network applications can handle jitter.


Action Command is transmitted as broadcast. Furthermore, several cameras can be grouped together, so that not each connected camera will respond to Action Commands.

Action Commands include the following information:

- *Device Key* - as device-specific authorization for responding to the Action Command
- *Action ID* - as action signal identification
- *Group Key* - for action trigger addressing individual device groups
- *Group Mask* - to extend the range of individual device groups

Example: Triggering multiple cameras

The following illustration shows three cameras with synchronous trigger by software application.

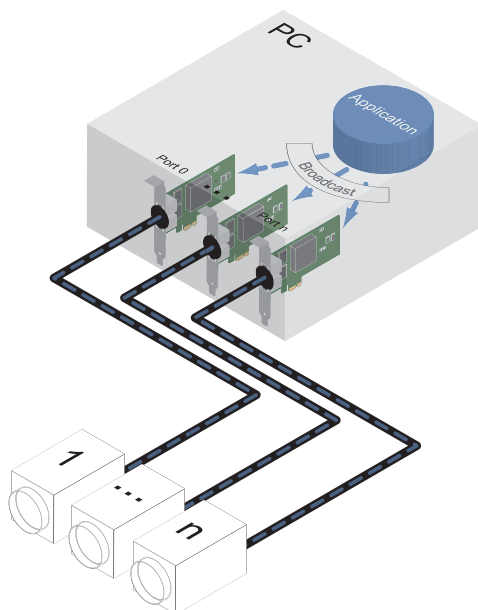

11.2.1 ActionDeviceKey

Provides the device key that allows the device to check the validity of action commands. The device internal assertion of an action signal is only authorized if the ActionDeviceKey and the action device key value in the protocol message are equal.

Name	ActionDeviceKey
Category	ActionControl
Interface	Integer
Access	Write only
Unit	HexNumber
Values	0 - 4294967295 (Increment: 1)

11.2.2 ActionGroupKey

Provides the key that the device will use to validate the action on reception of the action protocol message.

Name	ActionGroupKey
Category	ActionControl
Interface	Integer
Access	Read / Write
Unit	HexNumber
Values	0 - 4294967295 (Increment: 1)

11.2.3 ActionGroupMask

Provides the mask that the device will use to validate the action on reception of the action protocol message.

Name	ActionGroupMask
Category	ActionControl
Interface	Integer
Access	Read / Write
Unit	HexNumber
Values	0 - 4294967295 (Increment: 1)

11.2.4 ActionSelector

Selects to which Action Signal further Action settings apply.

Name	ActionSelector
Category	ActionControl
Interface	Integer
Access	Read / Write
Unit	-
Values	1 - 1 (Increment: 1)

11.3 Category: AnalogControl

This category comprises the features that influence the analog frame properties, e.g. *Gain*, *BlackLevel* or *Gamma*.

11.3.1 BalanceWhiteAuto (color cameras only)

Controls the mode for automatic white balancing between the color channels. The white balancing ratios are automatically adjusted.

Name	BalanceWhiteAuto	
Category	AnalogControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Continuous	White balancing is constantly adjusted by the device.
	Off	White balancing is off.
	Once	White balancing is automatically adjusted once by the device. Once converged, it automatically returns to the <i>Off</i> state. The levelling can take several images. When images are acquired in <i>TriggerMode</i> , the white balance affects on the next acquired image.

11.3.2 BlackLevel

Controls the analog black level as an absolute physical value. This represents a offset applied to the video signal.

Name	BlackLevel
Category	AnalogControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2

Camera type	BlackLevel
Monochrom / Color	
VCXG.2-13M / VCXG.2-13C	0 ... 63 DN10
VCXG.2-15M / VCXG.2-15C	0 ... 255 DN12
VCXG.2-25M / VCXG.2-25C	0 ... 63 DN10
VCXG.2-32M / VCXG.2-32C	0 ... 255 DN12
VCXG.2-51M / VCXG.2-51C	0 ... 255 DN12
VCXG.2-51MP	0 ... 255 DN12
VCXG.2-57M / VCXG.2-57C	0 ... 255 DN12
VCXG.2-65M.R / VCXG.2-65C.R	0 ... 255 DN12
VCXG.2-82M / VCXG.2-82C	0 ... 255 DN12
VCXG.2-83UV / .TCG.2	0 ... 255 DN12
VCXG.2-124M / VCXG.2-124C	0 ... 255 DN12
VCXG.2-127M / VCXG.2-127C	0 ... 255 DN12
VCXG.2-201M.R / VCXG.2-201C.R	0 ... 255 DN12
VCXG.2-204M / VCXG.2-204C	0 ... 255 DN12
VCXG.2-241M / VCXG.2-241C	0 ... 255 DN12

VCXG.2.XC

Camera type	BlackLevel
Monochrom	
VCXG.2-51M.XC	0 ... 255 DN12
VCXG.2-241M.XC	0 ... 255 DN12

VCXG.2.I

Camera type	BlackLevel
Monochrom / Color	
VCXG.2-15M.I / VCXG.2-15C.I	0 ... 255 DN12
VCXG.2-32M.I / VCXG.2-32C.I	0 ... 255 DN12
VCXG.2-51M.I / VCXG.2-51C.I	0 ... 255 DN12
VCXG.2-57M.I / VCXG.2-57C.I	0 ... 255 DN12
VCXG.2-82M.I / VCXG.2-82C.I	0 ... 255 DN12
VCXG.2-127M.I / VCXG.2-127C.I	0 ... 255 DN12
VCXG.2-201M.R.I / VCXG.2-201C.R.I	0 ... 255 DN12
VCXG.2-241M.I / VCXG.2-241C.I	0 ... 255 DN12

VCXU.2

Camera type	BlackLevel
Monochrom / Color	
VCXU.2-13M / VCXU.2-13C	0 ... 63 DN10
VCXU.2-15M / VCXU.2-15C	0 ... 255 DN12
VCXU.2-31M / VCXU.2-31C	0 ... 255 DN12
VCXU.2-32M / VCXU.2-32C	0 ... 255 DN12
VCXU.2-50M / VCXU.2-50C	0 ... 255 DN12
VCXU.2-50.MP	0 ... 255 DN12
VCXU.2-51M / VCXU.2-51C	0 ... 255 DN12
VCXU.2-57M / VCXU.2-57C	0 ... 255 DN12
VCXU.2-65.M.R / VCXU.2-65.C.R	0 ... 255 DN12
VCXU.2-123M / VCXU.2-123C	0 ... 255 DN12
VCXU.2-127M / VCXU.2-127C	0 ... 255 DN12
VCXU.2-201.M.R / VCXU.2-201.C.R	0 ... 255 DN12
VCXU.2-241M / VCXU.2-241C	0 ... 255 DN12

11.3.3**BlackLevelSelector**

Selects which Black Level is controlled by the various Black Level features.

Name	BlackLevelSelector	
Category	AnalogControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	All	Black Level will be applied to all channels.

11.3.4 Gain

Motion blur is unacceptable in high quality image acquisition. Exposure times are therefore limited. However, this results in low output signals from the camera and dark images. To solve this issue, the signals can be amplified by a user-defined gain factor within the camera.

**INFO**

Increasing the *Gain* will increase image noise.

Name	Gain
Category	AnalogControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2

Camera type	Gain
Monochrom / Color	
VCXG.2-13M / VCXG.2-13C	0 ... 18 / 0 ... 12
VCXG.2-15M / VCXG.2-15C	0 ... 48
VCXG.2-25M / VCXG.2-25C	0 ... 18 / 0 ... 12
VCXG.2-32M / VCXG.2-32C	0 ... 48
VCXG.2-51M / VCXG.2-51C	0 ... 48
VCXG.2-51MP	0 ... 48
VCXG.2-57M / VCXG.2-57C	0 ... 48
VCXG.2-65M.R / VCXG.2-65C.R	0 ... 48
VCXG.2-82M / VCXG.2-82C	0...18
VCXG.2-83UV / .TCG.2	0...18
VCXG.2-124M / VCXG.2-124C	0 ... 48
VCXG.2-127M / VCXG.2-127C	0 ... 48
VCXG.2-201M.R / VCXG.2-201C.R	0 ... 20
VCXG.2-204M / VCXG.2-204C	0 ... 48
VCXG.2-241M / VCXG.2-241C	0 ... 48

VCXG.2.XC

Camera type	Gain
Monochrom	
VCXG.2-51M.XC	0 ... 48
VCXG.2-241M.XC	0 ... 48

VCXG.2.I

Camera type	Gain
Monochrom / Color	
VCXG.2-15M.I / VCXG.2-15C.I	0 ... 48
VCXG.2-32M.I / VCXG.2-32C.I	0 ... 48
VCXG.2-51M.I / VCXG.2-51C.I	0 ... 48
VCXG.2-57M / VCXG.2-57C	0 ... 48
VCXG.2-82M.I / VCXG.2-82C.I	0...18
VCXG.2-127M.I / VCXG.2-127C.I	0 ... 48
VCXG.2-201M.R.I / VCXG.2-201C.R.I	0 ... 20
VCXG.2-241M.I / VCXG.2-241C.I	0 ... 48

VCXU.2

Camera type	Gain
Monochrom / Color	
VCXU.2-13M / VCXU.2-13C	0 ... 18 / 0 ... 12
VCXU.2-15M / VCXU.2-15C	0 ... 48
VCXU.2-31M / VCXU.2-31C	0 ... 48
VCXU.2-32M / VCXU.2-32C	0 ... 48
VCXU.2-50M / VCXU.2-50C	0 ... 48
VCXU.2-50.MP	0 ... 48
VCXU.2-51M / VCXU.2-51C	0 ... 48
VCXU.2-57M / VCXU.2-57C	0 ... 48
VCXU.2-65M.R / VCXU.2-65C.R	0 ... 48
VCXU.2-123M / VCXU.2-123C	0 ... 48
VCXU.2-127M / VCXU.2-127C	0 ... 48
VCXU.2-201M.R / VCXU.2-201C.R	0 ... 20
VCXU.2-241M / VCXU.2-241C	0 ... 48

11.3.5 GainAuto

Sets the automatic gain control (AGC) mode. The algorithm used to implement AGC is device-specific.

Name	GainAuto
Category	AnalogControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

Values	
Continuous	Gain is constantly adjusted by the device.
Off	Gain is User controlled using Gain.
Once	Gain is automatically adjusted once by the device. Once converged, it automatically returns to status Off. Convergence may comprise several frames.

11.3.6 GainSelector

Selects which gain is controlled by the various gain feature.

Name	GainAuto
Category	AnalogControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below


VCXG.2 / VCXG.2.XC / VCXG.2.I / VCXU.2

Values [GainSelector]	
All	All Gain values will be applied to all channels.
Blue	Gain applies to the blue channel (color cameras only).
Green Blue	Gain green-blue applies to the green-blue channel (color cameras only).
Green Red	Gain applies to the green-red channel (color cameras only).
Red	Gain applies to the red channel (color cameras only).

11.3.7 Gamma

This function compensates any nonlinearity in human eye light perception.

For this correction, the corrected pixel intensity (Y') is calculated from the original intensity of the sensor's pixel (Y_{original}) and correction factor γ using the following formula (in oversimplified version): $Y' = Y_{\text{original}}^\gamma$

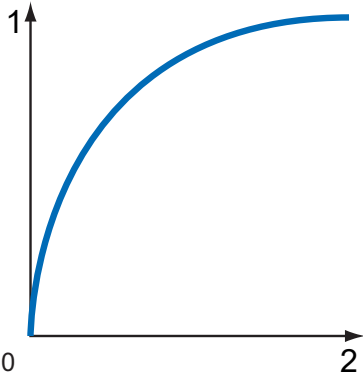

III. 5: Non-linear-perception of the human eye

1	Perception of brightness	2	Energy of light
---	--------------------------	---	-----------------

The values of the calculated intensities are entered in Look-Up-Table. This will overwrite any existing values in LUT.



INFO

If function *LUT* is disabled by software, the gamma correction function is disabled as well.



INFO

Setting the gamma value at simultaneous image acquisition may cause visual effects in cameras with long readout time, since access to *LUT* is not locked against the pixel stream. This behavior can be avoided by camera stop prior to the setting (*AcquisitionStop*).



Name	Gamma
Category	AnalogControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	0.1 - 2.0 (Increment: 0.10)

11.4 Category: AutoFeatureControl

Category containing the functions for automatic adjustment.

General Information

Various auto functions are available to automatically adjust image brightness. Two methods are described below.

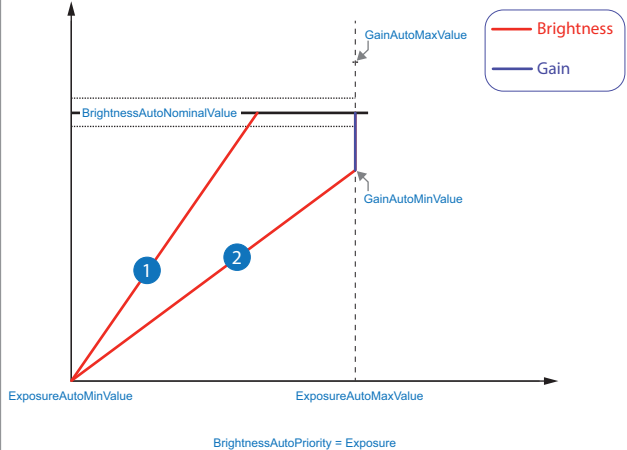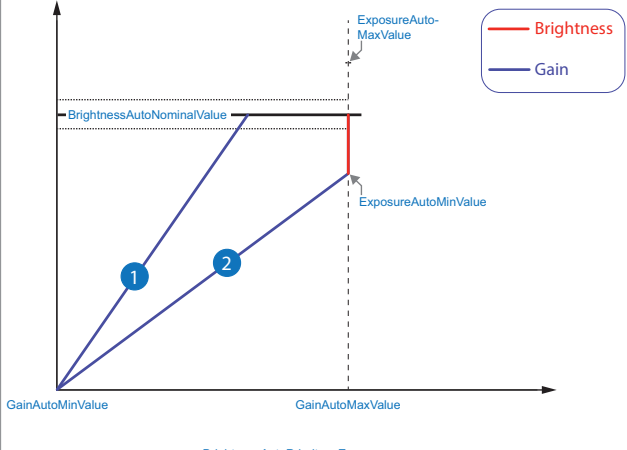BrightAutoPriority = ExposureAuto		
	1	<u>Example 1</u> For image 1, increasing brightness using <i>ExposureTime</i> will suffice to achieve the value in <i>BrightnessAutoNominalValue</i>.
	2	<u>Example 2</u> For image 2, increasing brightness using <i>ExposureTime</i> will not suffice to achieve value in <i>BrightnessAutoNominalValue</i>. Therefore, <i>Gain</i> is increased once <i>ExposureAutoMaxValue</i> has been achieved.
BrightAutoPriority = GainAuto		
	1	<u>Example 1</u> For image 1, increasing brightness using <i>Gain</i> will suffice to achieve the value in <i>BrightnessAutoNominalValue</i>.
	2	<u>Example 2</u> For image 2, increasing brightness using <i>Gain</i> will not suffice to achieve value in <i>BrightnessAutoNominalValue</i>. Therefore, <i>ExposureTime</i> is increased once <i>ExposureAutoMaxValue</i> has been achieved.

AutoFeature ROI – General Information


You can use the *AutoFeature Region of Interest (ROI)* function to predefine a so-called region of interest. This *ROI* is a defined range of sensor pixels.

This function is used if only the image data (e.g. brightness) of a particular region in the image is of interest. The calculated corrections will be applied to the entire image.

The *AutoFeature ROI* is specified using four values:

- *AutoFeatureOffsetX* - x-coordinate of the first relevant pixel
- *AutoFeatureOffsetY* - y-coordinate of the first relevant pixel
- *AutoFeatureWidth* – horizontal size of the region
- *AutoFeatureHeight* – vertical size of the region

AutoFeature ROI in full frame

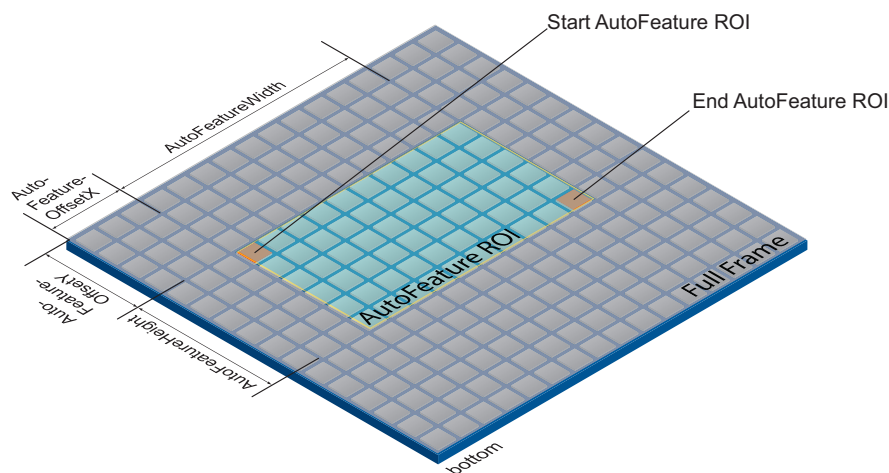


AutoFeature ROI in ROI



INFO


AutoFeature ROI can be set in *ROI* (Category: *ImageFormatControl*). The settings permitted for *AutoFeature ROI* are adjusted accordingly.

Starting point for *AutoFeatureOffsetX* and *AutoFeatureOffsetY* is defined by *ROI* (Category: *ImageFormatControl*).

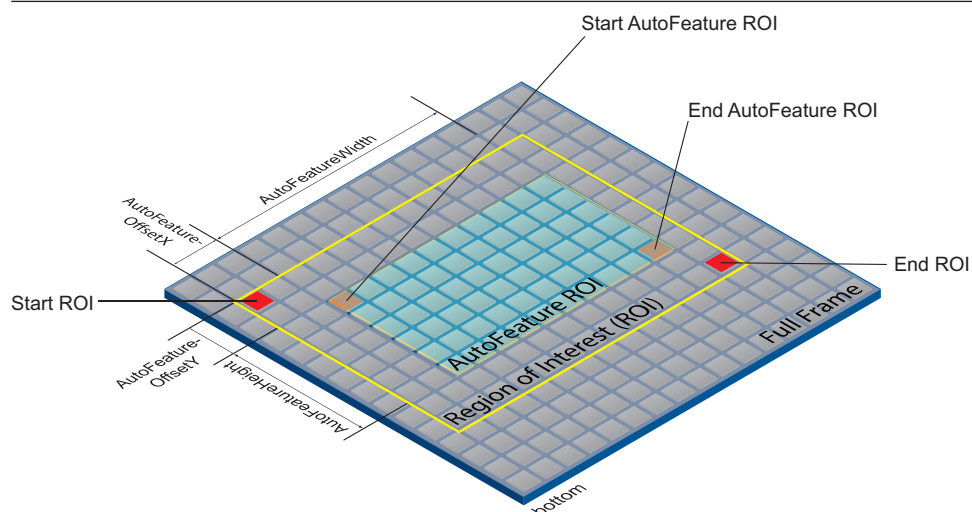

11.4.1 **AutoFeatureHeight**


Height of the selected Auto Feature Region (in pixels).

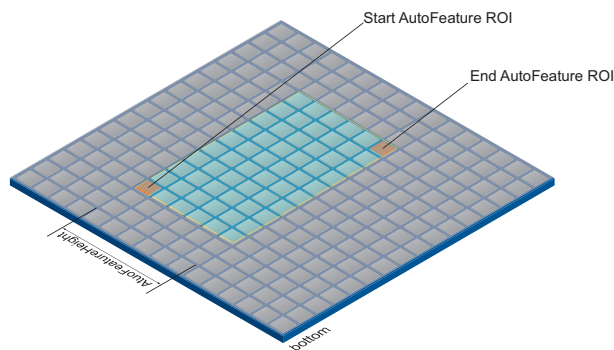

Name	AutoFeatureHeight
Category	AutoFeatureControl
Interface	Integer
Access	Read / Write
Unit	-
Values	Height [178]

11.4.2 **AutoFeatureOffsetX**


Horizontal offset from the origin to the Auto Feature Region (in pixels).

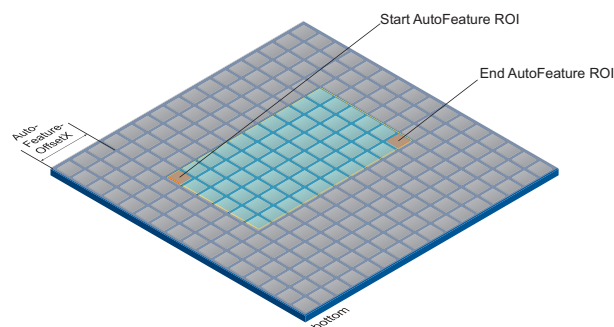

Name	AutoFeatureOffsetX
Category	AutoFeatureControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 - depends on <i>AutoFeatureWidth</i>

11.4.3 AutoFeatureOffsetY

Vertical offset from the origin to the Auto Feature Region (in pixels).

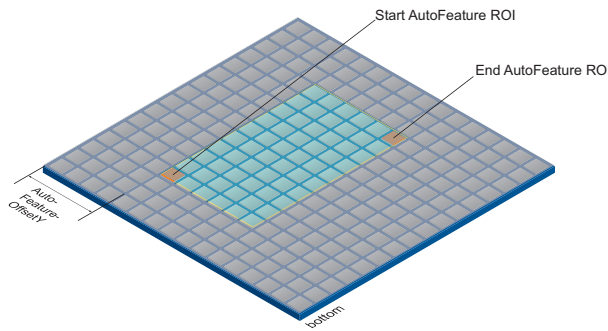

Name	AutoFeatureOffsetX
Category	AutoFeatureControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 - depends on <i>AutoFeatureHeight</i>

11.4.4 AutoFeatureRegionMode

Controls the mode for the selected area (*AutoFeature ROI*).



INFO

The camera must be stopped before this feature can be edited.

Name	AutoFeatureRegionMode	
Category	AutoFeatureControl	
Interface	IEEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	All settings of the selected <i>AutoFeature ROI</i> are automatically the same as the selected <i>AutoFeatureRegionReference</i> .
	On	The settings of the selected <i>AutoFeature ROI</i> are user defined. The <i>AutoFeature</i> is only accessible if the <i>AutoFeature ROI</i> is within the <i>AutoFeatureregionReference</i> of the <i>AutoFeature</i> .

11.4.5 AutoFeatureRegionReference

Defines *Reference ROI*. *Auto Feature Region* is part of this region, every *Auto Feature Region* will refer to the *Reference Region*.

Name	AutoFeatureRegionReference	
Category	AutoFeatureControl	
Interface	IEEnumeration	
Access	Read / Write	
Unit	-	
Values	Region0	The selected <i>Auto Feature Region</i> refers to <i>Region 0</i> .


11.4.6 AutoFeatureRegionSelector

Selects which *Region of Interest* to be controlled. Function *RegionSelector* enables devices capable of extracting multiple ROI from a frame out of an image, to configure the functions of those individual regions independently.

Name	AutoFeatureRegionSelector	
Category	AutoFeatureControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	BalanceWhiteAuto	Selected functions will control the region for <i>BalanceWhiteAuto</i> and <i>ColorTransformationAuto</i> algorithm.
	BrightnessAuto	Selected functions will control the region for <i>GainAuto</i> and <i>ExposureAuto</i> algorithm.

11.4.7 AutoFeatureWidth

Width of the selected Auto Feature Region (in pixels).

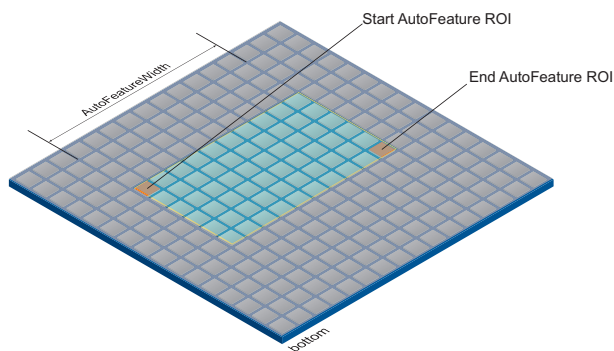

Name	AutoFeatureWidth	
Category	AutoFeatureControl	
Interface	IInteger	
Access	Read / Write	
Unit	-	
Values	Width ► 191	

11.4.8 BalanceWhiteAutoStatus

Status of *BalanceWhiteAuto*.

Name	BalanceWhiteAutoStatus	
Category	AutoFeatureControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	ColorGainsTooHigh	The <i>BalanceWhiteAuto</i> calculation failed since at least one of the calculated color gains exceeds the maximum value.
	Initial	<i>BalanceWhiteAuto</i> has never been started.
	Start	<i>BalanceWhiteAuto</i> is waiting for statistics data.
	Success	The last <i>BalanceWhiteAuto</i> calculation was successful.
	Underrun	The <i>BalanceWhiteAuto</i> calculation failed since at least one color-channel shows invalid statistic data.

11.4.9 BrightnessAutoNominalValue

Sets the nominal value for brightness in percent of full scale. It will be adjusted according to parameterization in *BrightnessAutoPriority*.

Name	BrightnessAutoNominalValue
Category	AutoFeatureControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	5 - 95 (Increment: 1)


11.4.10 BrightnessAutoPriority

This function defines the more significant auto function for brightness settings.



INFO

Provided *BrightnessAutoPriority* is set to *GainAuto*, image brightness can be increased by a higher value in *Gain*. Though this can cause image noise, but the Framerate will not be reduced.

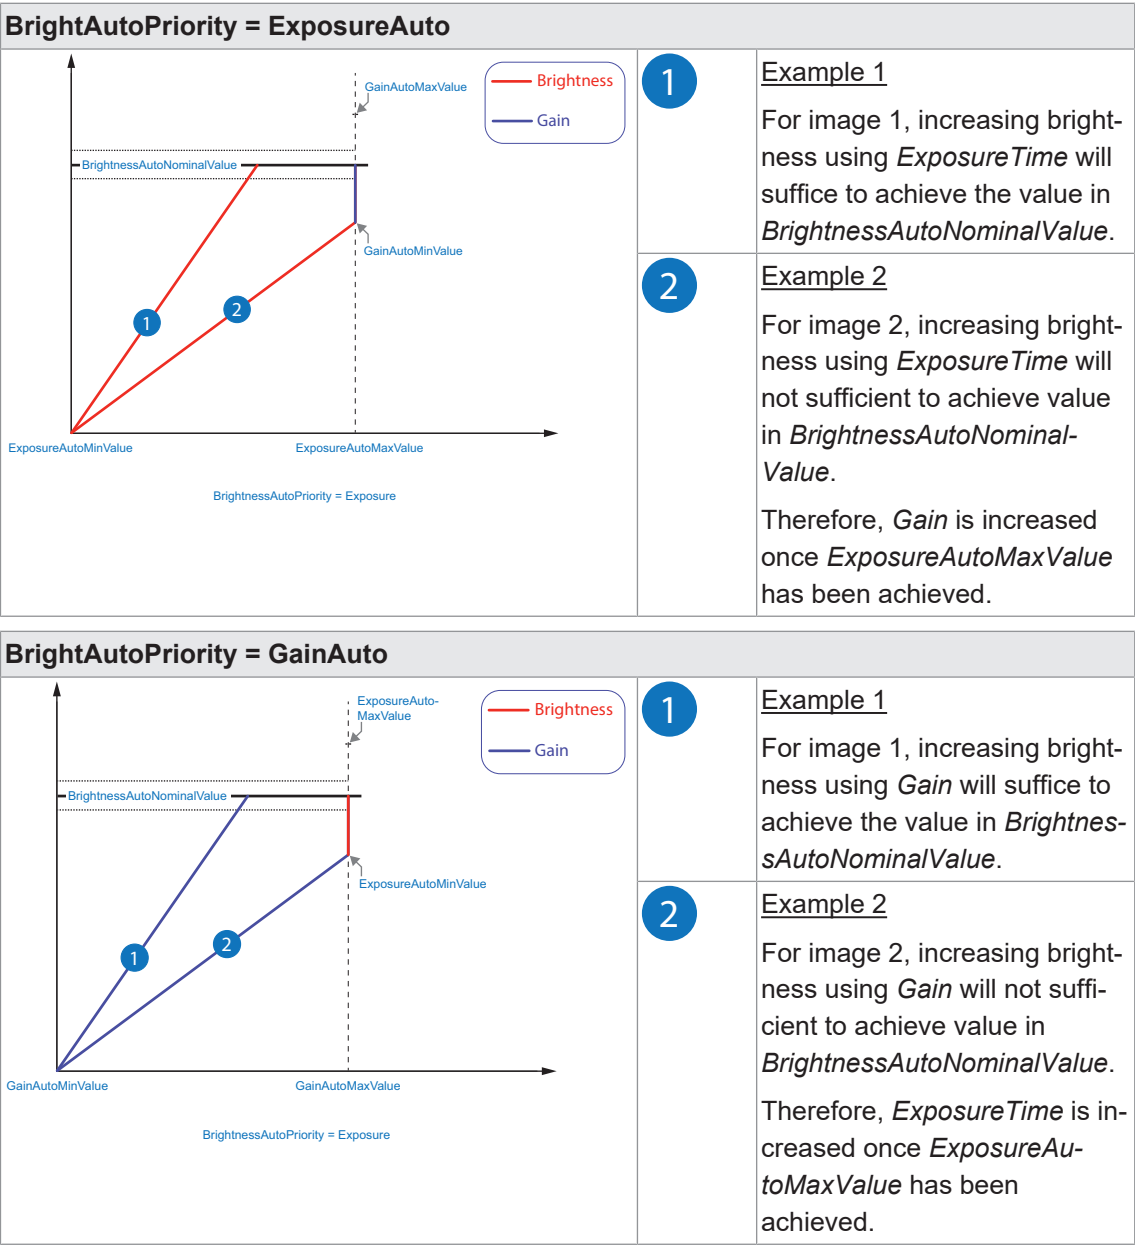

Name	BrightnessAutoPriority	
Category	AutoFeatureControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	ExposureAuto	<i>ExposureAuto</i> has highest priority and will be modified first.
	GainAuto	<i>GainAuto</i> has highest priority and will be modified first.

11.4.11 ExposureAutoMaxValue

Maximal value of *ExposureTime* calculable by exposure auto algorithm.

Name	ExposureAutoMaxValue
Category	AutoFeatureControl
Interface	IFloat
Access	Read / Write
Unit	µs
Values	ExposureTime ▶ 93

11.4.12 ExposureAutoMinValue

Minimal value of *ExposureTime* calculable by exposure auto algorithm.

**INFO**

Enabled *ShortExposureTimeEnable* will be ignored.

Name	ExposureAutoMinValue
Category	AutoFeatureControl
Interface	IFloat
Access	Read / Write
Unit	µs
Values	ExposureTime ▶ 93

11.4.13 GainAutoMaxValue

Maximal value of *Gain* calculable by gain auto algorithm.

Name	GainAutoMaxValue
Category	AutoFeatureControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	Gain ▶ 106

11.4.14 GainAutoMinValue

Minimal value of *Gain* calculable by gain auto algorithm.


Name	GainAutoMinValue
Category	AutoFeatureControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	Gain ▶ 106

11.5 Category: ChunkDataControl

Chunk is a camera-generated data packet which is integrated into the *Payload* of each image if *Chunk Mode* is enabled. This integrated data packet includes different image settings. Baumer GAPI can read out the *Chunk*.


Image Data

Only image data is transferred, no *Chunk* data.

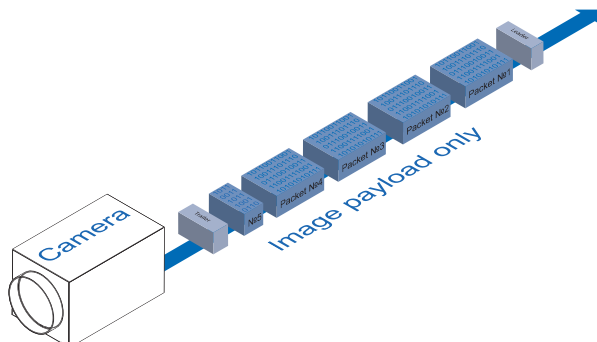


Chunk

Only *Chunk* data is transferred, no image data.

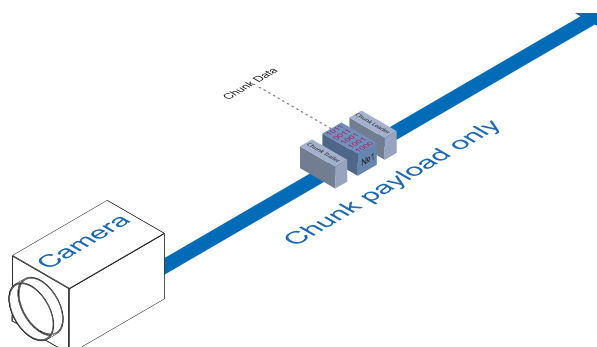

Extended Chunk

Chunk and image data transfer. *Chunk* data comes in the last data packet.

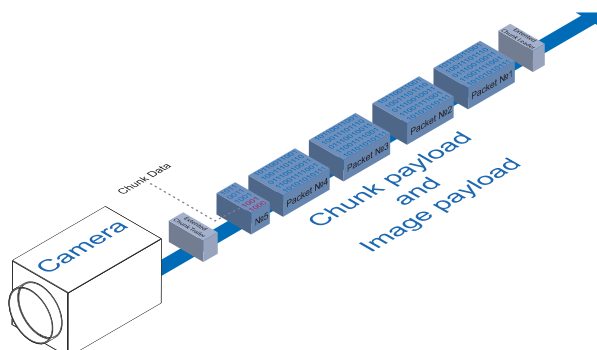

11.5.1 ChunkEnable

Enables the inclusion of the selected *Chunk* data in the *Payload* of the image.



INFO

The camera must be stopped before this feature can be edited.



INFO

Use *ChunkSelector* to select the required *Chunk*.

Name	ChunkEnable
Category	ChunkDataControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.5.2 ChunkModeActive

Enables data inclusion of *Chunk* into *Payload* of the image.



INFO

The camera must be stopped before this feature can be edited.

Name	ChunkModeActive
Category	ChunkDataControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.5.3 ChunkSelector

Selects which *Chunk* to enable or control.

Name	ChunkSelector
Category	ChunkDataControl
Interface	IEnumeration
Access	Read only
Unit	-
Values	see table(s) below

VCXG.2

Values (Features)	
Binning (BinningHorizontal, BinningHorizontalMode, BinningSelector, BinningVertical, BinningVerticalMode)	ImageControl (BrightnessCorrection, DefectPixelCorrection, LUTSelector, LUTEnable, ReverseX, ReverseY)
BlackLevel	LineStatusAll
CounterValue	OffsetX
DeviceTemperature	OffsetY
ExposureTime	PixelFormat
FrameID	SequencerSetActive
Gain	Timestamp
Height	Width
Image	

VCXG.2.XC

Values (Features)	
Binning (BinningHorizontal, BinningHorizontalMode, BinningSelector, BinningVertical, BinningVerticalMode)	ImageControl (BrightnessCorrection, DefectPixelCorrection, LUTSelector, LUTEnable, ReverseX, ReverseY)
BlackLevel	LineStatusAll
CounterValue	OffsetX
DeviceTemperature	OffsetY
ExposureTime	PixelFormat
FrameID	SequencerSetActive
Gain	Timestamp
Height	Width
Image	

VCXG.2.I

Values (Features)	
Binning (BinningHorizontal, BinningHorizontalMode, BinningSelector, BinningVertical, BinningVerticalMode)	ImageControl (BrightnessCorrection, DefectPixelCorrection, LUTSelector, LUTEnable, ReverseX, ReverseY)
BlackLevel	LineStatusAll
CounterValue	OffsetX
DeviceTemperature	OffsetY
ExposureTime	PixelFormat
FrameID	SequencerSetActive
Gain	Timestamp
Height	Width
Image	


VCXU.2

Values (Features)	
Binning (BinningHorizontal, BinningHorizontalMode, BinningSelector, BinningVertical, BinningVerticalMode)	ImageControl (BrightnessCorrection, DefectPixelCorrection, LUTSelector, LUTEnable, ReverseX, ReverseY)
BlackLevel	LineStatusAll
CounterValue	OffsetX
DeviceTemperature	OffsetY
ExposureTime	PixelFormat
FrameID	SequencerSetActive
Gain	Timestamp
Height	Width
Image	

11.6**Category: ColorTransformationControl (color cameras only)**

Category that contains the color transformation control functions.

The color processing is realized by 4 modules.

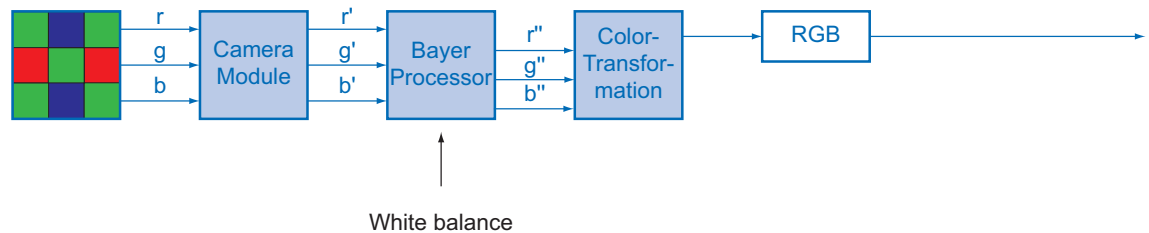

The sensor color signals r (red), g (green) and b (blue) are amplified in total and digitized within the Camera Module.

Within the *Bayer Processor*, the raw signals r', g' and b' are amplified by color-channel-specific factors. Next is interpolating the missing color values which will generate new ones (r'', g'', b'').

Color Transformation is next. Here, the previously generated color signals r'', g'' and b'' are converted to optimized RGB (color adjustment as physical balance of the spectral sensitivities).

11.6.1 ColorTransformationAuto

Controls the mode for automatic adjusting the gains of the active transformation matrix.

**INFO**

Function *ColorTransformationAuto* can always be enabled which will make the camera calculate appropriate color matrices.

If the range of the estimated illumination to the measured reference illuminations exceeds a certain threshold, a white balance is triggered even if *BalanceWhiteAuto* = *off*.

However, matrices in image format *RAW* are not applied.

Name	ColorTransformationAuto	
Category	ColorTransformationControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Continuous	Color conversion is constantly adjusted by the camera. <i>Color Gains</i> not adjustable.
	Off	Color transformation is user controlled using the various Color transformation functions.
	Once	Color conversion setting is automatically one-time by the camera. Once converged, it automatically returns to the <i>Off</i> state. <i>Color Gains</i> not adjustable.

11.6.2 ColorTransformationEnable

Activates the selected Color Transformation module.

Name	ColorTransformationEnable
Category	ColorTransformationControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.6.3 ColorTransformationFactoryListSelector

Selects the *OptimizedMatrix* for the desired color temperature. All calculated color values are based on the sRGB color space.

When setting an *OptimizedMatrix*, the *ColorGains* are also set for the white point matching the light.



INFO

We recommend to carry out a white balance after setting a matrix.

Name	ColorTransformationFactoryListSelector
Category	ColorTransformationControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	See table(s) below

VCXx.2

Values	Description
OptimizedMatrixFor3000K	Matrix is set to color temperature 3000K.
OptimizedMatrixFor5000K	Matrix is set to color temperature 5000K.
OptimizedMatrixFor6500K	Matrix is set to color temperature 6500K.
OptimizedMatrixFor9500K	Matrix is set to color temperature 9500K.

11.6.4 ColorTransformationOutputColorSpace

Output the color space of the camera.

Name	ColorTransformationOutputColorSpace
Category	ColorTransformationControl
Interface	IString
Access	Read only
Unit	-
Values	Color space

11.6.5 ColorTransformationResetToFactoryList

Resets *ColorTransformation* to the selected *ColorTransformationFactoryList*.

Name	ColorTransformationResetToFactoryList
Category	ColorTransformationEnable
Interface	ICommand
Access	Write
Unit	-
Values	-

11.6.6 ColorTransformationValue

Represents the selected *Gain* within the *Transformation matrix*.

Name	ColorTransformationValue
Category	ColorTransformationControl
Interface	IFloat
Access	Read only
Unit	-
Values	-8.0 – 8.0 (Increment: 1.00)

11.6.7 ColorTransformationValueSelector

Selects *Gain* of *Transformation matrix* to be accessed to within the selected *Color Transformation module*.

Name	ColorTransformationValueSelector	
Category	ColorTransformationControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Gain00	
	Gain01	
	Gain02	
	Gain10	
	Gain11	
	Gain12	
	Gain20	
	Gain21	
	Gain22	

11.7 Category: CounterAndTimerControl

This chapter lists all features that relates to control and monitoring of Counters and Timers.

11.7.1 CounterDuration

Sets the time (or number) of events prior to generating event *CounterEnd*.

Counter reaching value *CounterDuration* will output a *CounterEnd* event, the *CounterActive* signal is disabled and *Counter* stops counting until new trigger or explicit reset by *CounterReset*.

Name	CounterDuration
Category	CounterAndTimerControl
Interface	IString
Access	Read / Write
Unit	-
Values	0 ... 65535 (Increment: 1)

11.7.2 CounterEventActivation

Selects the activation mode for the *Event Source* signal.

Name	CounterEventActivation	
Category	CounterAndTimerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	RisingEdge	Counts on the rising edge of the signal.
	FallingEdge	Counts on the falling edge of the signal.
	AnyEdge	Counts on the falling or rising edge of the selected signal.

11.7.3 CounterEventSource

Select the event that will be the source to increase *Counter*.

Name	CounterEventSource
Category	CounterAndTimerControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

CounterEventSource	VCXG.2	VCXG.2XC	VCXG.2.I	VCXU.2
Counter1End	■	■	■	■
Counter2End	■	■	■	■
ExposureActive	■	■	■	■
FrameTransferSkipped	■	■	■	■
FrameTrigger	■	■	■	■
Line0	■	■	■	■
Line1	■	■	■	■
Line2	■	■	■	■
Line3	□	□	■	□
Off	■	■	■	■
TriggerSkipped	■	■	■	■

11.7.4 CounterReset

Executes software reset and start of the selected *Counter*. *Counter* starts counting events immediately after reset unless *Counter Trigger* trigger is active. *CounterReset* is to reset *Counter* independently of *CounterResetSource*. To disable *Counter* temporarily, set *CounterEventSource* = *Off*.



INFO

Note that the value of *Counter* at time of reset is automatically saved and reflects in *CounterValueAtReset*.

Name	CounterReset
Category	CounterAndTimerControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.7.5 CounterResetActivation

Selects the activation mode of the *CounterResetSource* signal.

Name	CounterResetActivation	
Category	CounterAndTimerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	RisingEdge	Resets the counter on the rising edge of the signal.
	FallingEdge	Resets the counter on the falling edge of the signal.
	AnyEdge	Resets the counter on the falling or rising edge of the selected signal.

11.7.6 CounterResetSource

Selects the signals that will be the source to reset *Counter*.

Name	CounterResetSource
Category	CounterAndTimerControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2

CounterResetSource	
Counter1End	Line1
Counter2End	Line2
Line0	Off

VCXG.2.XC

CounterResetSource	
Counter1End	Line1
Counter2End	Line2
Line0	Off

VCXG.2.I

CounterResetSource	
Counter1End	Line2
Counter2End	Line3
Line0	Off
Line1	

VCXU.2

CounterResetSource	
Counter1End	Line1
Counter2End	Line2
Line0	Off

11.7.7**CounterSelector**

Selects which *Counter* to configure.

Name	CounterSelector	
Category	CounterAndTimerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Counter1	Selects Counter 1.
	Counter2	Selects Counter 2.

11.7.8 CounterValue

Reads or writes the current value of the selected *Counter*. Writing to *CounterValue* is typically used to define the start value.

Name	CounterValue
Category	CounterAndTimerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 65535 (Increment: 1)

11.7.9 CounterValueAtReset

Reads the value of the selected *Counter* when being reset by trigger or explicit *CounterReset* command.

It represents the last *Counter* value saved before *Counter* reset.

Name	CounterValueAtReset
Category	CounterAndTimerControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 65535 (Increment: 1)

11.7.10 FrameCounter

FrameCounter is part of *Chunk (FrameID)* and added to every frame if *Chunk Mode* is enabled. It is hardware-generated and used to verify that every camera frame is transmitted to the PC and received in the right order.

FrameCounter can be set to a defined value by writing it into the *FrameCounter*.

Name	FrameCounter
Category	CounterAndTimerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 9223372036854775807 (Increment: 1)

11.7.11 TimerDelay

Defines the delay time (in microseconds) to be applied at trigger reception prior to starting the *Timer*.

Name	TimerDelay
Category	CounterAndTimerControl
Interface	IFloat
Access	Read / Write
Unit	µs
Values	0 ... 2,000,000.000000 (Increment: 1.00)

11.7.12 TimerDuration

Sets the duration (in microseconds) of the *Timer* pulse.

Name	TimerDuration
Category	CounterAndTimerControl
Interface	IFloat
Access	Read / Write
Unit	µs
Values	see table(s) below

Values [TimerDuration]

10.000000 ... 2,000,000.000000 (Increment: 1.00)

11.7.13 TimerSelector

Selects which *Timer* to configure.

Name	TimerSelector	
Category	CounterAndTimerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Timerx	Selects Timer x.

11.7.14 TimerTriggerActivation

Selects the trigger activation mode to start the *Timer*.

Name	TimerTriggerActivation	
Category	CounterAndTimerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	RisingEdge	Starts counting on the rising edge of the selected trigger signal.
	FallingEdge	Starts counting on the falling edge of the selected trigger signal.
	AnyEdge	Starts counting on the falling or rising edge of the selected trigger signal.

11.7.15 TimerTriggerSource

Selects the trigger source to start the *Timer*.

Name	TimerTriggerSource
Category	CounterAndTimerControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2

TimerTriggerSource	
Action1	Line0
ExposureEnd	Off
ExposureStart	Software
FrameTransferSkipped	TriggerSkipped

VCXG.2.XC

TimerTriggerSource	
Action1	Line0
ExposureEnd	Off
ExposureStart	Software
FrameTransferSkipped	TriggerSkipped

VCXG.2.I

TimerTriggerSource	
Action1	Line2
ExposureEnd	Line3
ExposureStart	Off
FrameTransferSkipped	Software
Line0	TriggerSkipped
Line1	

VCXU.2

TimerTriggerSource	
ExposureEnd	Off
ExposureStart	Software
FrameTransferSkipped	TriggerSkipped
Line0	

11.8 Category: CustomDataControl

The category contains the custom data specific features.

11.8.1 CustomData

The feature holds one byte of custom special data.

Name	CustomData	
Category	CustomDataControl	
Interface	Integer	
Access	Read / Write	
Unit	-	
Values	0x0 ... 0xFF (Increment: 1)	

11.8.2 CustomDataConfiguration

Controls whether the configuration mode for user-defined data is enabled.

Name	CustomDataConfiguration	
Category	CustomDataControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	Disables configuration mode for user-defined data.
	On	Enables configuration mode for user-defined data.

11.8.3 CustomDataSelector

The feature selects the index of the custom data byte array.

Name	CustomData
Category	CustomDataControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 127 (Increment: 1)

11.9 Category: DeviceControl

Category for device information and control.

11.9.1 DeviceCharacterSet

Character set used by the strings of the device's bootstrap registers.

Name	DeviceCharacterSet	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	ASCII	Device use ASCII character set.
	UTF16	Device use UTF16 character set.
	UTF8	Device use UTF8 character set.

11.9.2 DeviceEventChannelCount

Indicates the number of camera-supported *Event Channel*.

Name	DeviceEventChannelCount
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 4294967295 (Increment: 1)

11.9.3 DeviceFamilyName

Identifier of the product family of the device.

Name	DeviceFamilyName
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	device family name

11.9.4 DeviceFirmwareVersion

Version of the firmware in the device.

Name	DeviceFirmwareVersion
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	e.g. CID:000057/PID:11194280

11.9.5 DeviceIndicatorMode

Controls the behavior of the activity indicators (e.g. LEDs) visualizing the device status.

Name	DeviceIndicatorMode	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Active	Indicators are active and show the related status.
	ErrorStatus	Indicators remain inactive unless in the event of error.
	Inactive	Indicators are inactive (Off).



INFO

This function is implemented in the following cameras with firmware v4.4 and higher. The firmware version can be seen at: *Category DeviceControl - DeviceFirmwareVersion*.

VCXG.2

Camera type	DeviceIndicatorMode
Monochrome / Color	
VCXG.2-32M / VCXG.2-32C	■
VCXG.2-65M.R / VCXG.2-65C.R	■
VCXG.2-201M.R / VCXG.2-201C.R	■

VCXU.2

Camera type	DeviceIndicatorMode
Monochrome / Color	
VCXU.2-50M / VCXU.2-50C	■
VCXU.2-57M / VCXU.2-57C	■

11.9.6 DeviceGenCPVersionMajor

Major version of the GenCP protocol supported by the device.

Name	DeviceGenCPVersionMajor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 65535 (Increment: 1)

11.9.7 DeviceGenCPVersionMinor

Minor version of the GenCP protocol supported by the device.

Name	DeviceGenCPVersionMinor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 65535 (Increment: 1)

11.9.8 DeviceLinkSelector

Selects which Link of the device to control.

Generally, a device has only one Link that can be composed of one or many connections. But if there are many, this selector can be used to target a particular Link of the device with certain functions.

Name	DeviceLinkSelector
Category	DeviceControl
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.9.9 DeviceLinkSpeed

Indicates the speed of transmission negotiated on the specified link.

Name	DeviceLinkSpeed
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	Bps
Values	≥ 0

11.9.10 DeviceLinkThroughputLimit

Limits the maximum bandwidth of the data that will be streamed out by the device on the selected Link. If necessary, delays will be uniformly inserted between transport layer packets in order to control the peak bandwidth.

Name	DeviceLinkThroughputLimit	
Category	DeviceControl	
Interface	Integer	
Access	Read / Write	
Unit	-	
Values	GigE:	1.250.000 ... 1.250.000.000 (Increment: 12.500.000)
	5GigE:	1.250.000 ... 6.250.000.000 (Increment: 12.500.000)
	10GigE:	1.250.000 ... 1.250.000.0000 (Increment: 12.500.000)
	USB3:	1.000.000 ... 4.000.000.000 (Increment: 1000000)

11.9.11 DeviceManufacturerInfo

Manufacturer-specific device information.

The content might come as follows:

Firmware (F) / FPGA (C) / BL3-Version (BL)

Name	DeviceManufacturerInfo
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	Example. F:00007F9A/C:0180802D/BL3.8:00000081

11.9.12 DeviceModelName

Model name of the device.

Name	DeviceModelName
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	Model name of the device.

11.9.13 DeviceRegistersEndiannes

Endianess of the register of the device.

Name	DeviceRegisterEndiannes	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	Big	Device registers are big Endian.
	Little	Device registers are little Endian.

11.9.14 DeviceReset

Resets the device to its power up state.

**INFO**

The execution of this feature may take several seconds.

Name	DeviceReset
Category	DeviceControl
Interface	IComand
Access	Write only
Unit	-
Values	-

11.9.15 DeviceResetToDeliveryState

By executing this feature, the camera is set to the factory settings.

**INFO**

The camera-stored settings (e.g. *UserSets*) will be lost.

**INFO**

After execution, the camera is rebooted. Default is restored in the IP settings, which may result in the camera being no longer accessible under the known IP network card configuration after reboot.

As a consequence, a ForceIP may be required to access the camera again.

Name	DeviceResetToDeliveryState
Category	DeviceControl
Interface	IComand
Access	Write only
Unit	-
Values	-

11.9.16 DeviceSFNCVersionMajor

Primary version of *Standard Features Naming Convention* used to create the device GenICam XML(**X**.x.x).

Name	DeviceSFNCVersionMajor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 9223372036854775807 (Increment: 1)

11.9.17 DeviceSFNCVersionMinor

Minor version of *Standard Features Naming Convention* used to create the device *GenICam XML(x.X.x.)*.

Name	DeviceSFNCVersionMinor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 9223372036854775807 (Increment: 1)

11.9.18 DeviceSFNCVersionSubMinor

Sub version of *Standard Features Naming Convention*, used to create the device *GenICam XML(x.x.X.)*.

Name	DeviceSFNCVersionSubMinor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 9223372036854775807 (Increment: 1)

11.9.19 DeviceScanType

Scan type of the sensor of the device.

Name	DeviceScanType
Category	DeviceControl
Interface	Enumeration
Access	Read only
Unit	-
Values	Areascan 2D Sensor.

11.9.20 DeviceSensorType

This feature specifies the type of the sensor.

Name	DeviceSensorType
Category	DeviceControl
Interface	Enumeration
Access	Read only
Unit	-
Values	CCD CCD sensor.
	CMOS CMOS sensor.

11.9.21 DeviceSerialNumber

Device's serial number. This string is a unique identifier of the device.

Name	DeviceSerialNumber
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	e.g. 1117281217

11.9.22 DeviceStreamChannelCount

Indicates the number of streaming channels supported by the device.

Name	DeviceStreamChannelCount
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 4294967295 (Increment: 1)

11.9.23 DeviceStreamChannelEndianness

Endianness of multi-byte pixel data for this stream.

Name	DeviceStreamChannelEndianness	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Big	Endianness of multi-byte pixel data for this stream is big Endian.
	Little	Endianness of multi-byte pixel data for this stream is little Endian.

11.9.24 DeviceStreamChannelSelector

Selects which *Stream Channel* to control.

Name	DeviceStreamChannelSelector
Category	DeviceControl
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.9.25 DeviceStreamChannelType

Reports the type of the *Stream Channel*.

Name	DeviceStreamChannelType	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	Receiver	Data stream receiver channel.
	Transmitter	Data stream transmitter channel.

11.9.26 DeviceTLType

Transport Type of the device.

Name	DeviceTLType	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	GigEVision	GigE Vision.
	USB3Vision	USB3 Vision.
	CameraLink	Camera Link.

11.9.27 DeviceTLVersionMajor

Major version of the Transport Layer (GigE Vision® version) of the device.

Name	DeviceTLVersionMajor	
Category	DeviceControl	
Interface	IInteger	
Access	Read only	
Unit	-	
Values	≥ 0 (X .x.x.)	

11.9.28 DeviceTLVersionMinor

Minor version of the Transport Layer (GigE Vision® version) of the device.

Name	DeviceTLVersionMinor	
Category	DeviceControl	
Interface	IInteger	
Access	Read only	
Unit	-	
Values	≥ 0 (x. X .x.)	

11.9.29 DeviceTLVersionSubMinor

Minor version of the Transport Layer (GigE Vision® version) of the device.

Name	DeviceTLVersionSubMinor
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	-
Values	≥ 0 (x.x.X)

11.9.30 DeviceTemperature

Device temperature in degrees Celsius (°C). Measured at the location selected by *DeviceTemperatureSelector*.

Name	DeviceTemperature
Category	DeviceControl
Interface	IFloat
Access	Read only
Unit	°C
Values	Device specific (e.g. -127.0 ... 127.0)

11.9.31 DeviceTemperatureExceeded

Reports whether the camera has reached the critical temperature range since last switchon. Value is retained until next *Reset* or disconnecting power supply and would lock feature . *AcquisitionStart*.

Name	DeviceTemperatureExceeded
Category	DeviceControl
Interface	IBoolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.9.32 DeviceTemperatureSelector

Defines the temperature measuring point.

Name	DeviceTemperatureSelector
Category	DeviceControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXx.2

Values [DeviceTemperatureSelector]	
InHouse	Inside temperature of camera housing.
Sensor	Temperature at image sensor. INFO: Function is accessible with SWIR cameras $\geq$ Rel. 4.2 and with all other cameras $\geq$ Rel. 4.3 integrating Sony Gen4 sensors..

11.9.33**DeviceTemperatureStatus**

Reports the current camera temperature to the temperature sensor *InHouse*.

Name	DeviceTemperatureStatus	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	Normal	Device operation in standard temperature range.
	High	Device operation in higher temperature range.
	Exceeded	Device operation in the critical temperature range.

11.9.34**DeviceTemperatureStatusTransition**


Temperature threshold for selected status transition (*DeviceTemperatureStatusTransitionSelector*) in degrees Celsius (°C).

Name	DeviceTemperatureStatusTransition	
Category	DeviceControl	
Interface	IInteger	
Access	Read / Write	
Unit	°C	
Values	-128.0 ... 127.0 (depending on <i>DeviceTemperatureStatusTransitionSelector</i>)	

11.9.35 DeviceTemperatureStatusTransitionSelector

Selects which temperature transition is controlled by the *DeviceTemperatureStatusTransition* feature.

Name	DeviceTemperatureStatusTransitionSelector
Category	DeviceControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

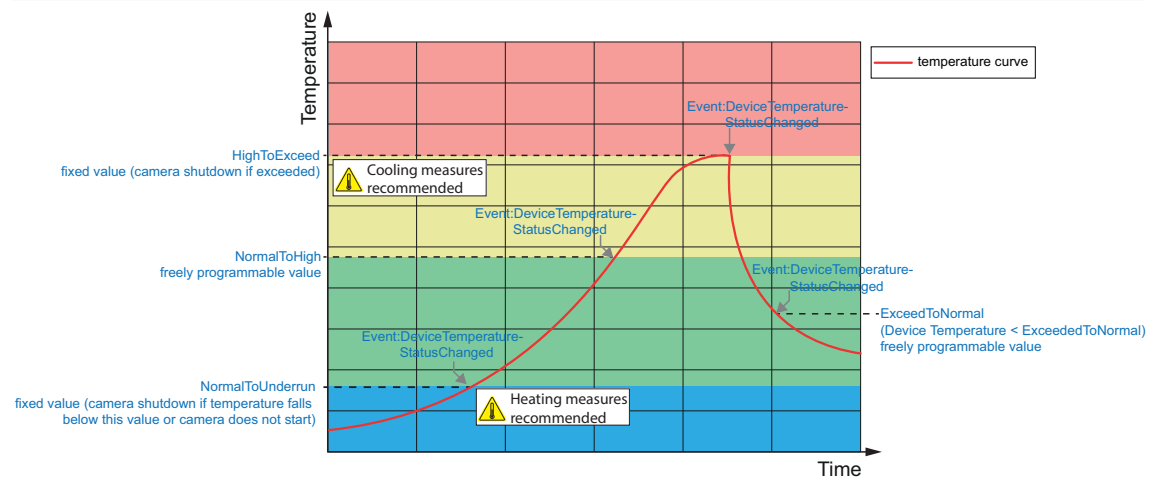

Values [DeviceTemperatureStatusTransitionSelector]

ExceededToNormal	Temperature threshold for transition from status <i>Exceeded</i> back to status <i>Normal</i> .
HighToExceeded	Temperature threshold for transition from status <i>High</i> to status <i>Exceeded</i> .
NormalToHigh	Temperature threshold for transition from status <i>Normal</i> to status <i>High</i> .
NormalToUnderrun	Temperature threshold for transition from status <i>Normal</i> to status <i>Underrun</i> .
Function supported by models (.I).	

11.9.36 DeviceTemperatureUnderrun

Returns *true* if device operation is within the critical low- temperature range.



INFO

This function is supported by the models (.I).

Name	DeviceTemperatureUnderrun
Category	DeviceControl
Interface	IBoolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.9.37 DeviceType

Returns the device type.

Name	DeviceType	
Category	DeviceControl	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	Transmitter	Data stream transmitter device.

11.9.38 DeviceUserID

User-programmable device identifier.

Name	DeviceUserID	
Category	DeviceControl	
Interface	IString	
Access	Read / Write	
Unit	-	
Values	see table(s) below	

VCXG.2 / VCXG.2.XC / VCXG.2.I

	DeviceUserID
Value	GiGE: 16 Byte e.g. "Camera 1"

VCXU.2

	DeviceUserID
Value	USB: 64 Byte e.g. "Camera 1"

11.9.39 DeviceVendorName

Name of the manufacturer of the device.

Name	DeviceVendorName	
Category	DeviceControl	
Interface	IString	
Access	Read only	
Unit	-	
Values	Manufacturer name.	

11.9.40 DeviceVersion

Version of the device.

Name	DeviceVersion
Category	DeviceControl
Interface	IString
Access	Read only
Unit	-
Values	e.g. R2.0.0

11.9.41 ReadOutTime

Readout time of one image from the sensor in μs , with the current image settings.

**INFO**

The *ReadOutTime* depends on:

- *OffsetY*
- *Height*
- *PixelFormat*
- *SensorBinning*(if supported)

Name	ReadOutTime
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	μs
Values	0 ... 65535 (Increment: 1)

11.9.42 TimestampLatch

Saves current timestamp into *TimestampLatchValue*.

Name	TimestampLatch
Category	DeviceControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.9.43 TimestampLatchValue

Returns the saved value of counter *Timestamp*.

Name	TimestampLatchValue
Category	DeviceControl
Interface	Integer
Access	Read only
Unit	ns
Values	0 ... 9223372036854775807 (Increment: 8 (GigE) / 10 (USB))

11.9.44 USB2SupportEnable (USB cameras only)

Enable or disable the streaming support for USB 2.0.

**NOTICE****Activation of the image transmission with USB2 connection**

If the camera is connected to an USB 2.0 port image transmission is disabled by default. The camera consumes more than 2.5W which is the maximum allowed by the USB 2.0 specification. But there is a possibility to activate the image transmission at your own risk!

This activation could damage your computer's hardware!

Steps to enable image transmission**Instruction:**

- a) Open the camera in *Camera Explorer*.
- b) Select profile *GenICam Guru* (only *Camera Explorer* < v3.0).
- c) Enable the feature *USB2SupportEnable* in category *DeviceControl*.
- d) Disconnect the data connection of the camera to the USB 2.0 port.
- e) Connect the data connection of the camera to the USB 2.0 port.

Result:

- ✓ Images will be transmitted via the USB 2.0 port.


Name	USB2SupportEnable
Category	DeviceControl
Interface	Boolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.10 Category: DigitalIOControl

Category that contains the digital input and output control functions.

Trigger – General Information

Trigger signals are used to synchronize the camera exposure and a machine cycle or, in case of a software trigger, to take images at predefined time intervals. Different trigger sources can be used here.

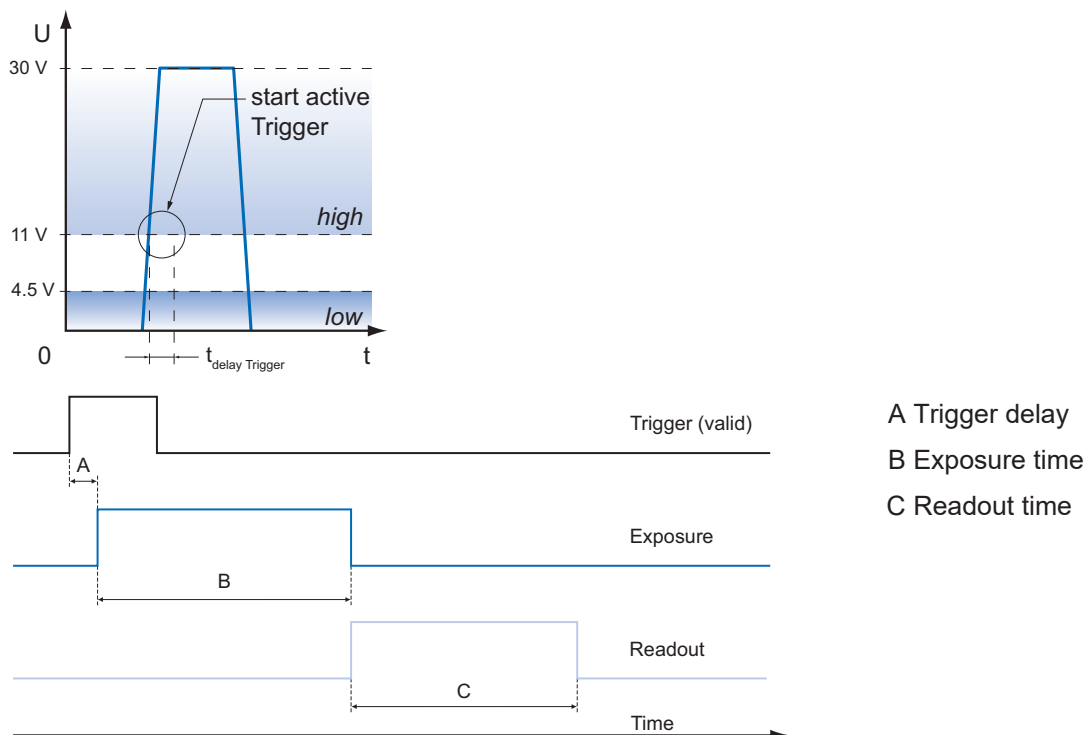


Trigger delay – General Information

Trigger delay (*TriggerDelay*) is the user-defined delay between the given trigger impulse and image acquisition.

Your benefits:

- No need for an external trigger sensor to be perfectly aligned
- Different objects can be captured without hardware changes

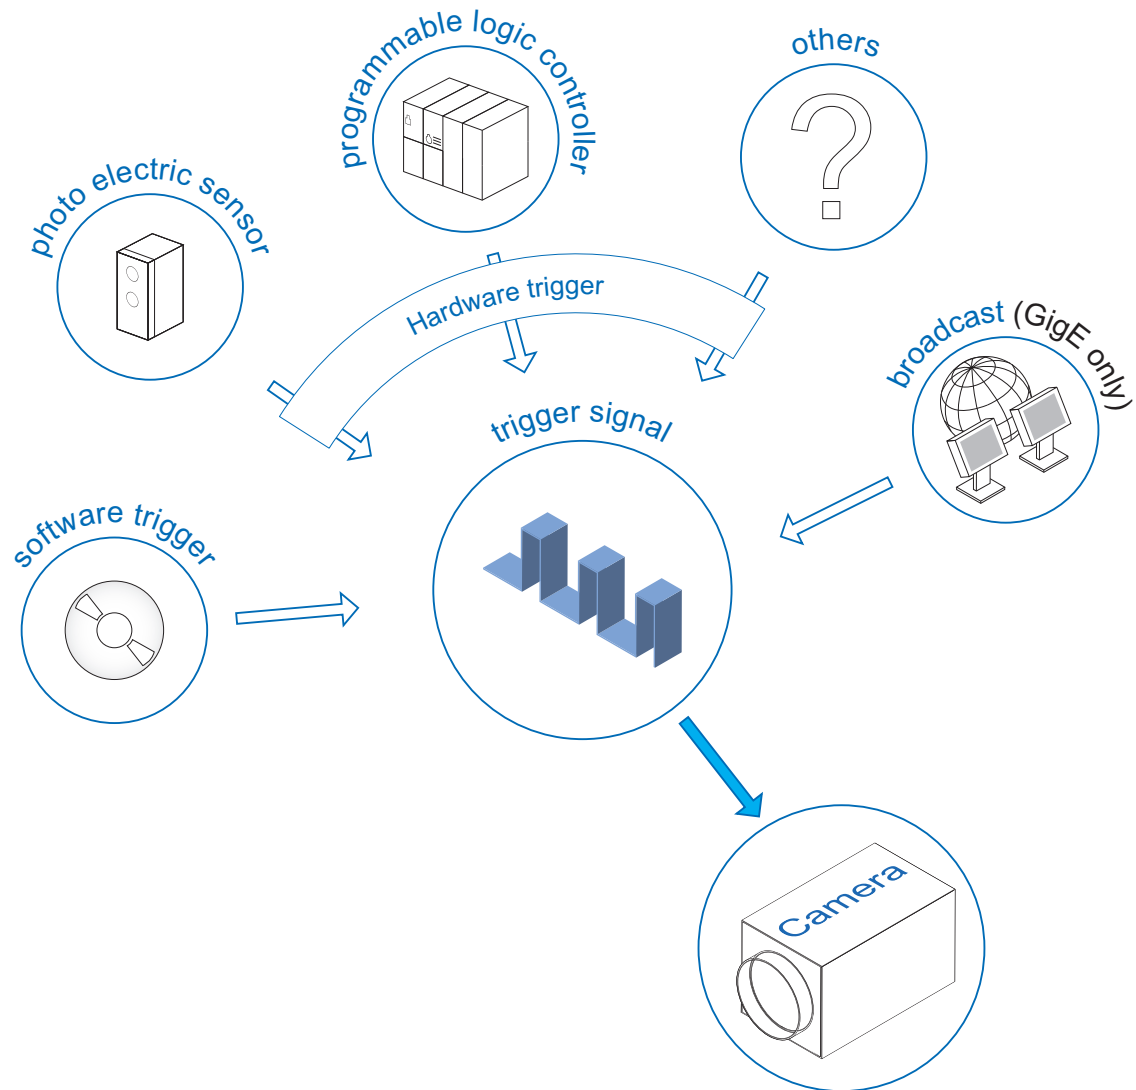Trigger Source (examples of possible trigger sources)

Each trigger source must be enabled separately. If trigger mode (*TriggerMode*) is enabled, hardware trigger is enabled by default.

Debouncer (*LineDebouncerHighTimeAbs* / *LineDebouncerLowTimeAbs*)

The basic idea behind this functions was to separate interfering signals (short peaks) from valid square wave signals, which can be important in industrial environments. Debounce will filter invalid signals while others exceeding the user-defined test time *tDebounceHigh* will be recognized and transferred to the camera to induce a trigger.

In order to detect the end of a valid signal and filter out possible jitters within the signal, a second testing time *tDebounceLow* was introduced. The point in time is user-defined. If the signal value falls to status *low* and does not rise within *tDebounceLow*, this is recognized as the end of the signal.

**INFO**

Please note that the edges of valid trigger signals are shifted by *tDebounceHigh* and *tDebounceLow*!

Depending on these two points in time, the trigger signal can be temporally extended or compressed.


Incoming signals
(valid and invalid)



Debouncer



Filtered signal

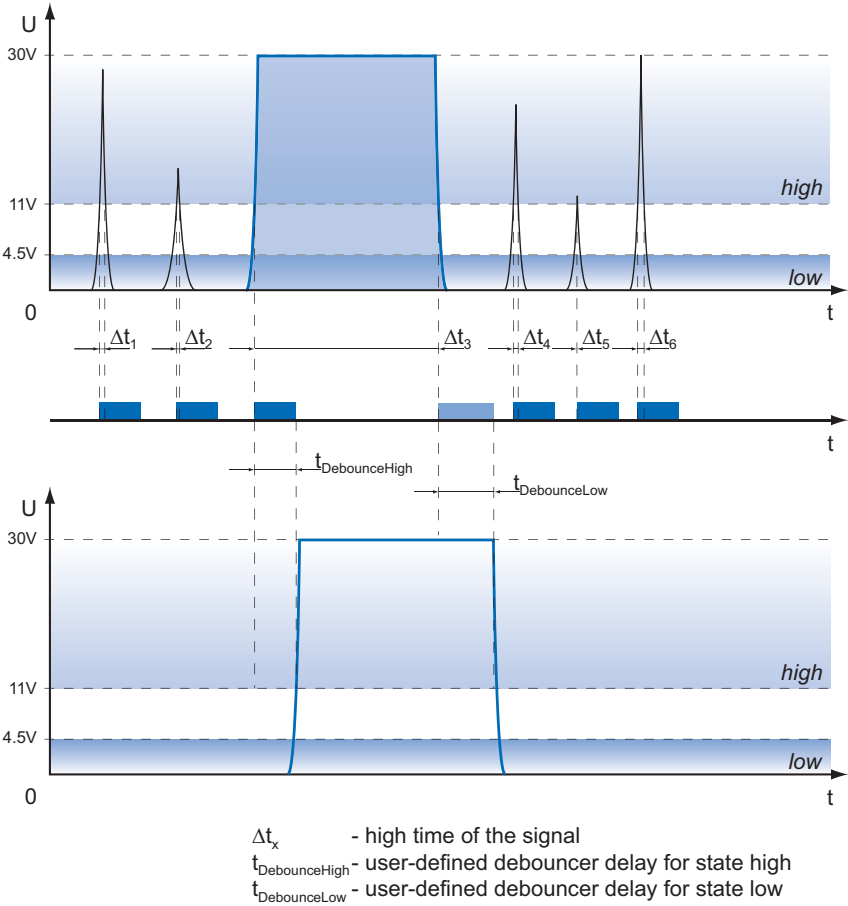

11.10.1 LineDebouncerHighTimeAbs

Sets the absolute value of the selected line debounce time in microseconds for switching from *low* to *high*.

Name	LineDebouncerHighTimeAbs
Category	DigitalIOControl
Interface	IFloat
Access	Read / Write
Unit	μs
Values	see table(s) below
Values [LineDebouncerHighTimeAbs]	
0.000000 - 5,000.000000 (Increment: 1.00)	

11.10.2 LineDebouncerLowTimeAbs

Sets the absolute value of the selected line debounce time in microseconds for switching from *high* to *low*.

Name	LineDebouncerLowTimeAbs
Category	DigitalIOControl
Interface	IFloat
Access	Read / Write

Unit	μs
Values	see table(s) below
Values [LineDebouncerHighTimeAbs]	
0.000000 - 5,000.000000 (Increment: 1.00)	

11.10.3 LineFormat

Controls the current electrical format of the selected physical Input or Output.

LineFormat switchover will adapt the output behavior to the respective system.



INFO

In all modes the supply voltage for the Outputs (Pin 11, 12) must to be connected for function!

Name	LineFormat
Category	DigitalIOControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

The following Line Formats are available for each Output:

Line Format	Description	Circuit
Push-Pull	This mode is used to create steep sharp edges for dynamic switching operations. <u>Advantage:</u> Steep flanks in both directions. <u>Disadvantage:</u> For long cable more susceptible to ground bounce and potential differences.	
Open-Source	Typical applications for this mode are: PLC input, control of illumination connected to ground. <u>Advantage:</u> Stable at long cable lengths and potential differences. <u>Disadvantage:</u> The falling edge has a lower slope due to parasitic capacitances. Switching off is slower due to this lower slope.	

Line Format	Description	Circuit
Open-Drain	A typical case of application for this mode is a illumination control connected to plus. <u>Advantage:</u> Stable at long cable lengths and potential differences. <u>Disadvantage:</u> The rising edge has a lower slope due to parasitic capacitances. Switching off is slower due to this lower slope.	
Tri-State	In this mode, the output is disabled.	

11.10.4

LineInverter

Controls signal inversion of the selected line *Input* or *Output*.

Name	LineInverter	
Category	DigitalIOControl	
Interface	IBoolean	
Access	Read / Write	
Unit	-	
Values	true = 1 (On) false = 0 (Off)	

11.10.5

LineMode

Controls if the physical Line is used to input or output a signal.

Name	LineMode	
Category	DigitalIOControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Input	The selected physical line is used to input an electrical signal.
	Output	The selected physical line is used to output an electrical signal.

11.10.6 LinePWMConfigurationMode

Activates the Features *LinePWMMaxDuration* and *LinePWMMaxDutyCycle*.

Name	LinePWMConfigurationMode	
Category	DigitalIOControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	Disables the <i>PWM configuration mode</i> .
	On	Enables the <i>PWM configuration mode</i> .

Function *Pulse Width Modulated Outputs (PWM)* is for lighting system control or control of any illumination directly connected to the camera.

The set *LineSource* serves as controller signal.

**NOTICE****Erroneous settings can destroy the illumination!**

The outputs of the camera are protected against destruction. Please follow the information in the data sheets for your illumination. Contact the manufacturer of the illumination if you are unsure about admissible parameters.

Setting a output to a specific illumination**Condition:**

⇒ Correctly connected illumination

Instruction:

- Set *LinePWMConfigurationMode* to *true*.
- Set at *LinePWMMaxDutyCycle* and *LinePWMMaxDuration* the maximum admissible parameters of your illumination (e.g. Falcon FLDR-i90B-IR24). $\text{LinePWMMaxDutyCycle} = 10 \% / \text{LinePWMMaxDuration} = 10 \text{ ms}$
- Set *LinePWMConfigurationMode* to *false*.

Result:

- ✓ The values set in step b) are now the max. admissible parameters.

**INFO**

Using the settings of the above example ($\text{LinePWMMaxDutyCycle} = 10 \% / \text{LinePWMMaxDuration} = 10 \text{ ms}$) means that the connected lighting must be disabled for 90 ms. Consequently, 10 Hz suffice for triggering. Using a higher trigger frequency would start image acquisition by the camera, but not the camera-connected lighting. This will protect the lighting system.

**⚠ DANGER****Use in humid environments requires protection class IP67**

Risk of electric shock. Electric shock can cause fatal or serious injury.

- Use only permitted if compliant to pollution degree 2 and overvoltage category 2.
- The M12 connectors must comply with the IEC 61076-2-101 standard.
- Tests of the dielectric strength and withstand voltage of the combination connector-mating connector must consider 60 V in compliance with DIN EN 60664-1:2008-01.

Electrical specifications (Output Line 4 ... Line 7) (VCXG.2.I)

U_{EXT} :	12 V - 20 % ... 48 V + 10 % DC
I_{OUT} :	- max. 1.5 A permanent in total or per each output - Pulse 40 % of the period, max. 2.5 A (t_{ON} max 1 s) - $t_{ON} = < 0.2 \mu s$ / $t_{OFF} = < 0.2 \mu s$ - max. Frequency: 500 kHz

**INFO**

In case of overload or short circuit, the outputs are disabled. To re-enable the outputs, disconnect Power (IO) (pin 12) from power supply or execute *DeviceReset*.

11.10.7 LinePWMDuration

Sets the pulse time in μs , with which the illumination is pulsed.

Name	LinePWMDuration
Category	DigitalIOControl
Interface	Integer
Access	Read / Write
Unit	μs
Values	1 - 5000 (Increment: 1)

11.10.8 LinePWMDutyCycle

Sets the duty cycle (ratio of pulse duration to period time duration) in %. This value is specified by the connected illumination.

Name	LinePWMDutyCycle
Category	DigitalIOControl
Interface	Integer
Access	Read / Write
Unit	%
Values	1 - 100 (Increment: 1)

11.10.9 LinePWMMaxDuration

Sets the maximum *LinePWMDuration* time in μs . This parameter is specified by the connected illumination system.

Name	LinePWMMaxDuration
Category	DigitalIOControl
Interface	Integer
Access	Read / Write
Unit	μs
Values	1 - 50000 (Increment: 1)

11.10.10 LinePWMMaxDutyCycle

Sets the maximum *LinePWMDutyCycle* in %. This parameter is specified by the connected illumination system.


Name	LinePWMMaxDutyCycle
Category	DigitalIOControl
Interface	Integer
Access	Read / Write
Unit	%
Values	1 - 100 (Increment: 1)

11.10.11 LinePWMMode

Selects the PWM mode of the selected *Output* line.

Name	LinePWMMode	
Category	DigitalIOControl	
Interface	Enumeration	
Access	Read / Write	
Unit	-	
Values	Fixed Frequency	The selected <i>Output</i> generates a permanent pulse frequency beginning with every transition from 0 to 1 and ending with every transition from 1 to 0.
	Off	<i>PWMMode</i> is off. <i>Output</i> reaction is the same as of standard <i>Output</i> .
	OnePulse	The selected <i>Output</i> generates one pulse with every transition from 0 to 1.

Time diagrams of *PWMModes*:

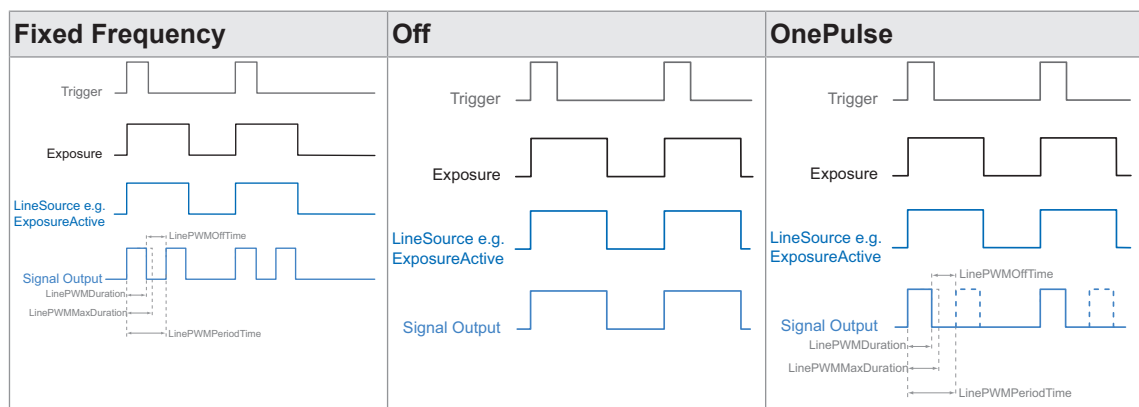

11.10.12 LinePWMOffTime

Switch-off time in microseconds included in the PWM period.

Name	LinePWMOffTime
Category	DigitalIOControl
Interface	Integer
Access	Read only
Unit	µs
Values	PWM setting -specific.

11.10.13 LinePWMPeriodTime

Entire period duration in µs.

Name	LinePWMPeriodTime
Category	DigitalIOControl
Interface	Integer
Access	Read only
Unit	µs
Values	PWM setting -specific.

11.10.14 LinePWMVersion

PWM module version.

Name	LinePWMVersion
Category	DigitalIOControl
Interface	String
Access	Read only
Unit	-
Values	e.g. 2.0.0

11.10.15 LineSelector

Selects the physical line (or pin) of the external device connector to configure.

Name	LineSelector
Category	DigitalIOControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

LineSelector	VCXG.2	VCXG.2XC	VCXG.2.I	VCXU.2
Line0	■	■	■	■
Line1	■ (GPIO)	■ (GPIO)	■	■ (GPIO)
Line2	■ (GPIO)	■ (GPIO)	■	■ (GPIO)
Line3	■	■	■	■
Line4	□	□	■	□
Line5	□	□	■	□
Line6	□	□	■	□
Line7	□	□	■	□

11.10.16 LineSource

Selects which internal signals are output at the selected *Line*.

Name	LineSource
Category	DigitalIOControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

Linesource	VCXG.2	VCXG.2XC	VCXG.2.I	VCXU.2
ExposureActive	■	■	■	■
Off	■	■	■	■
ReadoutActive	■	■	■	■
Timer1Active	■	■	■	■
TriggerReady	■	■	■	■
UserOutput1	■	■	■	■
UserOutput2	■	■	■	■
UserOutput3	■	■	■	■
UserOutput4	□	□	■	□

ExposureActive


This signal is managed by exposure of the sensor.

Furthermore, the falling edge of the *ExposureActive* signal can be used to trigger a movement of the inspected objects. Due to this fact, the span time used for the sensor readout *treadout* can be used optimally in industrial environments.

Depending on Sensor Shutter Mode (only cameras with Rolling Shutter sensors), the *ExposureActive* signal is active at different times.

Sensor Shutter Mode: Global Reset

In Sensor Shutter Mode: Global Reset *tTriggerDelay* is constant and independent of image settings.

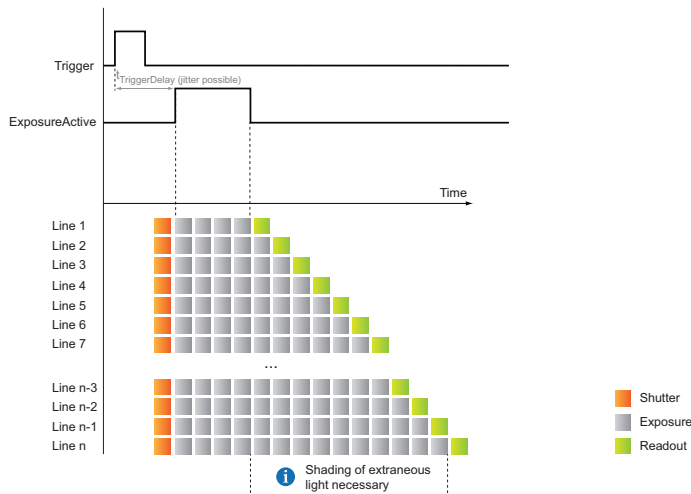


Sensor Shutter Mode: Rolling Shutter

In Sensor Shutter Mode: Rolling Shutter *tTriggerDelay* is not constant (expect $t_{\text{exposure}} < t_{\text{readout}}$).

tTriggerDelay depends on image settings like:

- ExposureTime
- PixelFormat
- ...

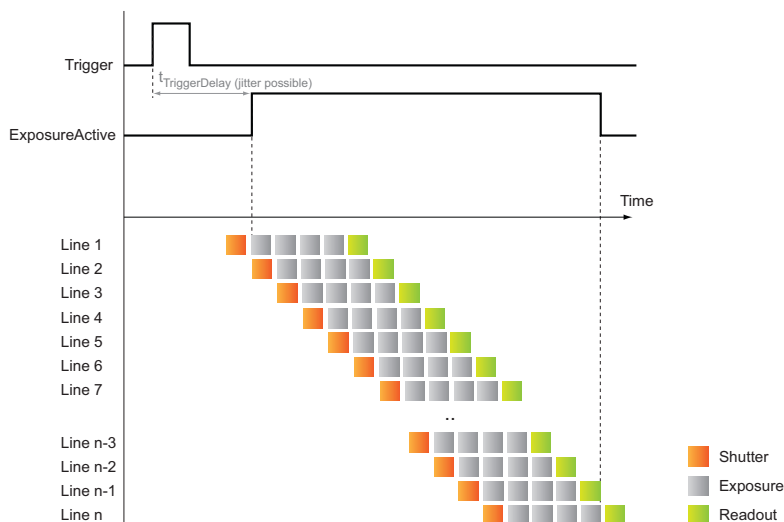

11.10.17 LineStatus

Returns the current status of the selected *Input* or *Output*.

Name	LineStatus
Category	DigitalIOControl
Interface	IBoolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.10.18 LineStatusAll

Returns the current status of all available Line signals at time of polling in a single bitfield.

Name	LineStatusAll
Category	DigitalIOControl
Interface	Integer
Access	Read only
Unit	-
Values	Devices-Specific (HexNumber)

11.10.19 UserOutputSelector

Selects which bit of the User Output register will be set by UserOutputValue.

Name	UserOutputSelector	
Category	DigitalIOControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	UserOutput1	Selects the bit 0 of the User Output register.
	UserOutput2	Selects the bit 1 of the User Output register.
	UserOutput3	Selects the bit 2 of the User Output register.
	UserOutput4	Selects the bit 3 of the User Output register.

11.10.20 UserOutputValue

Sets the value of the bit selected by *UserOutputSelector*.

Name	UserOutputValue
Category	DigitalIOControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.10.21 UserOutputValueAll

Sets the value of all the bits of the *User Output* register.

Name	UserOutputValueAll
Category	DigitalIOControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	0 ... 4294967295 (Increment: 1)

11.11 Category: EventControl

This chapter describes how to control the generation and signaling of *Events* for the host application. *Event* is a message sent to the host application to notify the presence of an internal event.

General Information


The asynchronous message channel is described in the GigE Vision standard® and can optionally be used to signal events. Every *Event* is assigned a timestamp (64 bits) with the exact point in time the event has occurred. Each *Event* can be separately enabled and disabled (*EventSelector*).

Event: EventLost

Event is output if a selected *Event* was lost. The cause may be too many *Events* having occurred.


Event: TriggerReady

This *Event* signals whether the camera is able to process incoming trigger signals or not.

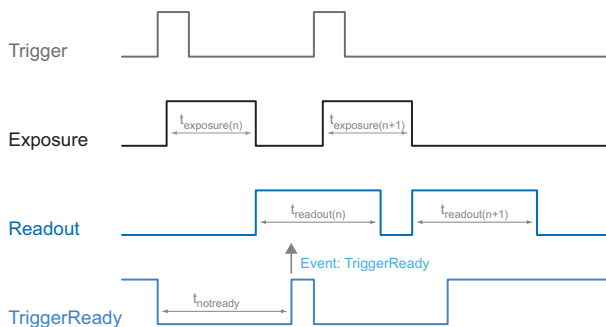

Event: TriggerSkipped


If the camera is unable to process incoming trigger signals, meaning camera trigger should be within the *tnotready* interval, these trigger signals are skipped. This will be indicated to the user by event *TriggerSkipped*.

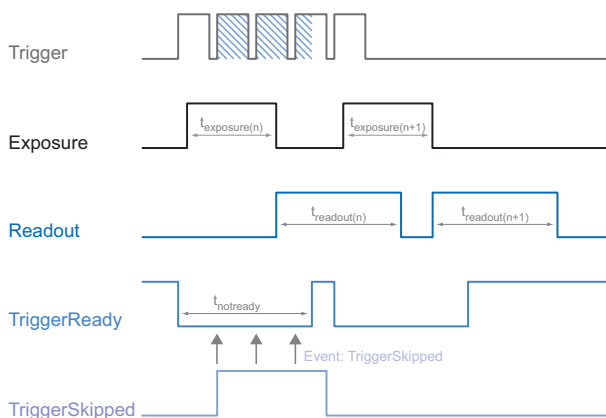

Event: TriggerOverlapped


This *Event* is active as long as the sensor is under exposure with parallel read out, i.e. camera operation utilizes *Overlapped*.

A valid trigger signal event outside a sensor readout operation will change the *TriggerOverlapped* signal to *Low*.

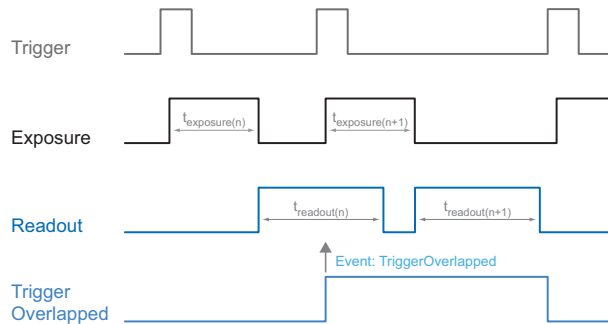


Event: ReadoutActive

While the sensor is read out, the camera signals this by means of *ReadoutActive*.

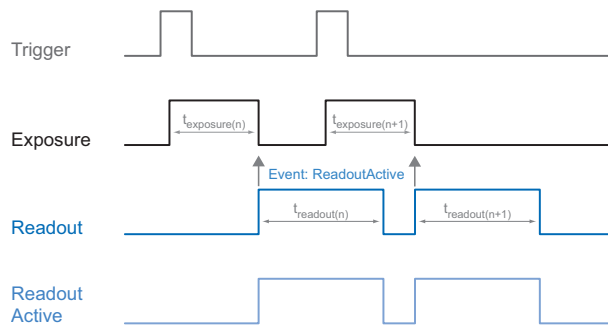


Event: TransferBufferFull

Event is only output at *TriggerMode*. It signals that no buffer is available.

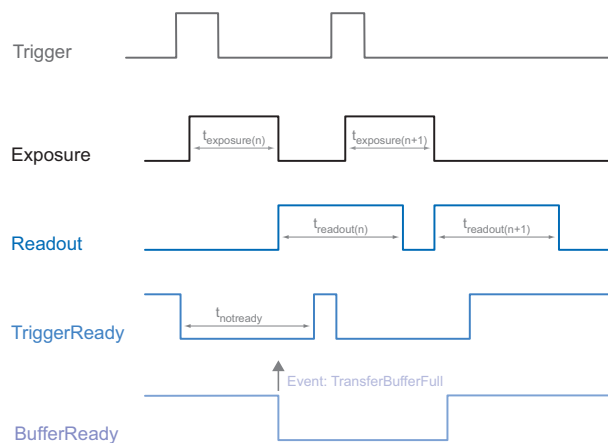

Event: TransferBufferReady

Event is only output at *TriggerMode*. Signals buffer availability.

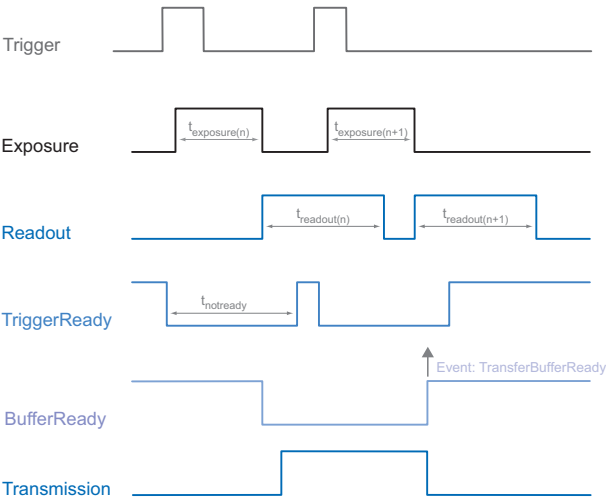

Event: DeviceTemperaturStatusChanged

Event *DeviceTemperatureStatusChanged* as soon as *DeviceTemperatureStatus* has changed.

11.11.1

EventNotification

Activate or deactivate the notification to the host application of the occurrence of the selected *Event*.

Name	EventNotification	
Category	EventControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	Selected reporting disabled via <i>Event</i> .
	On	Selected reporting enabled via <i>Event</i> .

11.11.2 EventSelector

Selects which *Event* is to be reported to the host application.

Name	EventSelector
Category	EventControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

EventSelector	VCXG.2	VCXG.2XC	VCXG.2.I	VCXU.2
DeviceTemperatureStatus-Changed	■	■	■	■
EventLost	■	■	■	■
ExposureEnd	■	■	■	■
ExposureStart	■	■	■	■
FrameEnd	■	■	■	■
FrameStart	■	■	■	■
FrameTransferSkipped	■	■	■	■
Error	■	■	■	□
GigEVisionHeartbeatTime-Out	■	■	■	□
Line0..3 FallingEdge	■	■	■ (0..7)	■
Line0..3 RisingEdge	■	■	■ (0..7)	■
TransferBufferFull	■	■	■	■
TransferBufferReady	■	■	■	■
TriggerOverlapped	■	■	■	■
TriggerReady	■	■	■	■
TriggerSkipped	■	■	■	■

11.11.3 LostEventCounter

Counts lost Events.

Name	LostEventCounter
Category	EventControl
Interface	IInteger
Access	Read only
Unit	-
Values	0 ... 9223372036854775807 (Increment: 1)

11.12 Category: ImageFormatControl

This chapter describes how to influence and determine the image format control features.


General Information - Region of Interest (OffsetX / OffsetY / Width / Height)

Function *Region of Interest (ROI)* is used to predefine a so-called *Region of Interest*. This *ROI* is a defined range of sensor pixels. At image acquisition, only this pixel-specific information is transferred to PC. Not all of the lines on the sensor are read out, which therefore decreases the readout time (*treadout*). This allows for increased frame rates.

This function is used if only a particular region in the field of view is of interest. Further it will reduce resolution.


The ROI is specified by four values:

- *OffsetX* - x-coordinate of the first relevant pixel
- *OffsetY* - y-coordinate of the first relevant pixel
- *Width* - horizontal ROI size
- *Height* - vertical ROI size

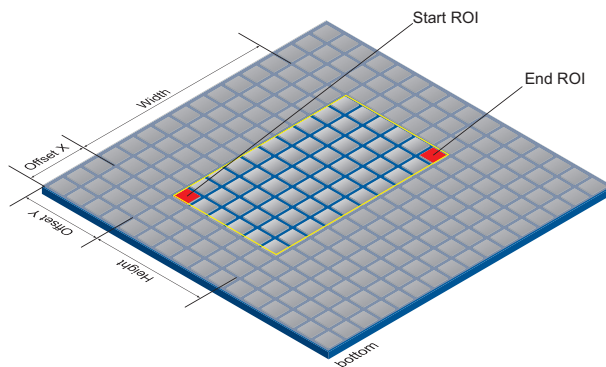

ROI Readout

In the illustration below, the readout time would be cut down to 40% of full frame readout.

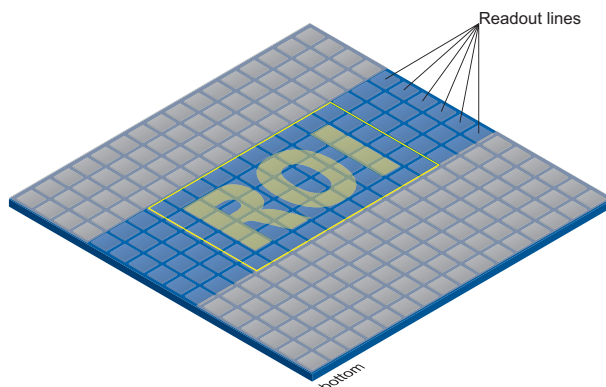

General Information - Binning (BinningHorizontal / BinningVertical)

On digital cameras, you can find several operations for progressing sensitivity. One of them is the so-called *Binning*. It clusters the charge carriers of neighboring pixels. This method implicates higher sensitivity and reduced resolution. Higher sensitivity allows for shorter exposure times.

Baumer cameras support three *Binning* types - vertical, horizontal and bidirectional.

In unidirectional *Binning*, vertically or horizontally neighboring pixels are clustered and reported to the software as a single "superpixel".

Bidirectional *Binning* clusters, a square of neighboring pixels.



INFO

Deviations in brightness after *Binning* can be corrected with function *Brightness Correction*.

Monochrome Binning


without Full frame image, no binning of pixels.	
1x2 Vertical binning would produce a vertically compressed image with twice the brightness.	
2x1 Horizontal binning would produce a horizontally compressed image with twice the brightness.	
2x2 Bidirectional binning would produce both a horizontally and vertically compressed image with four times the brightness.	

Color Binning

Color Binning is processed by the camera (no higher frame rates) – The sensor does not support this binning option.


Color calculated pixel formats

Pixels which are not in RAW format (e.g. *RGB8*), the three calculated color values (R, G, B) of a pixel will be added those of the related neighbor pixel during binning.

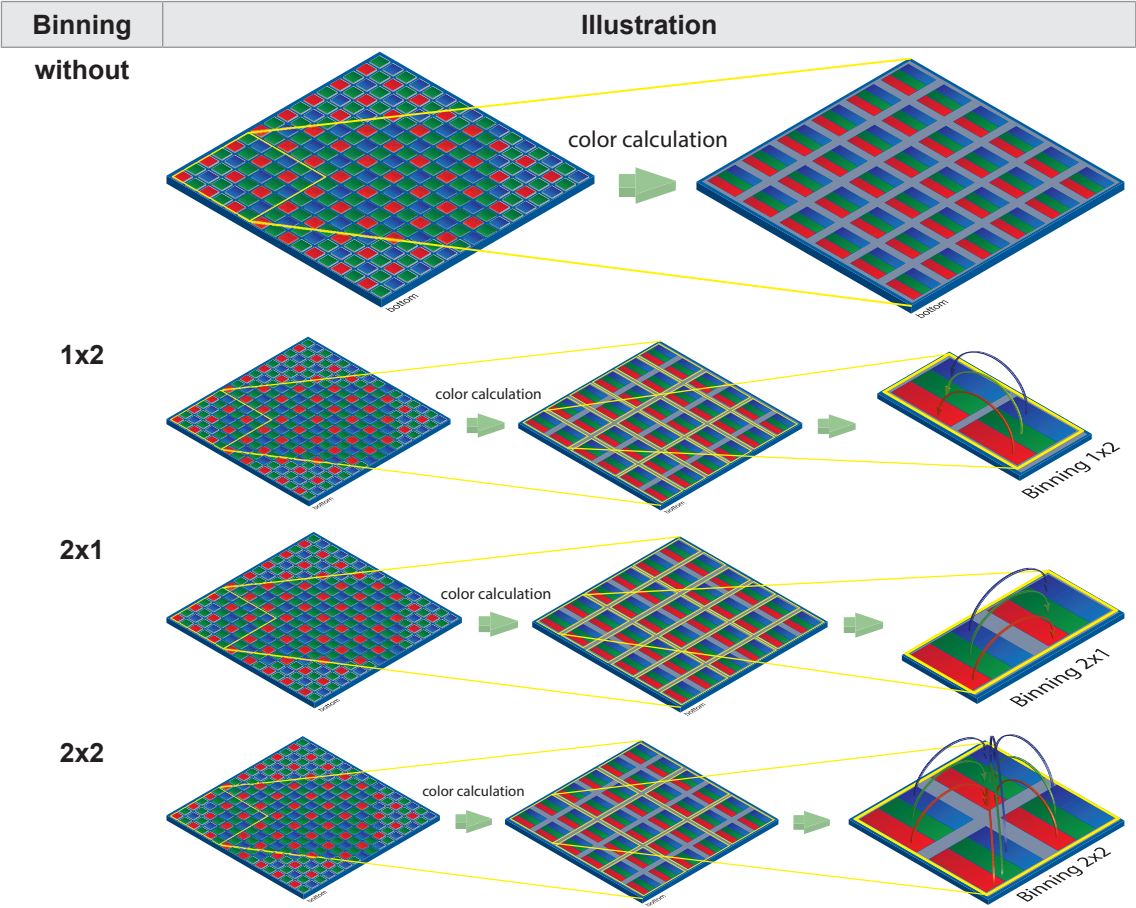

RAW pixel formats

RAW pixel formats (e.g. *BayerRG8*) cluster the color values of neighboring pixels of the same color.

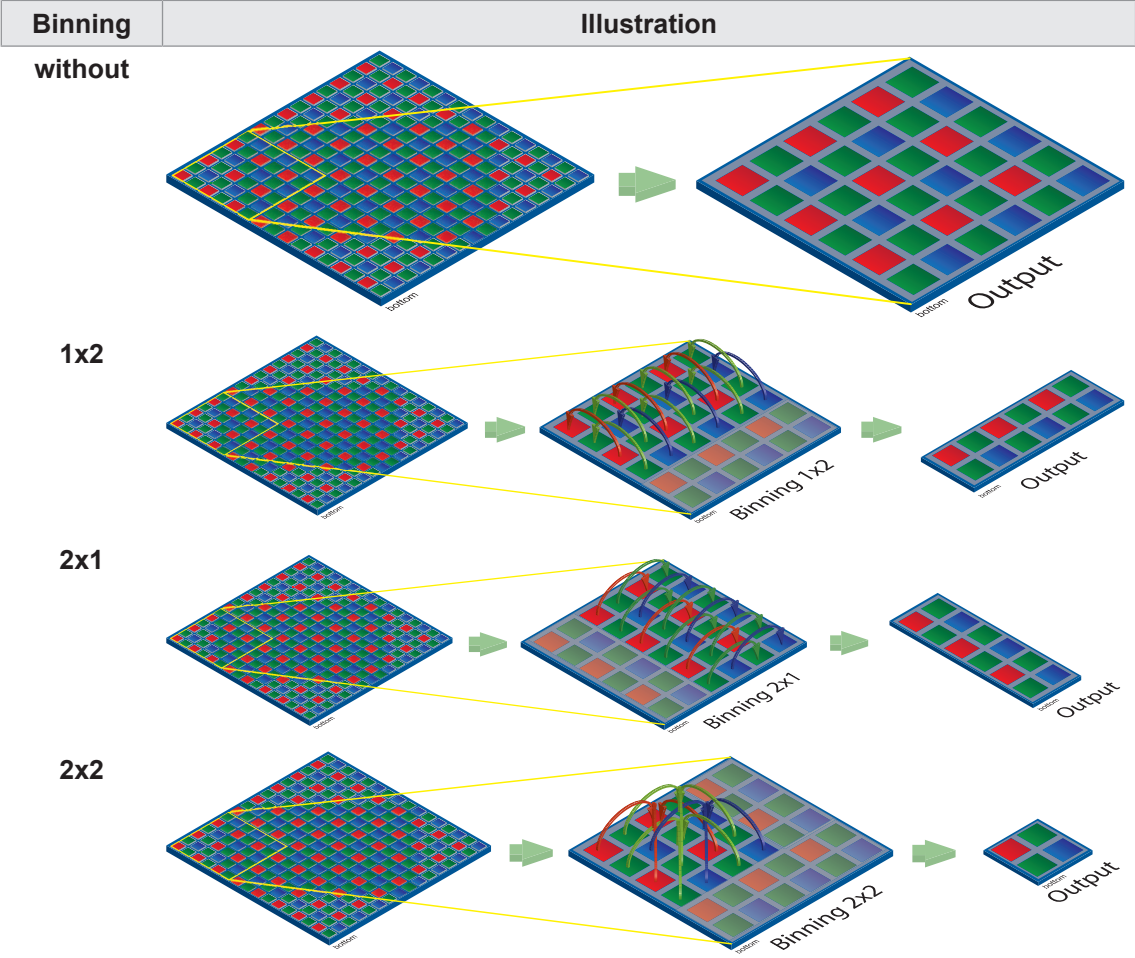

11.12.1 BinningHorizontal

Number of horizontal photo-sensitive cells to combine together. This increases the intensity (or signal to noise ratio) of the pixels and reduces the horizontal resolution (width) of the image.

Name	BinningHorizontal
Category	ImageFormatControl
Interface	Integer
Access	Read / Write
Unit	-
Values	see table(s) below (Increment: 1)

VCXG.2 / VCXG.2.XC / VCXG.2.I**INFO**

With VCXG.2-15M, *Binning* is calculated in the sensor. In contrast to *Binning* in the FPGA, sensor *Binning* allows for higher frame rates.

Camera type	BinningSelector [Region0]	BinningSelector [Sensor]
Monochrom		
VCXG.2-13M	1 ... 2	1 ... 1
VCXG.2-15M	1 ... 2	1 ... 2*
VCXG.2-25M	1 ... 2	1 ... 1
VCXG.2-32M / .I	1 ... 2	1 ... 1
VCXG.2-51M / .XC / .I	1 ... 2	1 ... 1
VCXG.2-51MP	1 ... 2	1 ... 1
VCXG.2-57M / .I	1 ... 2	1 ... 1
VCXG.2-65M.R	1 ... 2	1 ... 1
VCXG.2-82M / .I	1 ... 2	1 ... 2
VCXG.2-83UV / .TCG.2	1 ... 2	1 ... 2
VCXG.2-124M	1 ... 2	1 ... 1
VCXG.2-127M / .I	1 ... 2	1 ... 2
VCXG.2-201M.R / .I	1 ... 2	1 ... 1
VCXG.2-204M	1 ... 2	1 ... 2
VCXG.2-241M / .XC / .I	1 ... 2	1 ... 2
Color		
VCXG.2-13C	1 ... 2	1 ... 1
VCXG.2-15C	1 ... 2	1 ... 1
VCXG.2-25C	1 ... 2	1 ... 1
VCXG.2-32C / .I	1 ... 2	1 ... 1
VCXG.2-51C / .I	1 ... 2	1 ... 1
VCXG.2-57C / .I	1 ... 2	1 ... 1
VCXG.2-65C.R	1 ... 2	1 ... 1
VCXG.2-82C / .I	1 ... 2	1 ... 1
VCXG.2-124C	1 ... 2	1 ... 1
VCXG.2-127C / .I	1 ... 2	1 ... 1
VCXG.2-201C.R / .I	1 ... 2	1 ... 1
VCXG.2-204C	1 ... 2	1 ... 1
VCXG.2-241C / .I	1 ... 2	1 ... 1

*) *BinningVertical* is also set to 2

VCXU.2**INFO**

With VCXU.2-15M, VCXU.2-123M binning *Binning* is calculated in the sensor. In contrast to *Binning* in the FPGA, sensor *Binning* enables higher frame rates.

Camera type	BinningSelector [Region0]	BinningSelector [Sensor]
Monochrom		
VCXU.2-13M	1 ... 2	1 ... 1
VCXU.2-15M	1 ... 2	1 ... 2*
VCXU.2-31M	1 ... 2	1 ... 1
VCXU.2-32M	1 ... 2	1 ... 1
VCXU.2-50M	1 ... 2	1 ... 1
VCXU.2-50MP	1 ... 2	1 ... 1
VCXU.2-51M	1 ... 2	1 ... 1
VCXU.2-57M	1 ... 2	1 ... 1
VCXU.2-65M.R	1 ... 2	1 ... 1
VCXU.2-123M	1 ... 2	1 ... 2*
VCXU.2-127M	1 ... 2	1 ... 2
VCXU.2-201M.R	1 ... 2	1 ... 1
VCXU.2-241M	1 ... 2	1 ... 2
Color		
VCXU.2-13C	1 ... 2	1 ... 1
VCXU.2-15C	1 ... 2	1 ... 1
VCXU.2-31C	1 ... 2	1 ... 1
VCXU.2-32C	1 ... 2	1 ... 1
VCXU.2-50C	1 ... 2	1 ... 1
VCXU.2-51C	1 ... 2	1 ... 1
VCXU.2-57C	1 ... 2	1 ... 1
VCXU.2-65C.R	1 ... 2	1 ... 1
VCXU.2-123C	1 ... 2	1 ... 1
VCXU.2-127C	1 ... 2	1 ... 1
VCXU.2-201C.R	1 ... 2	1 ... 1
VCXU.2-241C	1 ... 2	1 ... 1

* *BinningVertical* is also set to 2

11.12.2 BinningHorizontalMode

Sets the mode to use to combine horizontal pixel together when *BinningHorizontal* is used.

Name	BinningHorizontalMode	
Category	ImageFormatControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Average	The response from the combined cells will be averaged, resulting in increased signal/noise ratio.
	Sum	The response from the combined cells will be added, resulting in increased sensitivity.

11.12.3 BinningSelector

Selects which binning engine is controlled by the *BinningHorizontal* and *BinningVertical* features.

Name	BinningSelector
Category	ImageFormatControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below


Values	Description
Region0	The <i>Binning</i> is calculated in the FPGA.
Sensor	<i>Binning</i> is calculated in the sensor (only monochrome).

Note on pixel offset at sensor binning

Camera type	Pixel offset
VCXU.2-123M	■

Some camera models may present a pixel offset as a result of the applied sensor if binning is done in the sensor itself (`BinningSelector = [Sensor]`). This behavior may also occur when having defined a permanent Region of Interest (ROI).

If your application should be implicated in such behavior, we recommend binning via FPGA (`BinningSelector = [Region0]`). This will prevent a pixel offset.

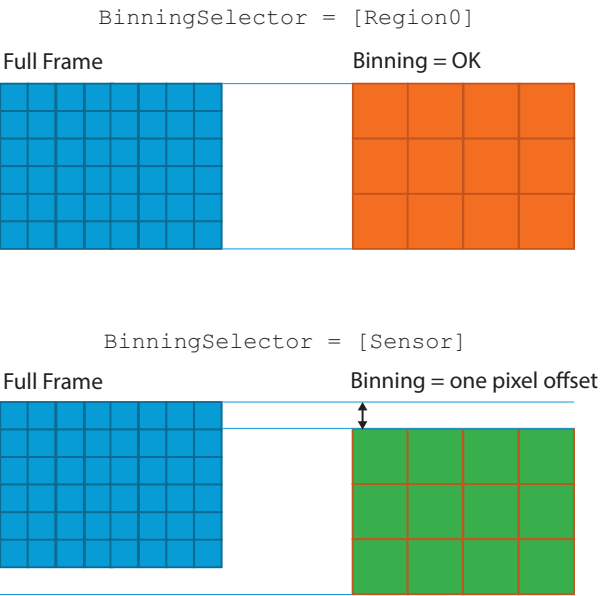

11.12.4 BinningVertical

Number of vertical photo-sensitive cells to combine together. This increases the intensity (or signal to noise ratio) of the pixels and reduces the vertical resolution (height) of the image.

Name	BinningVertical
Category	ImageFormatControl
Interface	Integer
Access	Read / Write
Unit	-
Values	see table(s) below (Increment: 1)

VCXG.2 / VCXG.2.XC / VCXG.2.I**INFO**

With VCXG.2-15M, *Binning* is calculated in the sensor. In contrast to *Binning* in the FPGA, sensor *Binning* allows for higher frame rates.

Camera type	BinningSelector [Region0]	BinningSelector [Sensor]
Monochrom		
VCXG.2-13M	1 ... 2	1 ... 1
VCXG.2-15M	1 ... 2	1 ... 2*
VCXG.2-25M	1 ... 2	1 ... 1
VCXG.2-32M / .I	1 ... 2	1 ... 1
VCXG.2-51M / .XC / .I	1 ... 2	1 ... 1
VCXG.2-51MP	1 ... 2	1 ... 1
VCXG.2-57M / .I	1 ... 2	1 ... 1
VCXG.2-65M.R	1 ... 2	1 ... 1
VCXG.2-82M / .I	1 ... 2	1 ... 2
VCXG.2-83UV / .TCG.2	1 ... 2	1 ... 2
VCXG.2-124M	1 ... 2	1 ... 1
VCXG.2-127M / .I	1 ... 2	1 ... 2
VCXG.2-201M.R / .I	1 ... 2	1 ... 1
VCXG.2-204M	1 ... 2	1 ... 2
VCXG.2-241M / .XC / .I	1 ... 2	1 ... 2
Color		
VCXG.2-13C	1 ... 2	1 ... 1
VCXG.2-15C	1 ... 2	1 ... 1
VCXG.2-25C	1 ... 2	1 ... 1
VCXG.2-32C / .I	1 ... 2	1 ... 1
VCXG.2-51C / .I	1 ... 2	1 ... 1
VCXG.2-57C / .I	1 ... 2	1 ... 1
VCXG.2-65C.R	1 ... 2	1 ... 1
VCXG.2-82C / .I	1 ... 2	1 ... 1
VCXG.2-124C	1 ... 2	1 ... 1
VCXG.2-127C / .I	1 ... 2	1 ... 1
VCXG.2-201C.R / .I	1 ... 2	1 ... 1
VCXG.2-204C	1 ... 2	1 ... 1
VCXG.2-241C / .I	1 ... 2	1 ... 1

*) *BinningHorizontal* is also set to 2

VCXU.2**INFO**

With VCXU.2-15M, VCXU.2-123M binning *Binning* is calculated in the sensor. In contrast to *Binning* in the FPGA, sensor *Binning* enables higher frame rates.

Camera type	BinningSelector [Region0]	BinningSelector [Sensor]
Monochrom		
VCXU.2-13M	1 ... 2	1 ... 1
VCXU.2-15M	1 ... 2	1 ... 2*
VCXU.2-31M	1 ... 2	1 ... 1
VCXU.2-32M	1 ... 2	1 ... 1
VCXU.2-50M	1 ... 2	1 ... 1
VCXU.2-50MP	1 ... 2	1 ... 1
VCXU.2-51M	1 ... 2	1 ... 1
VCXU.2-57M	1 ... 2	1 ... 1
VCXU.2-65M.R	1 ... 2	1 ... 1
VCXU.2-123M	1 ... 2	1 ... 2*
VCXU.2-127M	1 ... 2	1 ... 2
VCXU.2-201M.R	1 ... 2	1 ... 1
VCXU.2-241M	1 ... 2	1 ... 2
Color		
VCXU.2-13C	1 ... 2	1 ... 1
VCXU.2-15C	1 ... 2	1 ... 1
VCXU.2-31C	1 ... 2	1 ... 1
VCXU.2-32C	1 ... 2	1 ... 1
VCXU.2-50C	1 ... 2	1 ... 1
VCXU.2-51C	1 ... 2	1 ... 1
VCXU.2-57C	1 ... 2	1 ... 1
VCXU.2-65C.R	1 ... 2	1 ... 1
VCXU.2-123C	1 ... 2	1 ... 1
VCXU.2-127C	1 ... 2	1 ... 1
VCXU.2-201C.R	1 ... 2	1 ... 1
VCXU.2-241C	1 ... 2	1 ... 1

*) *BinningHorizontal* is also set to 2

11.12.5 BinningVerticalMode

Sets the mode used to combine vertical pixels when *BinningVertical* is used.

Name	BinningVerticalMode	
Category	ImageFormatControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Average	The response from the combined cells will be averaged, resulting in increased signal/noise ratio.
	Sum	The response from the combined cells will be added, resulting in increased sensitivity.

11.12.6 Category: ImageFormatControl → CalibrationControl (MP cameras only)

Category comprising the polarization control features.


General information - Polarization

Polarization is used to reduce or eliminate unwanted reflections from surfaces such as water, glass or metal. Polarization filters make incident light oscillate in a specific direction of polarization.

The Baumer polarization camera features a metal grid-coated sensor to filter the polarization information onto a 2 x 2 pixel field (0°, 45°, 90° and 135°).

The polarization information is calculated by intensity divergence. This eliminates the need for an extra polarization filter.

The camera provides the raw polarization information. Calculation is done in *Baumer GAPI SDK*.

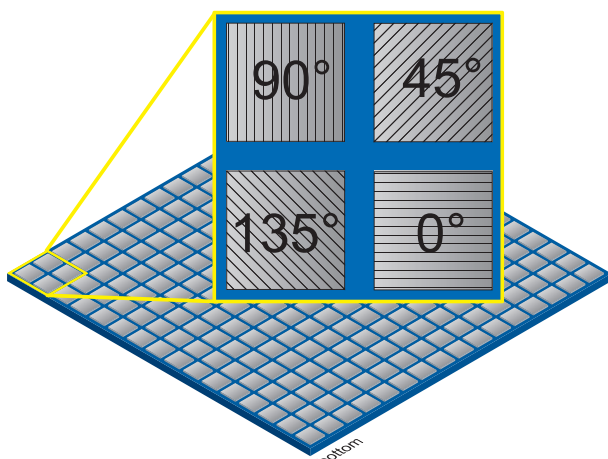

III. 6: Polarization filter on the 2 x 2 pixel field

Depending on the variant, the following data can be calculated by *Baumer GAPI SDK*:

Baumer GAPI v2.9	Baumer GAPI v2.10	Baumer GAPI v2.11	Baumer GAPI v2.12
ADOLP	ADOLP	ADOLP	ADOLP
AOP	AOP	AOP	AOP

Baumer GAPI v2.9	Baumer GAPI v2.10	Baumer GAPI v2.11	Baumer GAPI v2.12
DOLP	DOLP	DOLP	DOLP
Intensity	Intensity	Intensity	Intensity
	POL0	POL0	POL0
	POL45	POL45	POL45
	POL90	POL90	POL90
	POL135	POL135	POL135
	POLMIN	POLMIN	POLMIN
	POLMAX	POLMAX	POLMAX
			POL
			UNPOL

Description of the computable data:

Data	Description
ADOLP	<i>ADOLP (Azimuthally Dependent Ordinary Linear Polarization)</i> shows both <i>AOP</i> and <i>DOLP</i> at the same time in false colors.
AOP	<i>AOP (Angle of Polarization)</i> is the angle of maximum polarization. The image represents the angle in different degrees of brightness.
DOLP	<i>DOLP (Degree of Linear Polarization)</i> is the linear polarization degree of total incident light throughout the 2 x 2 pixel field. The brighter the image areas, the higher the amount of linear polarization.
Intensity	Here, after having offset the brightness values of all four pixels against each other, they are output as image.
POL0	The brightness information by <i>Pixel 0°</i> is output as image. The image is scaled to the original resolution.
POL45	The brightness information by <i>Pixel 45°</i> is output as image. The image is scaled to the original resolution.
POL90	The brightness information by <i>Pixel 90°</i> is output as image. The image is scaled to the original resolution.
POL135	The brightness information by <i>Pixel 135°</i> is output as image. The image is scaled to the original resolution.
POLMIN	The output image is the brightness information of the pixel with least polarization out of the 2 x 2 pixel field. The image is scaled to the original resolution.
POLMAX	The output image is the brightness information of the pixel with maximum polarization out of the 2 x 2 pixel field. The image is scaled to the original resolution.
POL	<i>POL (Polarized)</i> indicates the total amount of polarized light. The brighter the image area, the higher the amount of polarized light.
UNPOL	<i>UNPOL (Unpolarised)</i> indicates the amount of non-polarized light. The brighter the image area, the higher the amount of non-polarized light.

11.12.6.1 CalibrationAngleOfPolarizationOffset

Adds a calibration offset to compensate for an individual "roll" angle of the camera, introduced by mounting tolerances. The offset is added to all type of output data that incorporates an angle, like false color representation and angle of polarization data. The offset is without effect to raw data and to degree of linear polarization data.

Name	CalibrationAngleOfPolarizationOffset
Category	ImageFormatControl → CalibrationControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	-180 ... 179.9 (Increment: 0.1)

11.12.6.2 CalibrationEnable

Activates the calibration of the four polarized light channels by applying matrix calculations and an angle offset.

Name	CalibrationEnable
Category	ImageFormatControl → CalibrationControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.12.6.3 CalibrationMatrixValue

Represents the value of the selected gain factor inside the calibration matrix.

Name	CalibrationMatrixValue
Category	ImageFormatControl → CalibrationControl
Interface	IFloat
Access	Read / Write
Unit	-
Values	-8 ... 7.99999999627470970154 (Increment: 0.00001)

11.12.6.4 CalibrationMatrixValueSelector

Selects the gain factor of the calibration matrix.

Name	CalibrationMatrixValueSelector	
Category	ImageFormatControl → CalibrationControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Gain	Gain00 ... Gain23

11.12.7 ComponentEnable (MP cameras only)

Controls, if streaming of the component selected by feature ComponentSelector is active.

Name	ComponentEnable	
Category	ImageFormatControl	
Interface	IBoolean	
Access	Read only	
Unit	-	
Values	true = 1 (On) false = 0 (Off)	

11.12.8 ComponentSelector (MP cameras only)

Selects, which data acquisition component to use.


Name	ComponentSelctor	
Category	ImageFormatControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	PolarizedRaw	Acquisition of polarized light intensity. The polarizing filters are arranged in a 2-by-2 pattern: 135° and 0° on even lines, 90° and 45° on odd lines. The raw data is unprocessed.

11.12.9 Height

Height of the image provided by the device (in pixels). The selected value changes with the change of *Binning*.

**INFO**

The sum of *OffsetY* and *Height* must be less than or equal to *HeightMax*.

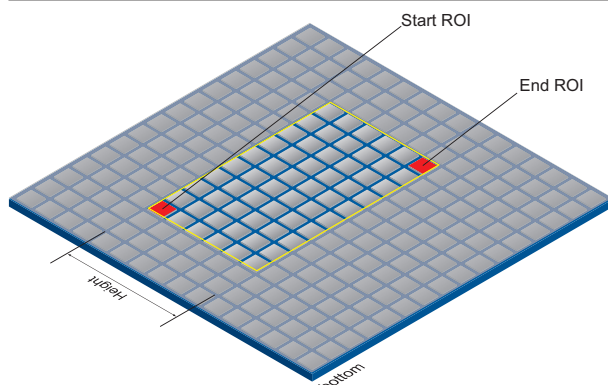

Name	Height
Category	ImageFormatControl
Interface	Integer
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2.XC / VCXG.2.I

Camera type	Values [Pixel]
Monochrom	
VCXG.2-13M	1 ... 1024 (Increment: 1)
VCXG.2-15M	1 ... 1080 (Increment: 1)
VCXG.2-25M	1 ... 1200 (Increment: 1)
VCXG.2-32M / .I	1 ... 1536 (Increment: 1)
VCXG.2-51M / .XC / .I	1 ... 2048 (Increment: 1)
VCXG.2-51MP	1 ... 2048 (Increment: 1)
VCXG.2-57M / .I	1 ... 2048 (Increment: 1)
VCXG.2-65M.R	2 ... 2048 (Increment: 2)
VCXG.2-82M / .I	1 ... 2832 (Increment: 1)
VCXG.2-83UV / .TCG.2	1 ... 2832 (Increment: 1)
VCXG.2-124M	1 ... 3000 (Increment: 1)
VCXG.2-127M / .I	1 ... 2992 (Increment: 1)
VCXG.2-201M.R / .I	2 ... 3648 (Increment: 2)
VCXG.2-204M	1 ... 4496 (Increment: 1)
VCXG.2-241M / .XC / .I	1 ... 4592 (Increment: 1)
Color	
VCXG.2-13C	2 ... 1024 (Increment: 2)

Camera type	Values [Pixel]
VCXG.2-15C	2 ... 1080 (Increment: 2)
VCXG.2-25C	2 ... 1200 (Increment: 2)
VCXG.2-32C / .I	2 ... 1536 (Increment: 2)
VCXG.2-51C / .I	2 ... 2048 (Increment: 2)
VCXG.2-57C / .I	2 ... 2048 (Increment: 2)
VCXG.2-65C.R	4 ... 2048 (Increment: 4)
VCXG.2-82C / .I	2 ... 4832 (Increment: 2)
VCXG.2-124C	4 ... 3000 (Increment: 2)
VCXG.2-127C / .I	2 ... 2992 (Increment: 2)
VCXG.2-201C.R / .I	4 ... 3648 (Increment: 4)
VCXG.2-204C	2 ... 4496 (Increment: 2)
VCXG.2-241C / .I	2 ... 4592 (Increment: 2)

VCXU.2

Camera type	Values [Pixel]
Monochrom	
VCXU.2-13M	1 ... 1024 (Increment: 1)
VCXU.2-15M	1 ... 1080 (Increment: 1)
VCXU.2-31M	1 ... 1536 (Increment: 1)
VCXU.2-32M	1 ... 1536 (Increment: 1)
VCXU.2-50M	1 ... 2048 (Increment: 1)
VCXU.2-50MP	1 ... 2048 (Increment: 1)
VCXU.2-51M	1 ... 2048 (Increment: 1)
VCXU.2-57M	1 ... 2048 (Increment: 1)
VCXU.2-65M.R	2 ... 2048 (Increment: 2)
VCXU.2-123M	1 ... 3000 (Increment: 1)
VCXU.2-127M	1 ... 2992 (Increment: 1)
VCXU.2-201M.R	2 ... 3648 (Increment: 2)
VCXU.2-241M	2 ... 4592 (Increment: 2)
Color	
VCXU.2-13C	2 ... 1024 (Increment: 2)
VCXU.2-15C	2 ... 1080 (Increment: 2)
VCXU.2-31C	2 ... 1536 (Increment: 2)
VCXU.2-32C	2 ... 1536 (Increment: 2)
VCXU.2-50C	2 ... 2048 (Increment: 2)
VCXU.2-51C	2 ... 2048 (Increment: 2)
VCXU.2-57C	2 ... 2048 (Increment: 2)
VCXU.2-65C.R	4 ... 2048 (Increment: 4)
VCXU.2-123C	2 ... 3000 (Increment: 2)
VCXU.2-127C	2 ... 2992 (Increment: 2)

Camera type	Values [Pixel]
VCXU.2-201C.R	4 ... 3648 (Increment: 4)
VCXU.2-241C	2 ... 4592 (Increment: 2)

11.12.10 HeightMax

Maximum height of the image (in pixels). This dimension is calculated after *Vertical Binning*, *Decimation* or any other function changing the vertical dimension of the image.

Name	HeightMax
Category	ImageFormatControl
Interface	Integer
Access	Read only
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2.XC / VCXG.2.I

Camera type	Values [Pixel]
Monochrom	
VCXG.2-13M	1024
VCXG.2-15M	1080
VCXG.2-25M	1200
VCXG.2-32M / .I	1536
VCXG.2-51M / .XC / .I	2048
VCXG.2-51MP	2048
VCXG.2-57M / .I	2048
VCXG.2-65M.R	2048
VCXG.2-82M / .I	2832
VCXG.2-83UV / .TCG.2	2832
VCXG.2-124M	3000
VCXG.2-127M / .I	2992
VCXG.2-201M.R / .I	3648
VCXG.2-204M	4496
VCXG.2-241M / .XC / .I	4592
Color	
VCXG.2-13C	1024
VCXG.2-15C	1080
VCXG.2-25C	1200
VCXG.2-32C / .I	1536
VCXG.2-51C / .I	2048
VCXG.2-57C / .I	2048
VCXG.2-65C.R	2048
VCXG.2-82C / .I	4832

Camera type	Values [Pixel]
VCXG.2-124C	3000
VCXG.2-127C / .I	2992
VCXG.2-201C.R / .I	3648
VCXG.2-204C	4496
VCXG.2-241C / .I	4592

VCXU.2

Camera type	Values [Pixel]
Monochrom	
VCXU.2-13M	1024
VCXU.2-15M	1080
VCXU.2-31M	1536
VCXU.2-32M	1536
VCXU.2-50M	2048
VCXU.2-50MP	2048
VCXU.2-51M	2048
VCXU.2-57M	2048
VCXU.2-65M.R	2048
VCXU.2-123M	3000
VCXU.2-127M	2992
VCXU.2-201M.R	3648
VCXU.2-241M	4592
Color	
VCXU.2-13C	1024
VCXU.2-15C	1080
VCXU.2-31C	1536
VCXU.2-32C	1536
VCXU.2-50C	2048
VCXU.2-51C	2048
VCXU.2-57C	2048
VCXU.2-65C.R	2048
VCXU.2-123C	3000
VCXU.2-127C	2992
VCXU.2-201C.R	3648
VCXU.2-241C	4592


11.12.11 **OffsetX**

Horizontal offset from the origin to the region of interest ROI(in pixels).



INFO

The sum of *OffsetX* and *Width* must be less than or equal to *WidthMax*.

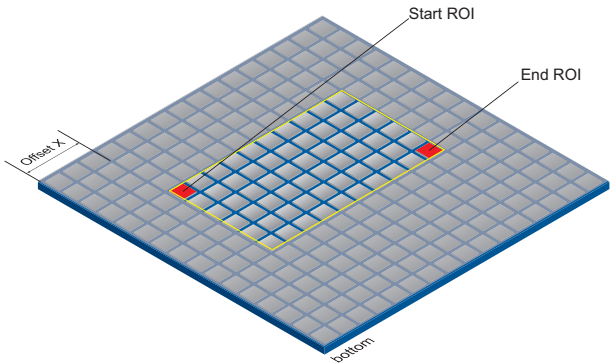

Name	OffsetX
Category	ImageFormatControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... depends on <i>Width</i>


11.12.12 **OffsetY**

Vertical offset from the origin to the region of interest (in pixels).



INFO

The sum of *OffsetY* and *Height* must be less than or equal to *HeightMax*.

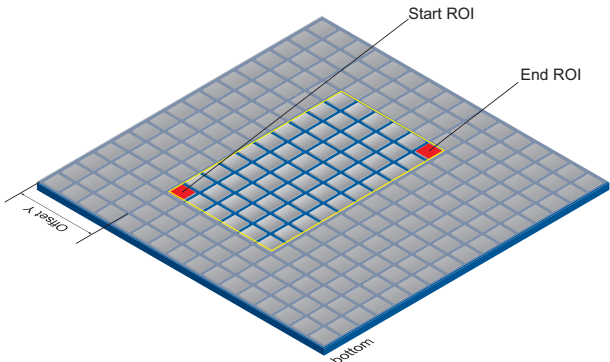

Name	OffsetY
Category	ImageFormatControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... depends on <i>Height</i>


11.12.13 PixelFormat

PixelFormat - General Information


Pixel format delivered by the camera.

Mono Monochrome. The monochrome color range comprises the shades of a single color. Shades of gray as well as black and white are generally considered synonyms for monochrome.

Bayer Raw data format of color sensors. Color filters are placed on these sensors in a checkerboard pattern, generally in a 50 % green, 25 % red and 25 % blue array.

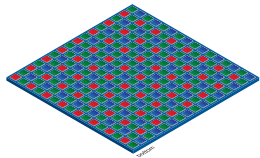

RGB Color model, in which all detectable colors are defined by three coordinates. Red, Green and Blue.
The buffer provides the three coordinates in sequence R, G, B.

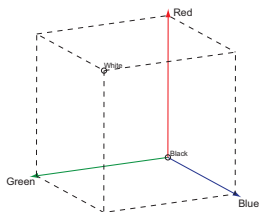


BGR With BGR, the camera interface mirrors the transmission order of the color channels from RGB to BGR.
This may save processing effort to the computer, since this data can be processed by the graphics card without conversion.


Pixel depth - General Information

The pixel depth describes the number of possible digital values that can be assigned to a single pixel channel. The pixel depth defines the resolution of the signal gradation and thus the differentiation between minimum and maximum signal. A pixel depth of n bits allows 2ⁿ different values. Higher pixel depth allows for finer gradation, but consumes more storage space and higher data rates in transmission.

 
8 bit 8 bit sequence



 
RGB 8 bit RGB 8 bit sequence
For RGB or BGR these 8 bits per channel equal 24 bits overall.



10 bit Spreading 10 bits over 2 bytes.

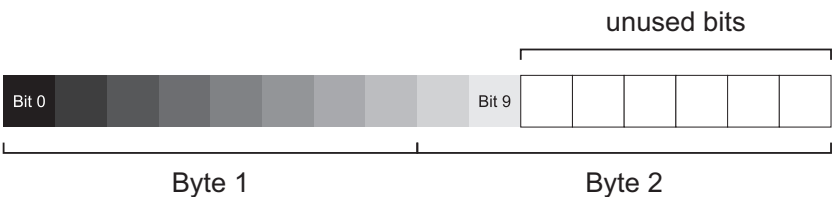


12 bit Spreading 12 bits over two bytes.

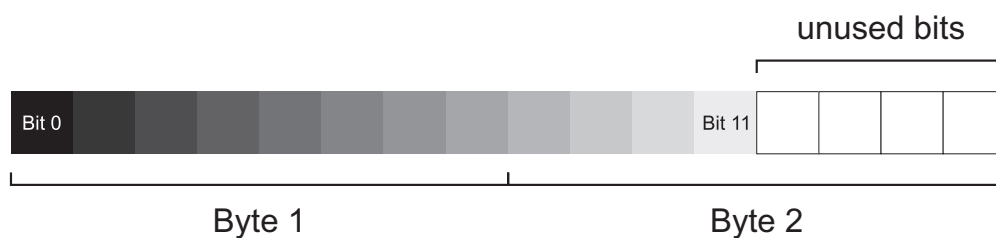

12 bit (Packed) To save bandwidth, the Baumer cameras support packed formats. These formats fill any non-used bits of a pixel with the data of the following pixel.

Spreading two pixels in 12 bits over three bytes (packed mode).

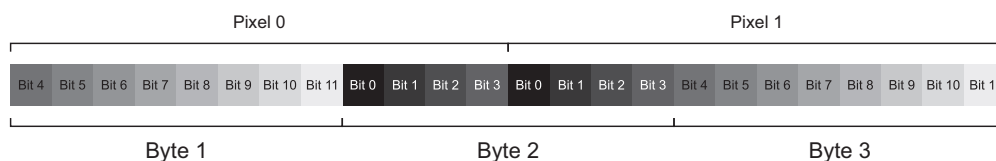

INFO

The camera must be stopped before this feature can be edited.

Name	PixelFormat
Category	ImageFormatControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2.XC / VCXG.2.I

	Mono8	Mono10	Mono12	Mono12p	Bayer RG8	Bayer RG10	Bayer RG12	Bayer G12p	RGB8	BGR8
Camera type										
Monochrome										
VCXG.2-13M	■	■	□	□	□	□	□	□	□	□
VCXG.2-15M	■	■	■	■	□	□	□	□	□	□
VCXG.2-25M	■	■	□	□	□	□	□	□	□	□
VCXG.2-32M / .I	■	■	■	■	□	□	□	□	□	□
VCXG.2-51M / .XC / .I	■	■	■	■	□	□	□	□	□	□
VCXG.2-51MP	■	■	■	■	□	□	□	□	□	□
VCXG.2-57M / .I	■	■	■	■	□	□	□	□	□	□
VCXG.2-65M.R	■	■	■	■	□	□	□	□	□	□
VCXG.2-82M / .I	■	■	□	□	□	□	□	□	□	□
VCXG.2-83UV / .TCG	■	■	□	□	□	□	□	□	□	□

Camera type	Mono8	Mono10	Mono12	Mono12p	Bayer RG8	Bayer RG10	Bayer RG12	Bayer G12p	RGB8	BGR8
VCXG.2-124M	■	■	■	■	□	□	□	□	□	□
VCXG.2-127M / .I	■	■	■	■	□	□	□	□	□	□
VCXG.2-201M.R / .I	■	■	■	■	□	□	□	□	□	□
VCXG.2-204M	■	■	■	■	□	□	□	□	□	□
VCXG.2-241M / .XC / .I	■	■	■	■	□	□	□	□	□	□
Color										
VCXG.2-13C	■	■	□	□	■	■	□	□	■	■
VCXG.2-15C	■	■	■	■	■	■	■	■	■	■
VCXG.2-25C	■	■	□	□	■	■	□	□	■	■
VCXG.2-32C / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-51C / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-57C / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-65C.R	■	■	■	■	■	■	■	■	■	■
VCXG.2-82C / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-124C	■	■	■	■	■	■	■	■	■	■
VCXG.2-127C / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-201C.R / .I	■	■	■	■	■	■	■	■	■	■
VCXG.2-204C	■	■	■	■	■	■	■	■	■	■
VCXG.2-241C / .I	■	■	■	■	■	■	■	■	■	■

VCXU.2

Camera type	Mono8	Mono10	Mono12	Mono12p	Bayer RG8	Bayer RG10	Bayer RG12	Bayer G12p	RGB8	BGR8
Monochrome										
VCXU.2-13M	■	■	□	□	□	□	□	□	□	□
VCXU.2-15M	■	■	■	■	□	□	□	□	□	□
VCXU.2-31M	■	■	■	■	□	□	□	□	□	□
VCXU.2-32M	■	■	■	■	□	□	□	□	□	□
VCXU.2-50M	■	■	■	■	□	□	□	□	□	□
VCXU.2-50MP	■	■	■	■	□	□	□	□	□	□
VCXU.2-51M	■	■	■	■	□	□	□	□	□	□
VCXU.2-57M	■	■	■	■	□	□	□	□	□	□
VCXU.2-65M.R	■	■	■	■	□	□	□	□	□	□
VCXU.2-123M	■	■	■	■	□	□	□	□	□	□
VCXU.2-127M	■	■	■	■	□	□	□	□	□	□

	Mono8	Mono10	Mono12	Mono12p	Bayer RG8	Bayer RG10	Bayer RG12	Bayer G12p	RGB8	BGR8
Camera type										
VCXU.2-201M.R	■	■	■	■	□	□	□	□	□	□
VCXU.2-241M	■	■	■	■	□	□	□	□	□	□
Color										
VCXU.2-13C	■	■	□	□	■	■	□	□	■	■
VCXU.2-15C	■	■	■	■	■	■	■	■	■	■
VCXU.2-31C	■	■	■	■	■	■	■	■	■	■
VCXU.2-32C	■	■	■	■	■	■	■	■	■	■
VCXU.2-50C	■	■	■	■	■	■	■	■	■	■
VCXU.2-51C	■	■	■	■	■	■	■	■	■	■
VCXU.2-57C	■	■	■	■	■	■	■	■	■	■
VCXU.2-65C.R	■	■	■	■	■	■	■	■	■	■
VCXU.2-123C	■	■	■	■	■	■	■	■	■	■
VCXU.2-127C	■	■	■	■	■	■	■	■	■	■
VCXU.2-201C.R	■	■	■	■	■	■	■	■	■	■
VCXU.2-241C	■	■	■	■	■	■	■	■	■	■

11.12.14 ReverseX (monochrome cameras / pixel formats only)

Flips the image in horizontal direction. *Region of Interest* is applied prior to flipping.



INFO

The camera must be stopped before this feature can be edited.

Name	ReverseX
Category	ImageFormatControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.12.15 ReverseY (monochrome cameras / pixel formats only)

Flips the image in vertical direction. *Region of Interest* is applied prior to flipping.

**INFO**

The camera must be stopped before this feature can be edited.

Name	ReverseY
Category	ImageFormatControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.12.16 SensorHeight

Effective height of the sensor in pixels.

Name	SensorHeight
Category	ImageFormatControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 65535 (Increment: 1)

11.12.17 SensorName

Product name of the imaging sensor.

Name	SensorName
Category	ImageFormatControl
Interface	IString
Access	Read only
Unit	-
Values	e.g. IMX264

11.12.18 SensorPixelHeight

Physical size (pitch) in the y direction of a photo sensitive pixel unit.

Name	SensorPixelHeight
Category	ImageFormatControl
Interface	IFloat
Access	Read only
Unit	µm
Values	0.000000 ... 255.000000 (Increment: 1)

11.12.19 SensorPixelFormatWidth

Physical size (pitch) in the x direction of a photo sensitive pixel unit.

Name	SensorPixelFormatWidth
Category	ImageFormatControl
Interface	IFloat
Access	Read only
Unit	µm
Values	0.000000 ... 255.000000 (Increment: 1)

11.12.20 SensorShutterMode

Sets the sensor shutter mode of the camera. The sensor shutter mode depends on the *Trigger-Mode*.

Name	SensorShutterMode
Category	ImageFormatControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	See table(s) below

**INFO****Only for camera with rolling shutter sensors!**

Observe the following for switching between *GlobalReset* and *Rolling* t:


- a) ExposureAuto = Off
- b) GainAuto = Off

Values	
GlobalReset	The shutter opens at the same time for all pixels but ends in a sequential manner. The pixels are exposed for different lengths of time.
Rolling	The shutter opens and closes sequentially for groups (typically lines) of pixels. All the pixels are exposed for the same length of time but not at the same time.
Global	The shutter opens and closes at the same time for all pixels. All the pixels are exposed for the same length of time at the same time.

Global Reset - General Information

Cameras with Rolling-Shutter sensor and enabled shutter mode *GlobalReset*, start all frame lines simultaneously at exposure, however the end of exposure is delayed by the offset in the previously read line. The exposure time for each line gradually lengthens. Data readout for each line begins immediately at line exposure. Readout time for each line is the same, but times of beginning and ending are staggered.

This shutter mode provides the benefit of reduced image artifacts that are typical for Rolling Shutter. However, since exposure covers the entire image, brightness may gradually increase from image top to bottom.

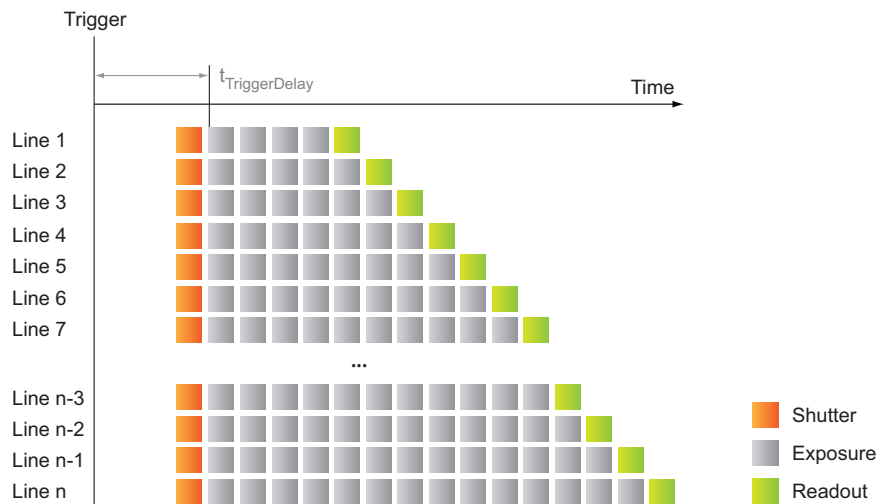

Rolling Shutter - General Information




INFO

Due to technical issues of *Rolling Shutter*, flash control related to *ExposureTime* does not make sense. Such cameras should be used in a continuously illuminated environment.

Cameras with Rolling Shutter sensor and enabled shutter mode *RollingShutter* start exposure at an offset which corresponds to the readout time of each frame line. Exposure time for each line is the same, but times of beginning and ending are staggered. Data readout for each line begins immediately at line exposure. Readout time for each line is the same, but times of beginning and ending are staggered.

Rolling Shutter provides the benefit of increased sensitivity. However, because exposure starts at different times throughout the frame, there are known artifacts such as skew, wobble, and partial exposure.

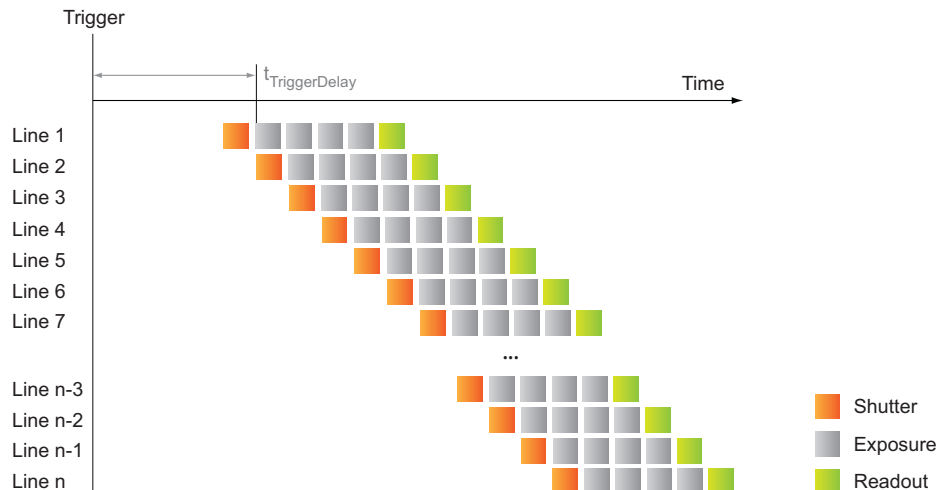

11.12.21 SensorWidth

Effective width of the sensor in pixels.

Name	SensorWidth
Category	ImageFormatControl
Interface	Integer
Access	Read only
Unit	-
Values	0 ... 65535 (Increment: 1)

11.12.22 TestPattern

Selects the type of test pattern that is generated by the device as image source.

Name	TestPattern
Category	ImageFormatControl
Interface	Enumeration
Access	Read / Write
Unit	-
Values	see table(s) below

GreyDiagonalRamp	Image is filled diagonally with an image that goes from the darkest possible value to the brightest.
GreyDiagonalRampHorizontalAnd-VerticalLineMoving	Image is filled diagonally with an image that goes from the darkest possible value to the brightest with moving horizontal and vertical lines.
GreyDiagonalRampHorizontalLineMoving	Image is filled diagonally with an image that goes from the darkest possible value to the brightest with moving horizontal lines.
GreyDiagonalRampVerticalLineMoving	Image is filled diagonally with an image that goes from the darkest possible value to the brightest with moving vertical lines.
GreyHorizontalRamp	Image is filled horizontally with an image that goes from the darkest possible value to the brightest.
GreyHorizontalRampHorizontalAnd-VerticalLineMoving	Image is filled horizontally with an image that goes from the darkest possible value to the brightest with moving horizontal and vertical lines.
GreyHorizontalRampHorizontalLineMoving	Image is filled horizontally with an image that goes from the darkest possible value to the brightest with moving horizontal lines.
GreyHorizontalRampVerticalLineMoving	Image is filled horizontally with an image that goes from the darkest possible value to the brightest with moving vertical lines.
GreyVerticalRamp	Image is filled vertically with an image that goes from the darkest possible value to the brightest.

GreyVerticalRampHorizontalAnd-VerticalLineMoving	Image is filled vertically with an image that goes from the darkest possible value to the brightest with moving horizontal and vertical lines.
GreyVerticalRampHorizontalLineMoving	Image is filled vertically with an image that goes from the darkest possible value to the brightest with moving horizontal lines.
GreyVerticalRampVerticalLineMoving	Image is filled vertically with an image that goes from the darkest possible value to the brightest with moving vertical lines.
HorizontalAndVerticalLineMoving	Image is filled with moving horizontal and vertical lines.
HorizontalLineMoving	Image is filled with moving horizontal lines.
Off	Image is coming from the sensor.
VerticalLineMoving	Image is filled with moving vertical lines.


11.12.23 TestPatternGeneratorSelector

Selects which test pattern generator is controlled by the *TestPattern* feature.

Name	TestPatternGeneratorSelector	
Category	ImageFormatControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	ImageProcessor	TestPattern feature will control the image processor.
	SensorProcessor	TestPattern feature will control the sensor processor.

11.12.24 Width

Width of the image provided by the device (in pixels).

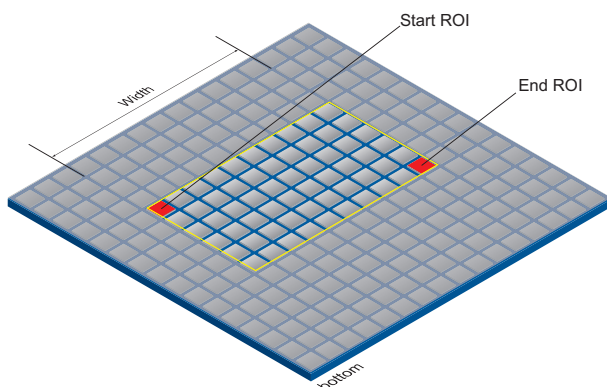

Name	Width
Category	ImageFormatControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2.XC / VCXG.2.I

Camera type	Values [Pixel]
Monochrom	
VCXG.2-13M	24 ... 1280 (Increment: 8)
VCXG.2-15M	16 ... 1440 (Increment: 32)
VCXG.2-25M	48 ... 1920 (Increment: 16)
VCXG.2-32M / .I	16 ... 2048 (Increment: 16)
VCXG.2-51M / .XC / .I	16 ... 2448 (Increment: 16)
VCXG.2-51MP	16 ... 2448 (Increment: 16)
VCXG.2-57M / .I	16 ... 2464 (Increment: 16)
VCXG.2-65M.R	16 ... 3072 (Increment: 16)
VCXG.2-82M / .I	32 ... 2848 (Increment: 32)
VCXG.2-83UV / .TCG.2	32 ... 2848 (Increment: 32)
VCXG.2-124M	16 ... 4096 (Increment: 16)
VCXG.2-127M / .I	32 ... 4096 (Increment: 32)
VCXG.2-201M.R / .I	32 ... 5472 (Increment: 32)
VCXG.2-204M	32 ... 4480 (Increment: 32)
VCXG.2-241M / .XC / .I	32 ... 5312 (Increment: 32)
Color	
VCXG.2-13C	24 ... 1280 (Increment: 8)
VCXG.2-15C	16 ... 1440 (Increment: 32)
VCXG.2-25C	48 ... 1920 (Increment: 16)
VCXG.2-32C / .I	16 ... 2048 (Increment: 16)
VCXG.2-51C / .I	16 ... 2448 (Increment: 16)
VCXG.2-57C / .I	16 ... 2464 (Increment: 16)
VCXG.2-65C.R	16 ... 3072 (Increment: 16)
VCXG.2-82C / .I	32 ... 2848 (Increment: 32)
VCXG.2-124C	16 ... 4096 (Increment: 16)
VCXG.2-127C / .I	32 ... 4096 (Increment: 32)
VCXG.2-201C.R / .I	32 ... 5472 (Increment: 32)
VCXG.2-204C	32 ... 4480 (Increment: 32)
VCXG.2-241C / .I	32 ... 5312 (Increment: 32)

VCXU.2

Camera type	Values [Pixel]
Monochrom	
VCXU.2-13M	32 ... 1280 (Increment: 16)
VCXU.2-15M	16 ... 1440 (Increment: 32)
VCXU.2-31M	16 ... 2048 (Increment: 16)
VCXU.2-32M	16 ... 2048 (Increment: 16)
VCXU.2-50M	16 ... 2448 (Increment: 16)

Camera type	Values [Pixel]
VCXU.2-50MP	16 ... 2448 (Increment: 16)
VCXU.2-51M	16 ... 2448 (Increment: 16)
VCXU.2-57M	16 ... 2464 (Increment: 16)
VCXU.2-65M.R	16 ... 3072 (Increment: 16)
VCXU.2-123M	16 ... 4096 (Increment: 16)
VCXU.2-127M	32 ... 4096 (Increment: 32)
VCXU.2-201M.R	16 ... 5472 (Increment: 16)
VCXU.2-241M	32 ... 5312 (Increment: 32)
Color	
VCXU.2-13C	32 ... 1280 (Increment: 16)
VCXU.2-15C	16 ... 1440 (Increment: 32)
VCXU.2-31C	16 ... 2048 (Increment: 16)
VCXU.2-32C	16 ... 2048 (Increment: 16)
VCXU.2-50C	16 ... 2448 (Increment: 16)
VCXU.2-51C	16 ... 2448 (Increment: 16)
VCXU.2-57C	16 ... 2464 (Increment: 16)
VCXU.2-65C.R	16 ... 3072 (Increment: 16)
VCXU.2-123C	16 ... 4096 (Increment: 16)
VCXU.2-127C	32 ... 4096 (Increment: 32)
VCXU.2-201C.R	16 ... 5472 (Increment: 16)
VCXU.2-241C	32 ... 5312 (Increment: 32)

11.12.25**WidthMax**

Maximum width of the image (in pixels). Dimension is calculated after *Horizontal Binning*, *Decimation* or having executed any other function that would change the horizontal image dimension.

Name	WidthMax
Category	ImageFormatControl
Interface	Integer
Access	Read only
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2.XC / VCXG.2.I

Camera type	Values [Pixel]
Monochrom	
VCXG.2-13M	1280
VCXG.2-15M	1440
VCXG.2-25M	1920
VCXG.2-32M / .I	2048

Camera type	Values [Pixel]
VCXG.2-51M / .XC / .I	2448
VCXG.2-51MP	2448
VCXG.2-57M / .I	2464
VCXG.2-65M.R	3072
VCXG.2-82M / .I	2848
VCXG.2-83UV / .TCG.2	2848
VCXG.2-124M	4096
VCXG.2-127M / .I	4096
VCXG.2-201M.R / .I	5472
VCXG.2-204M	4480
VCXG.2-241M / .XC / .I	5312
Color	
VCXG.2-13C	1280
VCXG.2-15C	1440
VCXG.2-25C	1920
VCXG.2-32C / .I	2048
VCXG.2-51C / .I	2448
VCXG.2-57C / .I	2464
VCXG.2-65C.R	3072
VCXG.2-82C / .I	2848
VCXG.2-124C	4096
VCXG.2-127C / .I	4096
VCXG.2-201C.R / .I	5472
VCXG.2-204C	4480
VCXG.2-241C / .I	5312

VCXU.2

Camera type	Values [Pixel]
Monochrom	
VCXU.2-13M	1280
VCXU.2-15M	1440
VCXU.2-31M	2048
VCXU.2-32M	2048
VCXU.2-50M	2448
VCXU.2-50MP	2448
VCXU.2-51M	2448
VCXU.2-57M	2464
VCXU.2-65M.R	3072
VCXU.2-123M	4096
VCXU.2-127M	4096

Camera type	Values [Pixel]
VCXU.2-201M.R	5472
VCXU.2-241M	5312
Color	
VCXU.2-13C	1280
VCXU.2-15C	1440
VCXU.2-31C	2048
VCXU.2-32C	2048
VCXU.2-50C	2448
VCXU.2-51C	2448
VCXU.2-57C	2464
VCXU.2-65C.R	3072
VCXU.2-123C	4096
VCXU.2-127C	4096
VCXU.2-201C.R	5472
VCXU.2-241C	5312

11.13 Category: LUTControl


Features in this chapter describe the *Look-up table (LUT)* related features. For *LUT* related features, certain values are stored in the camera. This includes the coordinates of defective pixels so that they can be corrected.

Static pixel correction - General information


There is a certain probability of abnormal pixels – so-called defect pixels – occurring within sensors from all manufacturers. Charge quantity of these pixels does not linearly depend on exposure time.

The occurrence of these defect pixels is unavoidable and intrinsic to the manufacturing and aging process of the sensors.

The operation of the camera is not affected by these pixels. They only appear as brighter (*hot pixel*) or darker (*cold pixel*) spots on the recorded image.

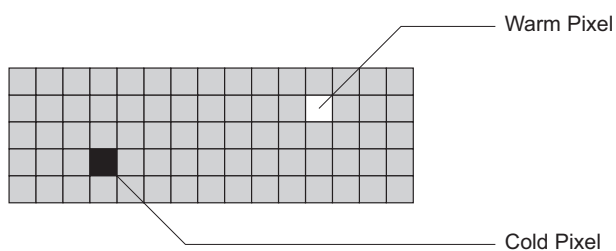

Charge quantity of "hot" and "cold" pixels compared with "normal" pixels:

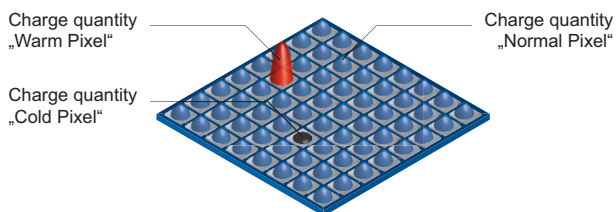

Correction algorithm (static pixel correction)


On Baumer cameras the problem of defect pixels is solved as follows:

- Possible defect pixels are identified during the production process of the camera.
- The coordinates of these pixels are stored in the factory settings of the camera.

Once the sensor readout is completed, correction takes place:

- Prior to further processing is readout of the values of the neighboring pixels at left and right of the defect pixels. (within the same bayer phase for color)
- Then the average value of these 2 pixels is determined to correct the first defect pixel
- Finally, the value of the defect pixel is corrected by using the previously corrected pixel and the pixel of the other side of the defect pixel

Examples for the correction of defect pixels

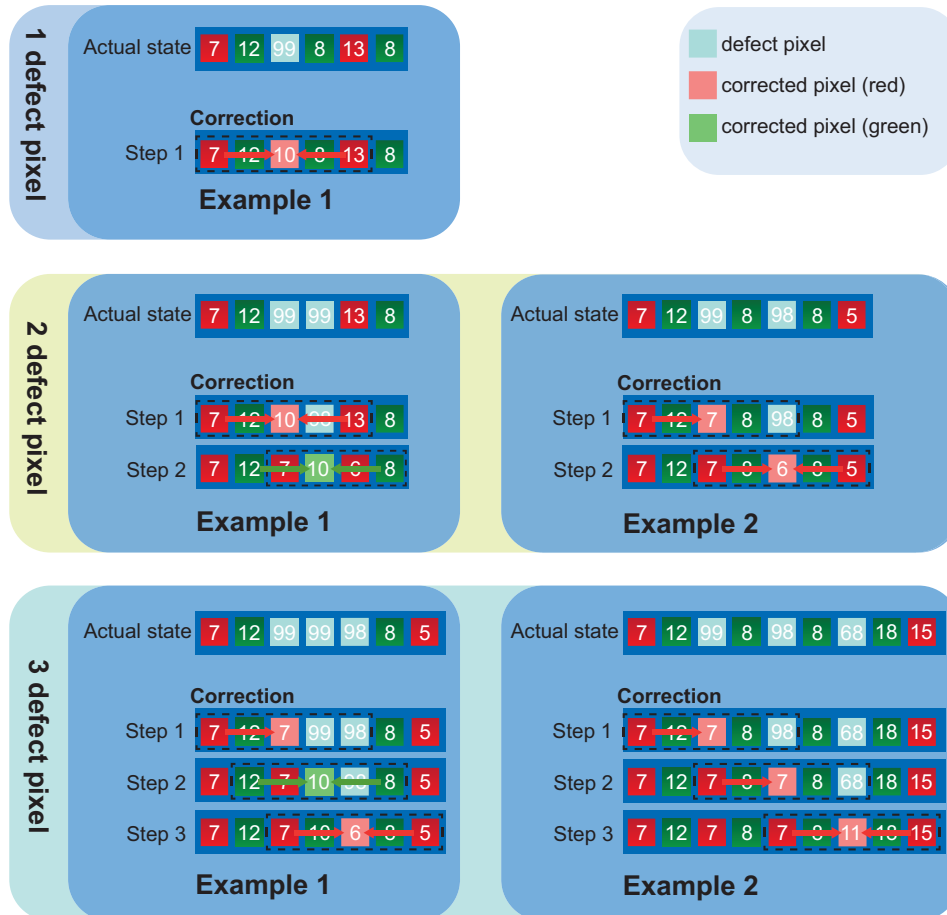

Add defective pixel to defective pixel list with *Baumer Camera Explorer*



INFO

Defect pixels must be added in full frame (without *Binning* / *Width* / *Height* / *OffsetX* / *OffsetY*), in raw data format and color calculation disabled (for color cameras).

Instruction:

- Start the *Camera Explorer*. Connect to the camera.
- Select the profile *GenICam Guru* (only *Camera Explorer* < v3.0).
- Open category *LUTControl*.
- Search for empty *DefectPixelListIndex*.
 $(DefectPixelListEntryPosX = 0 \mid DefectPixelListEntryPosY = 0)$
- Determine the coordinates of the defect pixel. Keep the mouse pointer over the defect pixel. The coordinates of the faulty pixel are provided in the status bar. For your convenience, you can enlarge the image.
- Enter the determined coordinates for X (*DefectPixelListEntryPosX*) and Y (*DefectPixelListEntryPosY*).
- Activate the registered *DefectPixelListIndex*.
 $DefectPixelListEntryActive = True$
- Stop the camera and start them again to take over the updated coordinates.

Result:

- ✓ You have added a defective pixel to the defect pixel list.

11.13.1 DefectPixelCorrection

Enable the correction of defect pixels.

Name	DefectPixelCorrection
Category	LUTControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.13.2 DefectPixelListEntryActive

Determines if the pixel correction is active for the selected entry.

Name	DefectPixelListEntryActive
Category	LUTControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.13.3 DefectPixelListEntryPosX

X position of the defect pixel.

Name	DefectPixelListEntryPosX
Category	LUTControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	0 ... Resolution of the sensor in X-direction (Increment: 1)

11.13.4 DefectPixelListEntryPosY

Y position of the defect pixel.

Name	DefectPixelListEntryPosY
Category	LUTControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	0 ... Resolution of the sensor in Y-direction (Increment: 1)

11.13.5 DefectPixelListIndex

Index to the pixel correction list.

Name	DefectPixelListIndex	
Category	LUTControl	
Interface	Integer	
Access	Read / Write	
Unit	-	
Values	0 ... 511 (Increment: 1)	

11.13.6 DefectPixelListSelector

Selects which Defect Pixel List to control.

Name	DefectPixelListSelector	
Category	LUTControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Pixel	Selects Defect Pixel List for defect pixels.

11.13.7 LUTContent

Describes the content of the selected *LUT*.

Name	LUTContent	
Category	LUTControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Gamma	The content of the selected <i>LUT</i> is defined by the parameter in the <i>Gamma</i> feature.
	Userdefined LUT	The content of the selected <i>LUT</i> is user-defined.

11.13.8 LUTEnable

Enables the selected *LUT*. It contains 2^{12} (4096) values for the available levels. These values can be adjusted by the user.

Color cameras apply *LUT* to all color channels together.

Name	LUTEnable
Category	LUTControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.13.9 LUTIndex

Control index (Offset) of the coefficient to access in the selected *LUT*.

Name	LUTIndex
Category	LUTControl
Interface	IInteger
Access	Read / Write
Unit	-
Values	0 ... 4095 (Increment: 1)

11.13.10 LUTSelector

Selects which *LUT* to control.

Name	LUTSelector	
Category	LUTControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Luminance	Select Luminance LUT.

11.13.11 LUTValue

Returns the value at entry *LUTIndex* of the *LUT* selected by *LUTSelector*.

Name	LUTValue
Category	LUTControl
Interface	IInteger
Access	Read only
Unit	-
Values	0 ... 4095 (Increment: 1)

11.14 Category: MemoryManagement

Category containing the memory management functions.

11.14.1 MemoryMaxBlocks

Maximum count of disposal memory blocks.

Name	MemoryMaxBlocks
Category	MemoryManagement
Interface	IInteger
Access	Read only
Unit	-
Values	0 ... 4294967295 (Increment: 1)

11.15 Category: SequencerControl

Category for the *Sequencer* Control features.

Sequencer allows for acquisition of an image series with automated camera re-parameterization based on events and signals. For doing so, the camera parameterization of each step is stored in so-called *Sequencer Sets*.

Stringing together a number of these *Sequencer Sets* results in a sequence. The connection of sequences is done by using different paths. In addition to the camera functions, the path-related functions are also part of *Sequencer Set*.


Sequencer Sets

Sequencer Sets combine camera features – comparable with a *User Set* – and *Sequencer* (set and path) related parameters.

The settings for the various camera functions are controlled via *Sequencer* and saved in *Sequencer Sets*. Information for switching via different paths is also stored.

This camera functions can be:

- *ExposureTime*
- *Gain*
- *Region of Interest (OffsetX / OffsetY / Width / Height)*
- *UserOutput*
- *Counter*

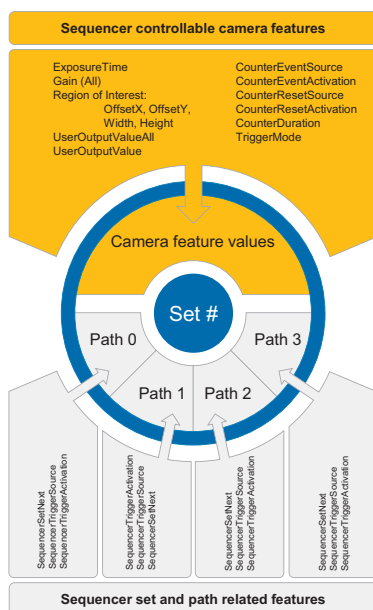

Each path involves:

- the destination for the set switch-over that is mapped by the *SequencerSetNext* feature
- the signal which change of state would trigger switchover and mapped as *SequencerTriggerSource*
- the change of state triggering switchover and mapped as *SequencerTriggerActivation*

Similar to *User Sets*, the camera's current parameterization will be overwritten when loading *Sequencer Set* and enabling *Sequencer*.

Sequencer configuration

To avoid overwriting current camera settings during *Sequencer* configuration, the camera must be set to *SequencerConfigurationMode*.

Once the camera has been set to *SequencerConfigurationMode*, each *Sequencer Sets* can be selected via *SequencerSetSelector*, configured and saved by executing *SequencerSetSave*.

Starting the configured sequence requires to switch the *SequencerConfigurationMode* = off to enable *SequencerMode*.

11.15.1 SequencerConfigurationMode

Controls if the *SequencerConfigurationMode* is enabled.

Name	SequencerConfigurationMode	
Category	SequencerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	On	Enables <i>SequencerConfigurationMode</i> .
	Off	Disables <i>SequencerConfigurationMode</i> .

11.15.2 SequencerFeatureEnable

Enables the selected feature and make it active in all the *Sequencer Sets*.

Name	SequencerFeatureEnable	
Category	SequencerControl	
Interface	IBoolean	
Access	Read only	
Unit	-	
Values	true = 1 (On)	
	false = 0 (Off)	

11.15.3 SequencerFeatureSelector

Selects the features controlled by *Sequencer*.

Name	SequencerFeatureSelector	
Category	SequencerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	see table(s) below	

VCXG.2 / VCXG.2.XC / VCXG.2.I / VCXU.2

Values (Features)	
CounterDuration	LinePWMDuration*

Values (Features)	
CounterEventActivation	LinePWMDutyCycle*
CounterEventSource	LinePWMMode*
CounterResetActivation	OffsetX
CounterResetSource	OffsetY
ExposureMode	TriggerMode
ExposureTime	UserOutputValue
Gain	UserOutputValueAll
Height	Width

* only VCXG.2-51M/C.I (≥ Rel. 4.2)

11.15.4 SequencerMode

Controls if *Sequencer* is enabled.



INFO

To use this feature, the features *BalanceWhiteAuto* (color cameras only) and *SequencerConfigurationMode* must be = *off*.

To write this feature, set *TLPParamsLocked* = 0.

Name	SequencerMode	
Category	SequencerControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	On	Enables <i>Sequencer</i> .
	Off	Disables <i>Sequencer</i> .

11.15.5 SequencerPathSelector

Selects the path containing the subsequent settings (*SequencerSetNext*, *SequencerTriggerSource* and *SequencerTriggerActivation*).

Name	SequencerPathSelector	
Category	SequencerControl	
Interface	IInteger	
Access	Read / Write	
Unit	-	
Values	0 ... 3 (Increment: 1)	

11.15.6 SequencerSetActive

Contains the currently active *Sequencer Set*.

Name	SequencerSetActive
Category	SequencerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 127 (Increment: 1)

11.15.7 SequencerSetLoad

Loads the *Sequencer Set* selected with *SequencerSetSelector*.

Name	SequencerSetLoad
Category	SequencerControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.15.8 SequencerSetNext

Specifies the next *Sequencer Set*.

Name	SequencerSetNext
Category	SequencerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 127 (Increment: 1)

11.15.9 SequencerSetSave

Saves the current device state to the *Sequencer Set* selected by the *SequencerSetSelector*.

Name	SequencerSetSave
Category	SequencerControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.15.10 SequencerSetSelector

Selects *Sequencer Set* to which related function parameters will apply.

Name	SequencerSetSelector
Category	SequencerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 127 (Increment: 1)

11.15.11 SequencerSetStart

Sets the start *Sequencer Set*, which is the first set used.

Name	SequencerSetStart
Category	SequencerControl
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 127 (Increment: 1)

11.15.12 SequencerTriggerActivation

Defines which signal edge would trigger set switching within an *Sequencer*.

Name	SequencerTriggerActivation	
Category	SequencerControl	
Interface	Enumeration	
Access	Read / Write	
Unit	-	
Values	AnyEdge	Specifies that the trigger is considered valid on the falling or rising edge of the source signal.
	FallingEdge	Specifies that the trigger is considered valid on the falling edge of the source signal.
	LevelHigh	Specifies that the trigger is considered valid as long as the source signal level is on <i>high</i> .
	LevelLow	Specifies that the trigger is considered valid as long as the source signal level is on <i>low</i> .
	RisingEdge	Specifies that the trigger is considered valid on the rising edge of the source signal.

11.15.13 SequencerTriggerSource

Specifies the internal signal or Input to use as trigger source for the Sequencer.

Name	SequencerTriggerSource
Category	SequencerControl
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	see table(s) below

VCXG.2 / VCXG.2 / VCXG.2.I / VCXU.2

Values [SequencerTriggerSource]	
Off	Disabled.
Counter1End	Starts when receiving <i>Counter End</i> .
Counter2End	Starts when receiving <i>Counter End</i> .
Line0	Specifies <i>Line0</i> as external trigger source.
Line1	Specifies <i>Line1</i> as external trigger source.
Line2	Specifies <i>Line2</i> as external trigger source.
Line3*	Specifies <i>Line3</i> as external trigger source.
ExposureActive	Starts when receiving <i>Exposure Active</i> .
ReadOutActive	Starts when receiving <i>Read Out Active</i> .
Timer1End	Starts when receiving <i>Timer End</i> .

* nur VCXG.2.I

11.16 Category: TestControl

Category for test control functions.

11.16.1 TestPendingAck

Test of device function *PendingAck*.

Name	TestPendingAck
Category	TestControl
Interface	IInteger
Access	Read / Write
Unit	ms
Values	0 ... 4294967295 (Increment: 1)

11.17 **Category: TransportLayerControl**

This chapter provides the *Transport Layer* control functions.

11.17.1 **EnergyEfficientEthernetEnable (GigE only)**

Controls whether the Energy Efficient / Green Ethernet mode (802.3az) is enabled or disabled.



INFO

A device reboot is needed for changes to take effect.

Name	EnergyEfficientEthernetEnable
Category	TansportLayerControl
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2 Category: GigEVision

Category that contains the features pertaining to the GigE Vision transport layer of the device.

11.17.2.1 GVSPConfigurationBlockID64Bit

Enables the 64 bit block ID length.

Name	GVSPConfigurationBlockID64Bit	
Category	TansportLayerControl → GigEVision	
Interface	IBoolean	
Access	Read only	
Unit	-	
Values	true = 1 (On) false = 0 (Off)	

11.17.2.2 GevCCP

Controls the device access privilege of an application.

Name	GevCCP	
Category	TansportLayerControl → GigEVision	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	OpenAccess	Open Access.
	ExclusiveAccess	Exclusive Access.
	ControlAccess	Control Access.

11.17.2.3 GevCurrentDefaultGateway

Reports the default gateway IP address to be used on the given logical link.

Name	GevCurrentDefaultGateway	
Category	TansportLayerControl → GigEVision	
Interface	IInteger	
Access	Read only	
Unit	-	
Values	IP address	

11.17.2.4 GevCurrentIPAddress

Reports the IP address for the given logical link.

Name	GevCurrentIPAddress
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	IP address

11.17.2.5 GevCurrentIPConfigurationDHCP

Controls whether the DHCP IP configuration scheme is activated on the given logical link.

Name	GevCurrentIPConfigurationDHCP
Category	TansportLayerControl → GigEVision
Interface	Boolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.6 GevCurrentIPConfigurationLLA

Controls whether the Link Local Address IP configuration scheme is activated on the given logical link.

Name	GevCurrentIPConfigurationLLA
Category	TansportLayerControl → GigEVision
Interface	Boolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.7 GevCurrentIPConfigurationPersistentIP

Controls whether the PersistentIP configuration scheme is activated on the given logical link.

Name	GevCurrentIPConfigurationPersistentIP
Category	TansportLayerControl → GigEVision
Interface	Boolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.8 GevCurrentSubnetMask

Reports the subnet mask of the given logical link.

Name	GevCurrentSubnetMask
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	IP address

11.17.2.9 GevFirstURL

Indicates the first URL to the GenICam XML device description file. The First URL is used as the first choice by the application to retrieve the GenICam XML device description file.

Name	GevFirstURL
Category	TansportLayerControl → GigEVision
Interface	IStrng
Access	Read only
Unit	-
Values	URL

11.17.2.10 GevGVCPExtendedStatusCodes

Enables the generation of extended status codes.

Name	GevGVCPExtendedStatusCodes
Category	TansportLayerControl → GigEVision
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.11 GevGVCPExtendedStatusCodesSelector

Selects the GigE Vision version to control extended status codes for.

Name	GevGVCPExtendedStatusCodesSelector	
Category	TansportLayerControl → GigEVision	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Version1_1	Version1_1.
	Version2_0	Version2_0.

11.17.2.12 GevGVCPPendingAck

Enables the generation of PENDING_ACK.

Name	GevGVCPPendingAck
Category	TransportLayerControl → GigEVision
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.13 GevIPConfigurationStatus

Reports the current IP configuration status.

Name	GevIPConfigurationStatus	
Category	TransportLayerControl → GigEVision	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	None	None.
	PersistentIP	Persistent IP.
	DHCP	DHCP.
	LLA	LLA.
	ForceIP	Force IP.

11.17.2.14 GevInterfaceSelector

Selects which logical link to control.

Name	GevInterfaceSelector
Category	TransportLayerControl → GigEVision
Interface	IInteger
Access	Read / Write
Unit	-
Values	≥ 0 (Increment: 1)

11.17.2.15 GevMACAddress

MAC address of the logical link.

Name	GevMACAddress
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	≥ 0

11.17.2.16 GevMCDA

Controls the destination IP address for the message channel.

Name	GevMCDA
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.17 GevMCPHostPort

Controls the port to which the device must send messages.

Name	GevMCPHostPort
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 65535 (Increment: 1)

11.17.2.18 GevMCRC

Controls the number of retransmissions allowed when a message channel message times out.

Name	GevMCRC
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.19 GevMCSP

This feature indicates the source port for the message channel.

Name	GevMCSP
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	≥ 0

11.17.2.20 GevMCTT

Provides the transmission timeout value in milliseconds.

Name	GevMCTT
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	ms
Values	> 0

11.17.2.21 GevNumberOfInterfaces

Indicates the number of logical links supported by this device.

Name	GevNumberOfInterfaces
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	> 0

11.17.2.22 GevPAUSEFrameReception

Controls whether incoming PAUSE Frames are handled on the given logical link.

Name	GevPAUSEFrameReception
Category	TansportLayerControl → GigEVision
Interface	Boolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.23 GevPersistentDefaultGateway

Controls the persistent default gateway for this logical link. It is only used when the device boots with the Persistent IP configuration scheme.

Name	GevPersistentDefaultGateway
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.24 GevPersistentIPAddress

Controls the Persistent IP address for this logical link. It is only used when the device boots with the Persistent IP configuration scheme.

Name	GevPersistentIPAddress
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.25 GevPersistentSubnetMask

Controls the Persistent subnet mask associated with the Persistent IP address on this logical link. It is only used when the device boots with the Persistent IP configuration scheme.

Name	GevPersistentSubnetMask
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.26 GevPrimaryApplicationIPAddress

Returns the address of the primary application.

Name	GevPrimaryApplicationIPAddress
Category	TransportLayerControl → GigEVision
Interface	Integer
Access	Read only
Unit	-
Values	≥ 0

11.17.2.27 GevPrimaryApplicationSocket

Returns the UDP source port of the primary application.

Name	GevPrimaryApplicationSocket
Category	TransportLayerControl → GigE Vision
Interface	Integer
Access	Read only
Unit	-
Values	≥ 0

11.17.2.28 GevPrimaryApplicationSwitchoverKey

Controls the key to use to authenticate primary application switchover requests.

Name	GevPrimaryApplicationSwitchoverKey
Category	TransportLayerControl → GigE Vision
Interface	Integer
Access	Write only
Unit	-
Values	≥ 0

11.17.2.29 GevSCDA

Controls the destination IP address of the selected stream channel to which a GVSP transmitter must send data stream or the destination IP address from which a GVSP receiver may receive data stream.

Name	GevSCDA
Category	TransportLayerControl → GigE Vision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.30 GevSCFTD

This feature indicates the delay (in timestamp counter unit) to insert between each block (image) for this stream channel.

Name	GevSCFTD
Category	TransportLayerControl → GigE Vision
Interface	Integer
Access	Read / Write
Unit	-
Values	0 ... 4294967295 (Increment: 1)

11.17.2.31 GevSCPD

Controls the delay (in timestamp counter unit) to insert between each packet for this stream channel. This can be used as a crude flow-control mechanism if the application or the network infrastructure cannot keep up with the packets coming from the device.

Name	GevSCPD
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.32 GevSCPHostPort

Controls the port of the selected channel to which a GVSP transmitter must send data stream or the port from which a GVSP receiver may receive data stream. Setting this value to 0 closes the stream channel.

Name	GevSCPHostPort
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0

11.17.2.33 GevSCPIInterfaceIndex

Index of the logical link to use.

Specific streams might be hard-coded to specific logical links. Therefore this field might be read-only on certain devices.

Name	GevSCPIInterfaceIndex
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read / (Write)
Unit	-
Values	0 ... 3 (Increment: 1)

11.17.2.34 GevSCPSToNotFragment

The state of this feature is copied into the "do not fragment" bit of IP header of each stream packet. It can be used by the application to prevent IP fragmentation of packets on the stream channel.

Name	GevSCPSToNotFragment
Category	TransportLayerControl → GigE Vision
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.35 GevSCPSTestPacket

Sends a test packet. When this feature is set, the device will fire one test packet. The "don't fragment" bit of IP header must be set for this test packet.

Name	GevSCPSTestPacket
Category	TransportLayerControl → GigE Vision
Interface	IBoolean
Access	Read / Write
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.36 GevSCPSPacketSize

Specifies the stream packet size, in bytes, to send on the selected channel for a GVSP transmitter or specifies the maximum packet size supported by a GVSP receiver.

Name	GevSCPSPacketSize
Category	TransportLayerControl → GigE Vision
Interface	Integer
Access	Read / Write
Unit	Byte
Values	> 0 (Increment: 2)

11.17.2.37 GevSCSP

Indicates the source port of the stream channel.

Name	GevSCSP
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0 (Increment: 1)

11.17.2.38 GevSecondURL

Indicates the second URL to the GenICam XML device description file. This URL is an alternative if the application was unsuccessful to retrieve the device description file using the first URL.

Name	GevSecondURL
Category	TansportLayerControl → GigEVision
Interface	IStrng
Access	Read only
Unit	-
Values	URL

11.17.2.39 GevStreamChannelSelector

Selects the stream channel to control.

Name	GevStreamChannelSelector
Category	TansportLayerControl → GigEVision
Interface	Integer
Access	Read / Write
Unit	-
Values	≥ 0 (Increment: 1)

11.17.2.40 GevSupportedOption

Returns if the selected GEV option is supported.

Name	GevSupportedOption
Category	TansportLayerControl → GigEVision
Interface	IBoolean
Access	Read only
Unit	-
Values	true = 1 (On) false = 0 (Off)

11.17.2.41 GevSupportedOptionSelector

Selects the GEV option to interrogate for existing support.

Name	GevSupportedOptionSelector
Category	TansportLayerControl → GigEVision
Interface	IEnumeration
Access	Read / Write
Unit	-
Values	camera dependent values

11.17.2.42 InterfaceSpeedMode

Provides the interface speed mode as a string.

Name	InterfaceSpeedMode	
Category	TansportLayerControl → GigEVision	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	Ethernet100Gbps	Operated at 100 Gbit/s.
	Ethernet100Mbps	Operated at 100 Mbps.
	Ethernet50Gbps	Operated at 50 Gbit/s.
	Ethernet10Gbps	Operated at 10 Gbit/s.
	Ethernet1Gbps	Operated at 1 Gbit/s.
	Ethernet2_5Gbps	Operated at 2.5 Gbit/s.
	Ethernet5Gbps	Operated at 5 Gbit/s.

11.17.3 PayloadSize

Reports the number of bytes transferred for every image or *Chunk* on the Stream Channel with the current settings. Total size of data payload for a data block.

Name	PayloadSize
Category	TansportLayerControl
Interface	IInteger
Access	Read only
Unit	Byte
Values	0 ... depends on current parameterization (Increment: 1)

11.17.4 Category: TransportLayerControl → USB3Vision

Category that contains the features pertaining to the USB3 Vision transport layer of the device.

11.17.4.1 InterfaceSpeedMode

Show the interface speed mode as string.

Name	InterfaceSpeedMode	
Category	TansportLayerControl → USB3Vision	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	FullSpeed	USB operation at 12 Mbps.
	HighSpeed	USB operation at 480 Mbps.
	LowSpeed	USB operation at 1.5 Mbps.
	SuperSpeed	USB operation at 5 Gbps.

11.17.4.2 SIControl

Controls streaming operation.

Name	SIControl	
Category	TansportLayerControl → USB3Vision	
Interface	IEnumeration	
Access	Read only	
Unit	-	
Values	StreamDisabled	Disable Streaming.
	StreamEnabled	Enable Streaming.

11.17.4.3 SIPayloadFinalTransfer1Size

Size of first final Payload Transfer.

Name	SIPayloadFinalTransfer1Size	
Category	TansportLayerControl → PtpControl	
Interface	IInteger	
Access	Read only	
Unit	-	
Values	0 - 4294967295 (Increment: 1)	

11.17.4.4 SIPayloadFinalTransfer2Size

Size of second final Payload Transfer.

Name	SIPayloadFinalTransfer2Size
Category	TansportLayerControl → PtpControl
Interface	Integer
Access	Read only
Unit	-
Values	0 - 4294967295 (Increment: 1)

11.17.4.5 SIPayloadTransferCount

Expected number of Payload Transfers.

Name	SIPayloadTransferCount
Category	TansportLayerControl → PtpControl
Interface	Integer
Access	Read only
Unit	-
Values	0 - 4294967295 (Increment: 1)

11.17.4.6 SIPayloadTransferSize

Expected size of a single Payload Transfer.

Name	SIPayloadTransferSize
Category	TansportLayerControl → PtpControl
Interface	Integer
Access	Read only
Unit	-
Values	0 - 4294967295 (Increment: 1)

11.18 Category: UserSetControl

Category including features for *User Sets* control. It allows loading or saving factory or user-defined settings.

Loading the factory default *User Sets* guarantees a state enabling continuous acquisition start by the mandatory features only.

These *User Sets* are stored to the camera and can be loaded, saved and transferred to other cameras.

11.18.1 UserSetDefault

Four *User Sets* are available for this camera. *User Set 1*, *User Set 2*, *User Set 3* are user-specific and can contain user-definable parameters.

The factory settings are stored in the *User Set: Default*. This is the only *User Set* that cannot be edited.

Name	UserSetDefault	
Category	UserSetControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Default	Select the factory predefined <i>User Set</i> .
	User Set 1	Select the <i>User Set 1</i> (available when saved).
	User Set 2	Select the <i>User Set 2</i> (available when saved).
	User Set 3	Select the <i>User Set 3</i> (available when saved).

11.18.2 UserSetFeatureEnable

Activates the feature selected with *UserSetFeatureSelector*.

Name	UserSetFeatureEnable	
Category	UserSetControl	
Interface	IBoolean	
Access	Read only	
Unit	-	
Values	true = 1 (On)	
	false = 0 (Off)	

11.18.3 UserSetFeatureSelector

Selects which individual feature is to be controlled.

Name	UserSetFeatureSelector	
Category	UserSetControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	see table(s) below	

VCXG.2 / VCXG.2.I / VCXG.2.XC

Features		
AcquisitionFrameCount	DeviceLinkThroughputLimit	OffsetY
AcquisitionFrameRate	DeviceTemperatureStatus-Transition	PixelFormat
AcquisitionFrameRate-Enable	EventNotification	ReadoutMode
AcquisitionMode	ExposureAuto	ReverseX
ActionDeviceKey	ExposureAutoMaxValue	ReverseY
ActionGroupKey	ExposureAutoMinValue	SensorShutterMode
ActionGroupMask	ExposureMode	SequencerSetNext
AutoFeatureHeight	ExposureTime	SequencerSetStart
AutoFeatureOffsetX	FrameCounter	SequencerTrigger-Activation
AutoFeatureOffsetY	Gain	SequencerTriggerSource
AutoFeatureWidth	GainAuto	TestPattern
BalanceWhiteAuto	GainAutoMaxValue	TimerDelay
BinningHorizontal	GainAutoMinValue	TimerDuration
BinningHorizontalMode	Gamma	TimerTriggerActivation
BinningVertical	Height	TimerTriggerSource
BinningVerticalMode	LUTContent	TriggerActivation
BlackLevel	LUTEnable	TriggerDelay
BrightnessAutoNominalValue	LUTValue	TriggerMode
BrightnessAutoPriority	LineDebouncerHigh-TimeAbs	TriggerSource
ChunkEnable	LineDebouncerLow-TimeAbs	UserOutputValue
ChunkModeActive	LineInverter	UserOutputValueAll
ColorTransformationAuto	LineMode	Width
CounterDuration	LinePWMDuration ¹	
CounterEventActivation	LinePWMMaxDuration ¹	
CounterEventSource	LinePWMMode ¹	
CounterResetActivation	LineSource	
CounterResetSource	OffsetX	
DefectPixelCorrection	LinePWMMode ¹	

¹⁾ only VCXG.2.I

VCXU.2

Features		
AcquisitionFrameCount	DeviceLinkThroughputLimit	OffsetY
AcquisitionFrameRate	DeviceTemperatureStatus-Transition	PixelFormat
AcquisitionFrameRate-Enable	EventNotification	ReadoutMode
AcquisitionMode	ExposureAuto	ReverseX

Features		
AutoFeatureHeight	ExposureAutoMaxValue	ReverseY
AutoFeatureOffsetX	ExposureAutoMinValue	SensorShutterMode
AutoFeatureOffsetY	ExposureMode	SequencerSetNext
AutoFeatureWidth	ExposureTime	SequencerSetStart
BinningHorizontal	FrameCounter	SequencerTrigger-Activation
BinningHorizontalMode	Gain	SequencerTriggerSource
BinningVertical	GainAuto	TestPattern
BinningVerticalMode	GainAutoMaxValue	TimerDelay
BlackLevel	GainAutoMinValue	TimerDuration
BrightnessAutoNominalValue	Gamma	TimerTriggerActivation
BrightnessAutoPriority	Height	TimerTriggerSource
ChunkEnable	LUTContent	TriggerActivation
ChunkModeActive	LUTEnable	TriggerDelay
ColorTransformationAuto	LUTValue	TriggerMode
CounterDuration	LineDebouncerHigh-TimeAbs	TriggerSource
CounterEventActivation	LineDebouncerLow-TimeAbs	UserOutputValue
CounterEventSource	LineInverter	UserOutputValueAll
CounterResetActivation	LineMode	Width
CounterResetSource	LineSource	
DefectPixelCorrection	OffsetX	

11.18.4 UserSetLoad

Loads the *UserSetSelector* specified by *User Set* to the device and activates device.



INFO

The camera must be stopped before this feature can be edited.

Name	UserSetLoad
Category	UserSetControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.18.5 UserSetSave

Save the *UserSetSelector* specified by *User Set* to the non-volatile device memory.

**INFO**

Default settings are stored in *User Set: Default*. This is the only *User Set* that cannot be edited. To save the configuration select at *UserSetSelector* (*UserSet1*, *UserSet2* or *UserSet3*).

Name	UserSetSave
Category	UserSetControl
Interface	ICommand
Access	Write only
Unit	-
Values	-

11.18.6 UserSetSelector

Selects the *User Set* to load, save or configure.

**INFO**

Default settings are stored in *User Set: Default*. This is the only *User Set* that cannot be edited. To save the configuration select at *UserSetSelector* (*UserSet1*, *UserSet2* or *UserSet3*).

Name	UserSetSelector	
Category	UserSetControl	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Default	Select the factory predefined <i>User Set</i> .
	User Set 1	Select the <i>User Set 1</i> .
	User Set 2	Select the <i>User Set 2</i> .
	User Set 3	Select the <i>User Set 3</i> .

11.19 Category: **boCalibrationData**

Category for functions of calibration data.



INFO

Calibration setting

Calibration is not in the camera and either via *Camera Explorer*. Enter here the category parameters to be determined in the application environment by external software (e.g. *OpenCV*). This calibration data is saved non-volatile to the camera.

For calibration, the camera provides image together with stored calibration data. Calibration must be performed using external software.

11.19.1 **boCalibrationAngularAperture**

Angular lens aperture as the angular lens size as seen from the focal point in degrees.

Name	boCalibrationAngularAperture	
Category	boCalibrationData	
Interface	IFloat	
Access	Read / Write	
Unit	°	
Values	0.000000 ... 360.000000 (Increment: 1.00)	

11.19.2 **boCalibrationDataConfigurationMode**

Controls whether *boCalibrationDataConfigurationMode* is active.

Name	boCalibrationDataConfigurationMode	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Off	Disables <i>boCalibrationDataConfigurationMode</i> .
	On	Enables <i>boCalibrationDataConfigurationMode</i> .

11.19.3 **boCalibrationDataSave**

Save the current calibration data to the non-volatile device memory.

Name	boCalibrationDataSave	
Category	boCalibrationData	
Interface	ICommand	
Access	Write only	
Unit	-	
Values	-	

11.19.4 boCalibrationDataVersion

Version of the optical controller.

Name	boCalibrationDataVersion
Category	boCalibrationData
Interface	IString
Access	Read only
Unit	-
Values	-

11.19.5 boCalibrationFocalLength

Focal length in millimeters (mm).

Name	boCalibrationFocalLength
Category	boCalibrationData
Interface	IFloat
Access	Read / Write
Unit	mm
Values	0.000000 ... 4,294,967,296.000000 (Increment: 1.00)

11.19.6 boCalibrationMatrixSelector

Selection of the calibration matrix.

Name	boCalibrationMatrixSelector	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Camera Matrix	Selection of the camera matrix.
	New Camera Matrix	Selection of the camera matrix considering the geometric distortion.

11.19.7 boCalibrationMatrixValue

Selected value of the calibration matrix.

Name	boCalibrationMatrixValue
Category	boCalibrationData
Interface	IFloat
Access	Read only
Unit	-
Values	-3.40282e+38 ... 3.40282e+38 (Increment: 1.00)

11.19.8 boCalibrationMatrixValueSelector

Value selector of the calibration matrix.

Name	boCalibrationMatrixValueSelector	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Value 11	Selects the matrix value in row 1 column 1.
	Value 12	Selects the matrix value in row 1 column 2.
	Value 13	Selects the matrix value in row 1 column 3.
	Value 21	Selects the matrix value in row 2 column 1.
	Value 22	Selects the matrix value in row 2 column 2.
	Value 23	Selects the matrix value in row 2 column 3.
	Value 31	Selects the matrix value in row 3 column 1.
	Value 32	Selects the matrix value in row 3 column 2.
	Value 33	Selects the matrix value in row 3 column 3.

11.19.9 boCalibrationVectorSelector

Selects the calibration vector.

Name	boCalibrationVectorSelector	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	rvec	Selects the output rotation vector.
	tvec	Selects the translation vector.

11.19.10 boCalibrationVectorValue

Value of the selected calibration vector.

Name	boCalibrationVectorValue	
Category	boCalibrationData	
Interface	IFloat	
Access	Read only	
Unit	-	
Values	-3.40282e+38 ... 3.40282e+38 (Increment: 1.00)	

11.19.11 boCalibrationVectorValueSelector

Selects value selector for calibration vector.

Name	boCalibrationVectorValueSelector	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	Value 1	Selects vector value 1.
	Value 2	Selects vector value 2.
	Value 3	Selects vector value 3.

11.19.12 boGeometryDistortionValue

Selected geometric distortion value.

Name	boGeometryDistortionValue	
Category	boCalibrationData	
Interface	IFloat	
Access	Read only	
Unit	-	
Values	-3.40282e+38 ... 3.40282e+38 (Increment: 1.00)	

11.19.13 boGeometryDistortionValueSelector

Selector for geometric distortion.

Name	boGeometryDistortionValueSelector	
Category	boCalibrationData	
Interface	IEnumeration	
Access	Read / Write	
Unit	-	
Values	k1	Selects geometric distortion value k1.
	k2	Selects geometric distortion value k2.
	k3	Selects geometric distortion value k3.
	p1	Selects geometric distortion value p1
	p2	Selects geometric distortion value p2.

12 USB interface functionality

12.1 Device information

This device information is part of the camera's *USB-Descriptors*.

Included information:

- Manufacturer ID (*VID*)
- Product ID (*PID*)
- General unique identifier (*GUID*)
- Name of device manufacturer (*Manufacturer*)
- Serial number (*iSerialNumber*)

Camera type	Baumer USB Vendor ID [Hexadecimal]	Baumer USB Product ID [Hexadecimal]
VCXU.2	2825	0171

13 GigE interface functionality

13.1 Package size and Maximum Transmission Unit (MTU)

Network packets can be of different sizes. The size depends on the network components used. When using GigE^{Vision®-compatible} devices, using larger-sized packages is generally recommended. First, there is less overhead per packet and second larger packets reduce CPU load.

The size of UDP packets can vary from 576 bytes to MTU.

MTU describes the maximum packet size which all involved network components can process.

Basically, modern network hardware supports a packet size of 1500- bytes as defined in the GigE network standard.

""Jumbo frames"" simply mean a packet size of more than 1500 bytes. Baumer cameras are capable of MTU processing up to 9018 bytes.

13.2 Inter Packet Gap (IPG)

For optimal results in image transmission, some Ethernet-specific factors must be taken into account.


When starting image transfer at a camera, data packets are transferred with maximum transfer speed. Compliant to the network standard, Baumer cameras apply a minimum distance of 96 bits time between every data packet.

This minimum distance is referred to as *Inter-Packet Gap (IPG)*.



INFO


According to the Ethernet standard, the IPG must not be inferior to 12 bytes.

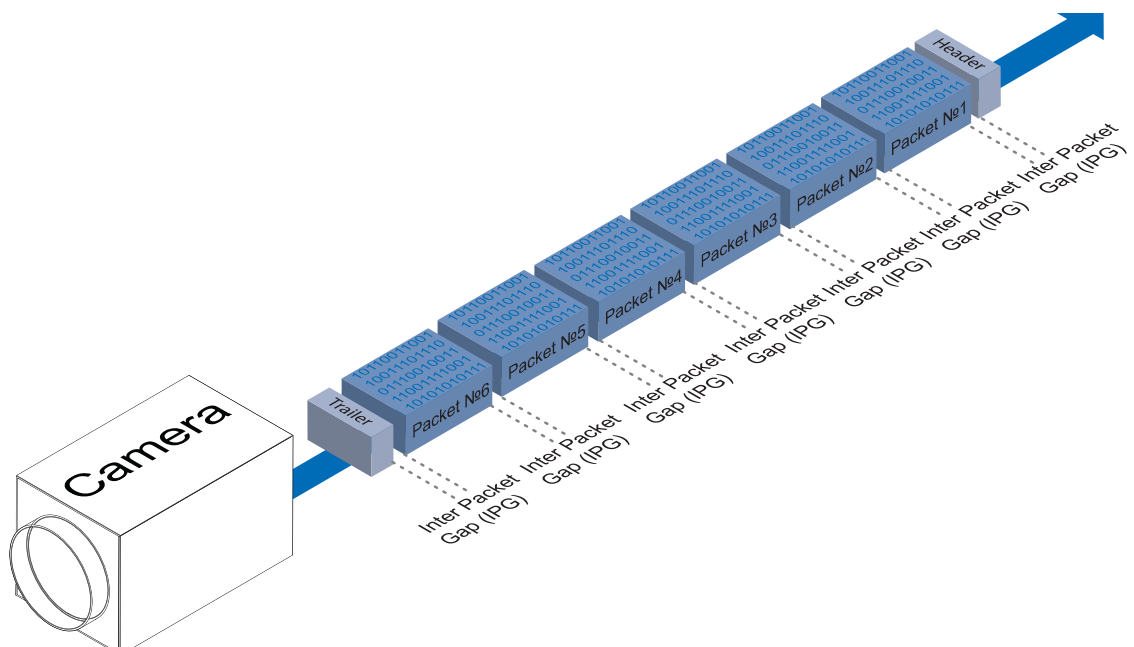

Example 1: Multicamera operation - Minimum IPG

Setting the minimum IPG means maximum speed in frame transmission. This means full network load, even at frame rates of 1 fps. Such "bursts" may cause overload to individual network components which results into packet loss. This applies particularly to the use of multiple cameras.

Parallel image transmission by two cameras would cause such burst at a transmission rate of 2 Gbits/sec. The data must be buffered to the switch for subsequent transfer at a speed of 1 Gbit/s. According to internal buffer switch properties, this would do without any problems with up to n cameras ($n \geq 1$). More cameras would cause packet loss. Nevertheless, lost packets can be regained by appropriate Resend mechanism, which however adds load to the network components.

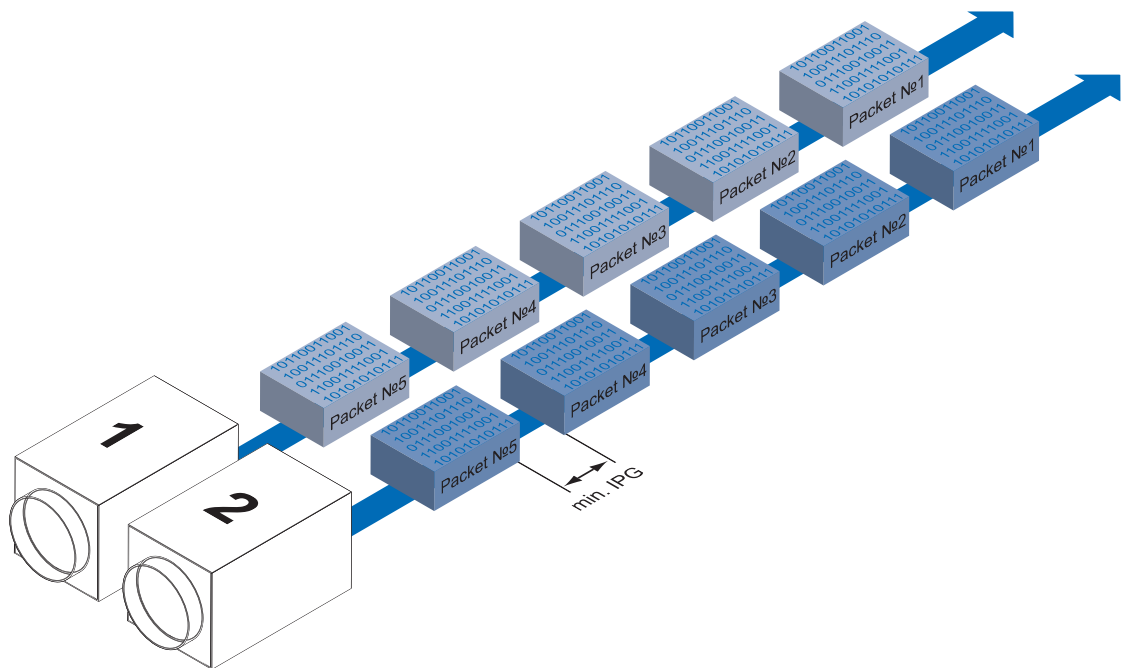


Example 2: Multi-camera operation - Optimal IPG (GigE)

Better optimize IPG size.

Optimal IPG [byte] = (number of cameras-1)*packet size + 2 × minimum IPG

This way, both data packets can be transmitted one after another (zipper method) without the need for intermediate switch buffering.

IPG mapping in the camera uses the *GevSCPD* function. Observe the specified unit. Conversion may be required.

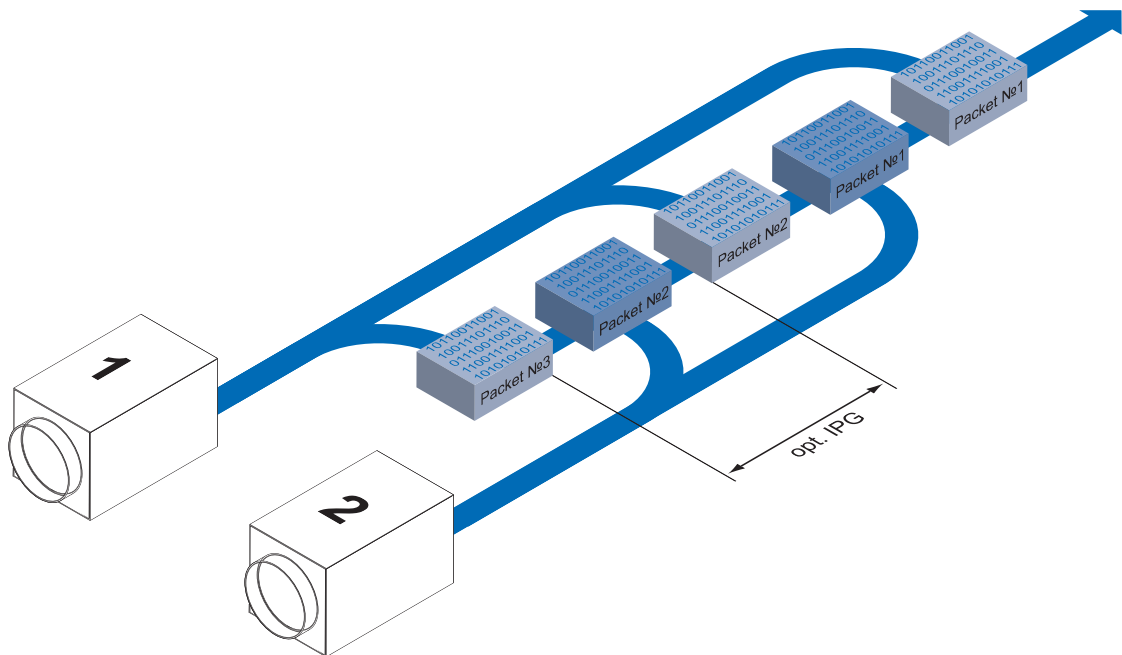


13.3 Frame Transmission Delay

Another approach to packet sorting in multi-camera operation is *Frame Transmission Delay*. Saving the currently acquired image to the camera and starting transfer at the predefined delay allows for transmission to PC of all frames at once.


For process-specific reasons, all cameras will stop image acquisition at the same time. Now, the cameras do not transmit their images all at once, but - according to the specified transmission delays - one after the other. In doing so, the first camera immediately starts transmission, i.e. with "0" delay.

The following scenario is an example:

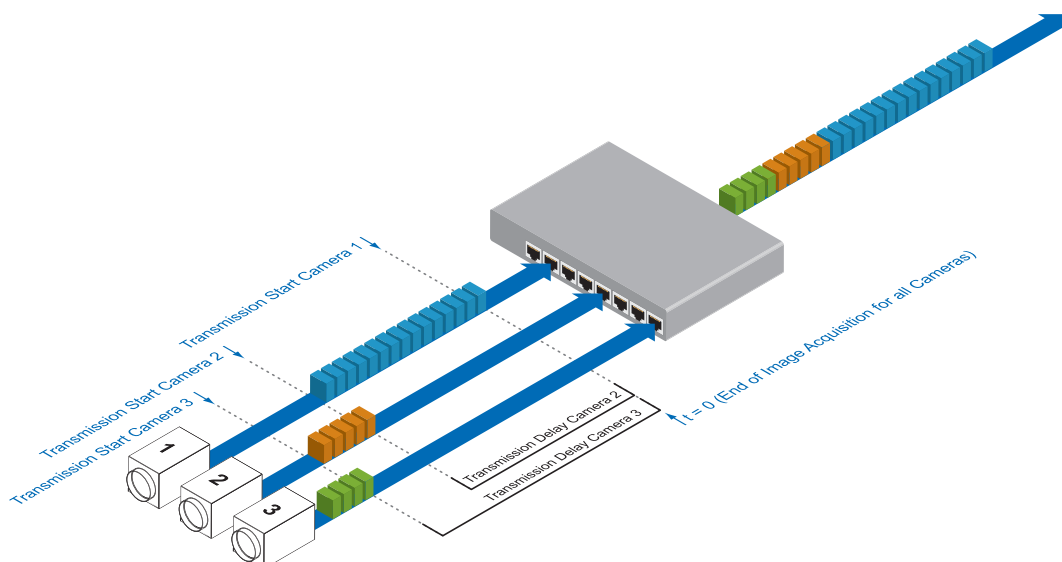

Time savings in multi-camera operation

As already mentioned, feature *Frame Transmission Delay* is particularly intended for multi-camera operation and using different camera models. This would particularly speed up image transmission of individual cameras:

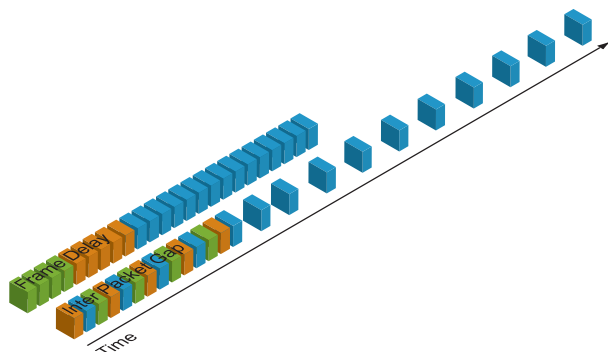

In the above example, using *Inter Packet Gap* results in time savings of approx. 45% (in relation to overall transmission of three images) compared to *Inter Packet Gap*.

Configuration Example (GigE)

The following parameters are known for the three cameras in use:

Camera	Resolution [Pixel]	Pixel depth [bit]	Data volume [bit]	Readout Time [ms]	Transfer Time [ms]
1	1392 x 1040	8	11581440	50	≈ 11.6
2	776 x 582	8	3613056	15.5	≈ 3.6
3	656 x 494	8	2592512	11	≈ 2.6

For resolution and Readout Time (*treadout*) please refer to the related technical data sheet (TDS). The example uses full screen resolution.

All cameras are manually set the same value in Exposure Time (*texposure*).

The resulting data volume is calculated as follows:


Resulting data volume = horizontal pixels × vertical pixels × pixel depth

Transfer time ($t_{\text{transferGigE}}$) is calculated as follows:

Transmission time = Resulting data volume / (1000 × 1000) [ms]

All cameras are triggered simultaneously.

Transmission delay is implemented in the form of a counter which runs immediately when starting sensor readout.

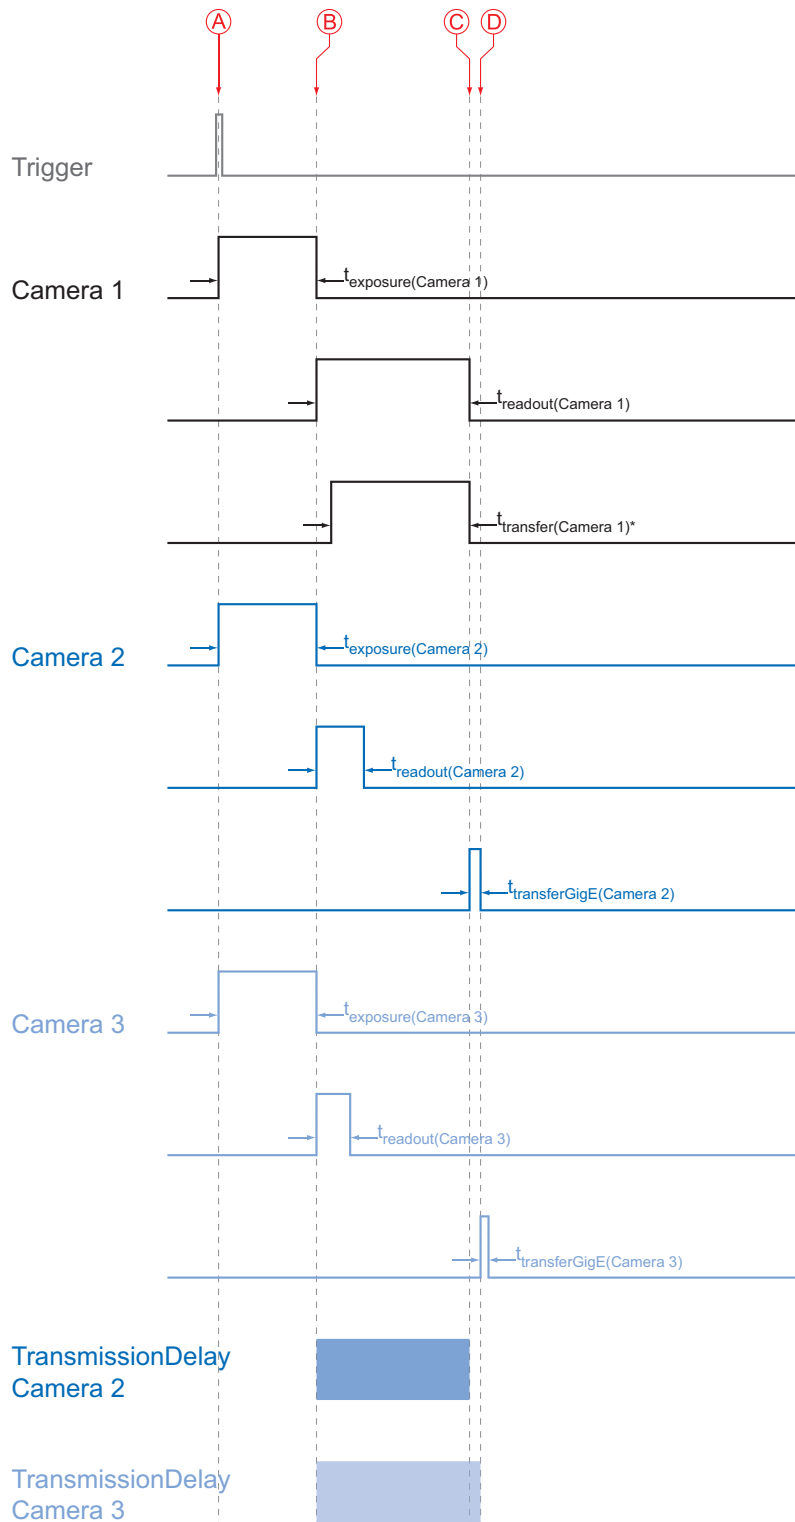

A	All cameras start exposure	B	all cameras are ready for transmission
C	Camera 2 starting transmission	D	Camera 3 starting transmission

Transmission delay is calculated as follows:

$$t_{\text{TransmissionDelay(Camera } n)} = t_{\text{exposure(Camera 1)}} + t_{\text{readout(Camera 1)}} - t_{\text{exposure(Camera } n)} + \sum_{n \geq 3}^n t_{\text{transferGigE(Camera } n-1)}$$

Transmission delays of camera 2 and 3 are calculated as follows:

$$t_{\text{TransmissionDelay(Camera 2)}} = t_{\text{exposure(Camera 1)}} + t_{\text{readout(Camera 1)}} - t_{\text{exposure(Camera 2)}}$$

$$t_{\text{TransmissionDelay}}(\text{Camera } 3) = t_{\text{exposure}}(\text{Camera } 1) + t_{\text{readout}}(\text{Camera } 1) - t_{\text{exposure}}(\text{Camera } 3) + t_{\text{transferGige}}(\text{Camera } 2)$$

Consequently:

$$t_{\text{TransmissionDelay}}(\text{Camera } 2) = 32 \text{ msec} + 50 \text{ msec} - 32 \text{ msec} = 50 \text{ msec}$$

$$t_{\text{TransmissionDelay}}(\text{Camera } 3) = 32 \text{ msec} + 50 \text{ msec} - 32 \text{ msec} + 2.6 \text{ msec} = 52.6 \text{ msec}$$

13.4 Multicast

Multicasting allows for transmission of data packets to multiple addresses - without multiplying the bandwidth between camera and multicast device (e.g. router or switch).


The data is sent to an intelligent network node, a IGMP (Internet Group Management Protocol)-enabled switch or router, and distributed to the group of recipients with the specific address range.

In the below example illustration, multicast is used for separate processing of image and message data at two individual PCs.




INFO

For multicasting, Baumer suggests an address range from 232.0.1.0 to 232.255.255.255.

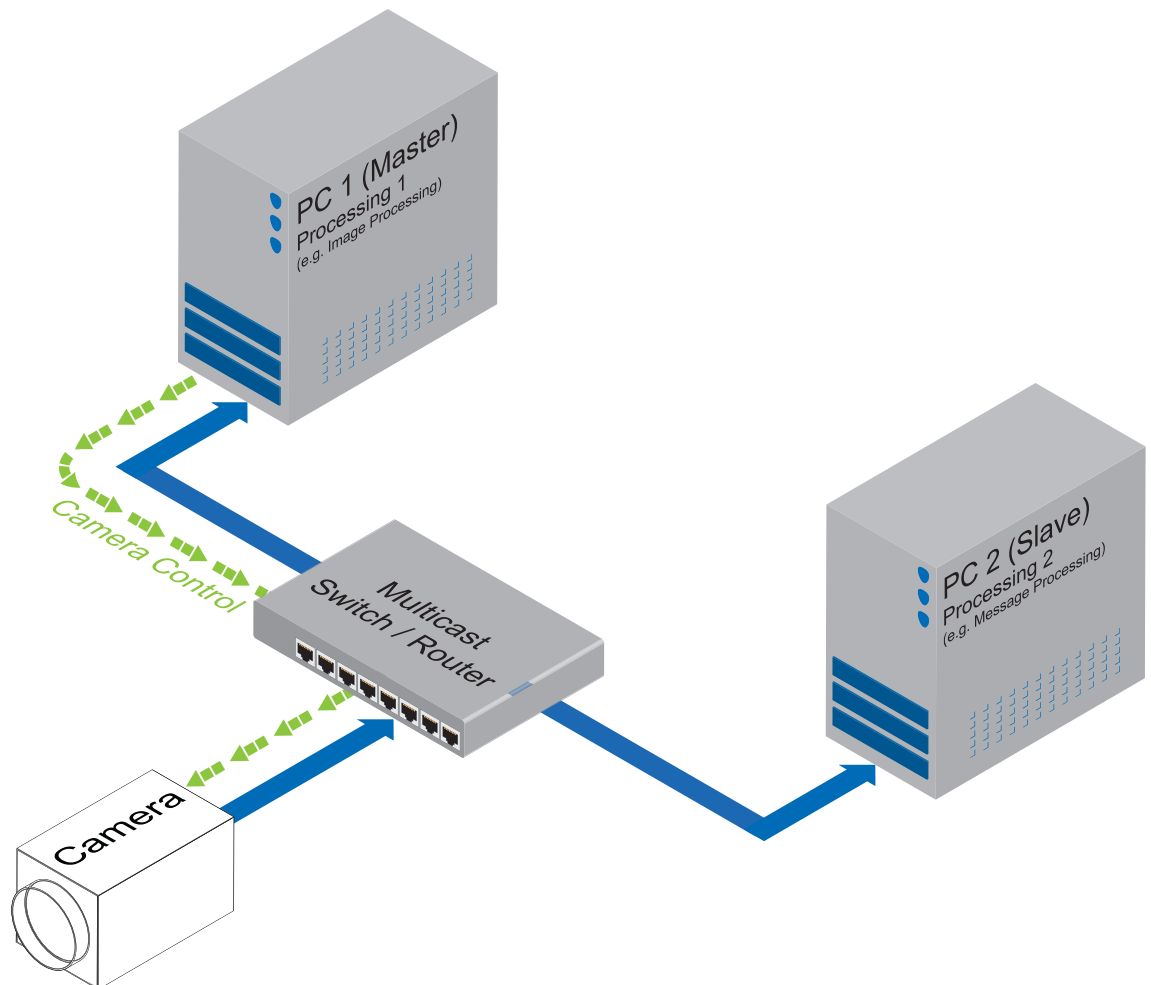

13.5 IP-Konfiguration

The device applies IP address according to the priorities shown.

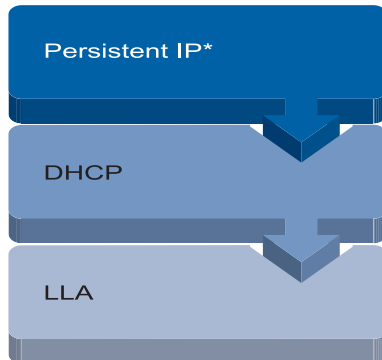

*) This function (*GevCurrentIPConfigurationPersistentIP*) is disabled by default.

13.5.1 Persistent IP

A persistent IP is permanently assigned. Validity unlimited. This function is disabled by default. Enable function via feature *GevCurrentIPConfigurationPersistentIP*.



INFO

Make sure PC and camera are operated in the same subnet.

13.5.2 DHCP (Dynamic Host Configuration Protocol)

DHCP is for automated assignment of network parameters such as IP addresses, subnet masks and gateways.

Once connected to a DHCP-enabled network with DHCP server, the camera will be assigned the appropriate IP configurations.

13.5.3 LLA (Link-Local-Address)

LLA (Link-Local Address) refers to an IP address within the range from 169.254.0.1 to 169.254.254.254 and is used for automated IP address allocation if no other method of IP allocation is available.

The IP address is defined by the host using a pseudo-random number generator operating in the above IP range.

Once an address has been selected, it is broadcast to the network together with an ARP query (Address Resolution Protocol) to verify whether it already exists. Depending on the answer (i.e. does not already exist), the device is assigned the IP address or the process will repeat.

This may take some time - the GigE Vision® standard specifies that establishing connection via LLA should not take longer than 40 seconds, worst case it can take up to several minutes.

13.5.4 Force IP (Static IP)

Faults in operation can lead to connection errors between PC and camera.

In this case, *Force IP (Static IP)* may present a final solution. The Force IP feature will transmit IP address and subnet mask to the camera's MAC address. These settings are sent without verification and immediately applied by the client. They remain valid until camera power off.

13.6 Packet Resend

The GigE Vision® standard requires UDP - a stateless user datagram protocol - for data transmission, reason why there must be feature to secure any "lost" data.

A resend request is initiated if one or more packets are corrupted during transmission and subsequently discarded - due to incorrect checksum.


There are three scenarios:

Standard case

In smooth data transfer, all packets are transferred from the camera to the PC in correct order. This is assumed to be true at more than 99%.

Error 1: Lost packets in data stream


One or more packets being lost in the data stream is identified by packet number n not being followed by packet number $(n+1)$. In this case, the application will submit a resend request (A). Following this request, the camera will transmit the next packet and resend the lost packet (B).

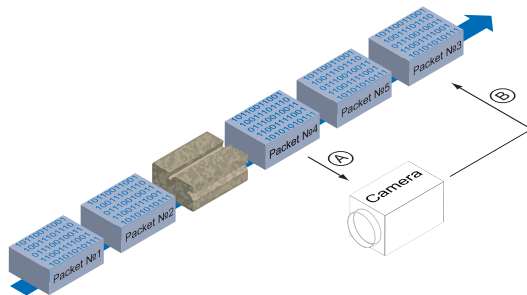

In our example, packet no. 3 was lost. This is recognized at packet #4 and a resend request is being submitted. In reply to the request, the camera transmits packet No. 5, and resends packet No. 3.

Error 2: Packet loss at the end of data stream

In the event of a failure at the end of the data stream, the application will wait for incoming packets for the defined time. Having elapsed this time, the application submits a resend request and the "lost" packets are sent again.

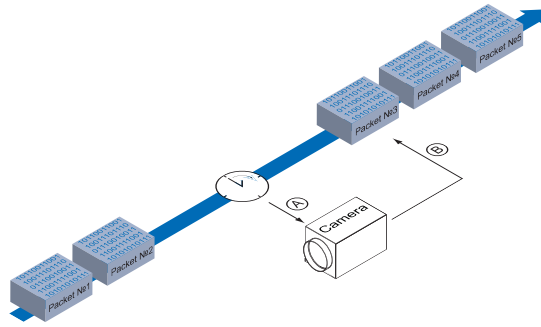

In our example, packets no. 3 to 5 are lost. This transmission error is identified after the defined time window and a resend request (A) will be submitted. Next, the camera resends packets no. 3 to 5 (B) to complete image transfer.

The resend feature will continue until:

- every packet has been received by PC
- the maximum number of resend operations has been reached
- in the event of resend request timeout or
- the camera replies an error

