

CELERA **series**



dual-USB3 polarization camera

USER GUIDE





Save the planet: do not print this manual unless you really need to.

Release 1.0 - July, 2023

© Copyright 2023 Alkeria SRL – All rights reserved

The information in this document is subject to change without notice. Information, drawings and illustrations contained herein are the property of Alkeria SRL. No part of this manual may be reproduced or distributed by any means, electronic or mechanical, without the express written consent of Alkeria SRL.

Summary

1	Getting started	7
1.1	Requirements	7
1.2	Software download	8
1.3	Connections	11
1.4	First Start	12
1.4.1	Status LED	12
1.4.2	Run Alkeria player	12
2	Introducing CELERA P Cameras	14
2.1	CELERA P	14
2.1.1	Detailed Specifications	16
2.2	Optional accessories	18
2.3	Ordering Information	18
2.4	USB 3.2 Gen 1x1 SuperSpeed interface	19
2.4.1	Isochronous endpoint	19
2.4.2	Bulk endpoint	19
2.4.3	USB 3.2 Gen 1x1 controller cards	20
2.5	Installation requirements	20
2.6	MaestroUSB3 SDK	20
2.6.1	Software License	21
2.7	Safety and Precautions	21
3	Hardware Description	23
3.1	Sensors	23
3.1.1	SONY IMX MZR Sensors	23
3.1.1.1	Monochrome Spectral response	23
3.1.1.2	Polarization filter array	23
3.2	Filters	24
3.3	Mechanical description	25
3.4	Adapters for standard lens	28
3.4.1	C-Mount adapter	28
3.4.1.1	Maximum lens protrusion	29
3.4.2	F-Mount adapter	30
3.5	Flange Focal Distance	31



3.6	Handling precautions	32
3.6.1	Temperature and humidity	32
3.6.2	Warranty limitations	32
3.6.3	Mechanical stress	32
3.6.4	Heat dissipation	32
3.6.5	Monitoring internal temperature	33
3.6.6	Automatic internal temperature safety mechanism	33
3.6.7	EMI/ESD precautions: noise and electrostatic discharge	34
3.7	Cleaning CELERA P camera	35
3.7.1	Before starting	35
3.7.2	Cleaning CELERA P camera housing	35
3.7.3	Optical path cleaning	35
3.7.4	Impurities	36
3.7.5	Filter cleaning	36
3.7.6	Sensor cleaning	37
3.7.7	Using compressed air	37
3.7.8	After cleaning procedure	38

4 Interfacing to the world 39

4.0.1	Detecting I/O power	40
4.1	I/O cable	41
4.2	Power Selection	42
4.3	I/O module	42
4.3.1	Input module structure	42
4.3.1.1	Debouncing module	43
4.3.1.2	Input events	44
4.3.1.3	RS-422	45
4.3.1.4	RS-644	46
4.3.1.5	LV-TTL / LV-CMOS / 12 V - 24 V	46
4.3.2	Output module structure	48
4.3.2.1	RS-422	49
4.3.2.2	RS-644	49
4.3.2.3	LV-TTL / LV-CMOS	50
4.3.2.4	5 to 24 V Output	51
4.3.3	Bidirectional module structure (port 0)	51
4.3.4	I/O switching time	51
4.4	Using input signals	52
4.4.1	Encoder module	52
4.4.1.1	Encoder hysteresis	53
4.4.1.2	Direction reversal	53
4.4.1.3	Configuring the encoder module	54
4.4.1.4	Reading and resetting encoder position	54
4.4.2	Frequency Multiplier (Phase Locked Loop (PLL))	55
4.4.3	Trigger manager	56
4.5	Controlling output ports	57



4.5.1	Polarity	57
4.5.2	Open collector	58
4.5.3	Software output	58
4.5.4	Trigger Output	58
4.5.4.1	Exposure	59
4.5.4.2	Strobe	59
4.5.4.3	Trigger	60
4.5.4.4	Trigger ready	60
4.5.5	Custom sources	60
4.5.6	Input and output ports usage examples	61
4.6	Serial Interface Module	61
5	System Setup	63
5.1	USB Setup	63
5.1.1	How to choose a suitable USB cable	63
5.1.2	Recommended USB interface	64
5.2	Status LED	66
5.3	When one CELERA P is not enough...	67
6	Trigger	68
6.1	Trigger sources	68
6.2	Acquisition start trigger	69
6.3	Frame start trigger	69
6.4	End-of-exposure trigger	69
6.5	Trigger delay	70
6.5.1	Encoder delay	70
6.5.2	Trigger overrun	70
6.6	Trigger configuration example	71
6.6.1	External trigger frame acquisition	71
6.6.2	Signal-driven exposure time	72
6.6.3	Encoder synchronization	73
7	The processing Chain	74
7.1	Light Meter	74
7.2	Chunk data	75
7.2.1	Frame number	76
7.2.2	Time stamp	76
7.2.2.1	Time stamp resolution	76
7.2.3	Encoder position	76
7.2.4	Input status	76
7.2.5	Burst number	77
7.2.6	Sequencer page	77
7.2.7	Configuration example	77
7.3	Frame Combiner	77
7.3.1	Flush and AutoFlush	78
7.3.2	Configuration example	78



8	Capturing images	79
8.1	Video modes	79
8.1.1	Mode 0 (Polarized Outputs)	79
8.1.1.1	Extracting polarized data	81
8.1.1.2	Secondary Video Source	81
8.1.2	Mode 1 (RAW)	82
8.1.3	Mode 2 (FusionView)	82
8.2	Region of Interest (ROI)	82
8.3	Pixel format	84
8.4	ADC resolution	85
8.5	Frame rate and bandwidth	86
8.5.1	Reserving bandwidth for isochronous channel	86
8.5.2	Bandwidth limits for isochronous endpoint	87
8.5.3	Bandwidth limit for bulk endpoint	88
8.5.4	Packet size for isochronous endpoint	88
8.5.4.1	Calculating the required bandwidth	89
8.5.5	Packet size for bulk endpoint	90
8.5.6	Connecting multiple devices to the same host	90
8.5.7	Frame rate	91
8.5.8	Preserve rates	92
8.5.9	Maximizing frame rate	93
8.6	Controls	93
8.6.1	Shutter	93
8.6.1.1	High resolution shutter	94
8.6.1.2	Shutter resolution	94
8.6.1.3	Automatic exposure	94
8.6.2	Analog Gain	95
8.6.3	Digital Gain	96
8.6.4	User Look-Up Table (LUT)s	96
8.6.5	Virtual Angle	97
8.6.6	Saturation Detection	97
8.6.7	Luma	98
8.6.8	Time Stamp	98
8.6.9	Flip and Rotate	98
8.7	Saving device configuration	99
8.7.1	Export and import XML	99
8.8	Configuration Example	100
8.9	Pattern Generator	100
9	Alkeria Advanced Sequencer	101
9.1	Sequencer Enabled Controls	101
9.2	Page concept	102
9.3	Page Setup	102
9.3.1	Writing Page Settings	102
9.3.2	First and Last page	102



9.4	Moving between pages	103
9.4.1	Manual page selection	103
9.4.2	Increment and reset events	103
9.4.3	Event Sources	104
9.5	Conflicts and timings	105
9.6	Examples of configuration	105
9.6.1	Example 1: drive illuminators with CELERA P camera	105
9.6.2	Example 2: split camera field	106
10	Alkeria player	108
10.1	Device Connection and Initialization	108
10.2	Toolbar buttons	108
10.3	Settings Panel	111
10.3.1	Advanced Sequencer Page	111
10.3.2	Features	111
10.3.3	Video Settings	111
10.3.4	Trigger	114
10.3.5	Alkeria Advanced Sequencer	114
10.3.6	Advanced features	115
10.4	Save Sequence Panel	116
10.5	Display Option Panel	117
10.6	Camera Menu	117
10.6.1	Saving and Exporting Configuration	117
10.6.2	I/O panel	118
10.6.3	LUT Editor	119
11	Warranty	121
11.1	RMA	121
12	Firmware Update	122
13	EMC certification and compliance	123
13.1	CE conformity	123
13.2	FCC conformity - Class A (USA)	124
13.3	ICES-003 (Canada)	124
13.4	Limitation of liability	124
13.5	RoHS Conformity	124
13.6	Information for Users	125
	List of Acronyms	126
	Example Code	128



1

Getting started

1.1 REQUIREMENTS

For getting started with CELERA P you will need the material listed below:

- A CELERA P camera equipped with a lens adapter (Figure 1.1);
- A lens compatible with the chosen lens adapter;
- An USB 3.2 Gen 1x1 cable (Figure 1.2);
- A computer with an USB 3.2 Gen 1x1 controller;



Figure 1.1: CELERA P camera



Figure 1.2: Required USB cable is type-A on the PC side (a) and micro-B on the camera side (b).

1.2 SOFTWARE DOWNLOAD

After camera purchasing, our Sales Department will provide you with access to our website's User Area. In there you can find everything you need to set and use the camera: manuals, guides, tutorials, software and firmware updates. Users Area accounts are personal, and can only be created by Alkeria's Sales Dept.

Once your account has been activated, you will receive an email to reset your account password: click on the link to set your password. Please store your login credentials in a secure place.

To download the software, follow these steps:

Step 1: Go to our website www.alkeria.com (Figure 1.3)

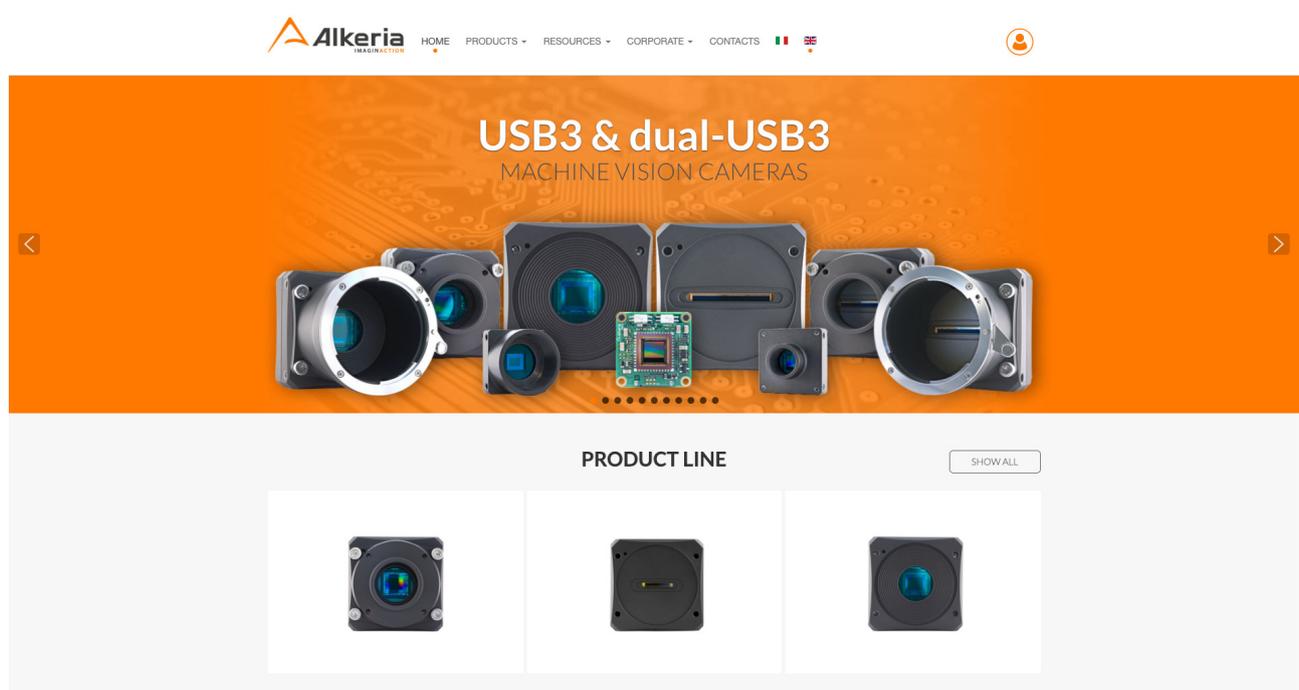


Figure 1.3: Alkeria website

Step 2: Click on “User Area - Support” top-right button (Figure 1.4)



Figure 1.4: User Area button

Step 3: Once redirected to login form, insert your username and password and click “Log in” (Figure 1.5)

The image shows the login form for the Alkeria User Area. At the top is the Alkeria logo and navigation menu. Below the header is a form with two input fields: 'Username *' and 'Password *'. Below the password field is a checkbox labeled 'Remember me'. A prominent orange 'Log in' button is positioned below the checkbox. At the bottom of the form are two links: 'Forgot your password?' and 'Forgot your username?'.

Figure 1.5: User Area log in form

Step 4: On “Downloads” root folder, you can find many file categories, each containing various files (Figure 1.6)

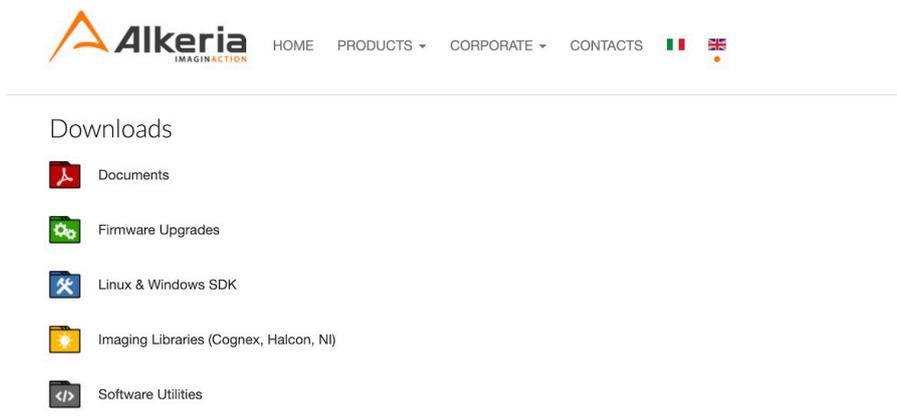


Figure 1.6: User Area root folder

Step 5: Click on “Download” to download a file (fig. 1.7)

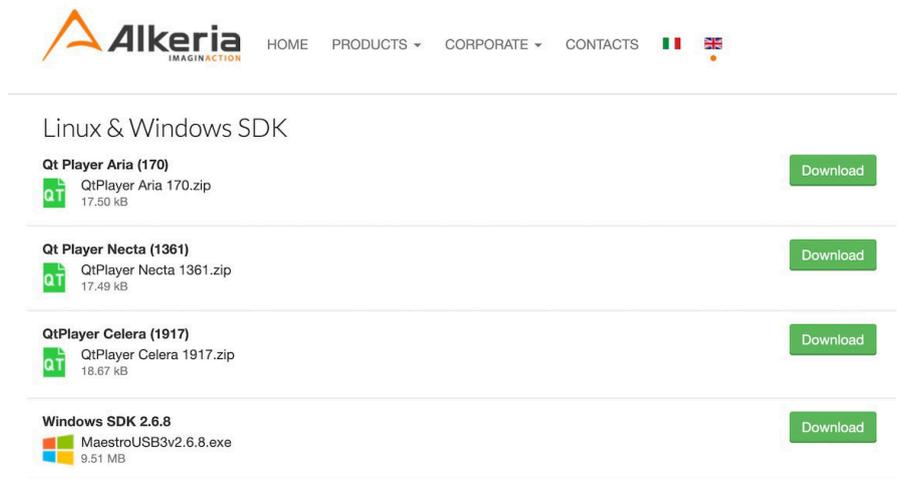


Figure 1.7: Example of file listing inside Linux & Windows SDK category

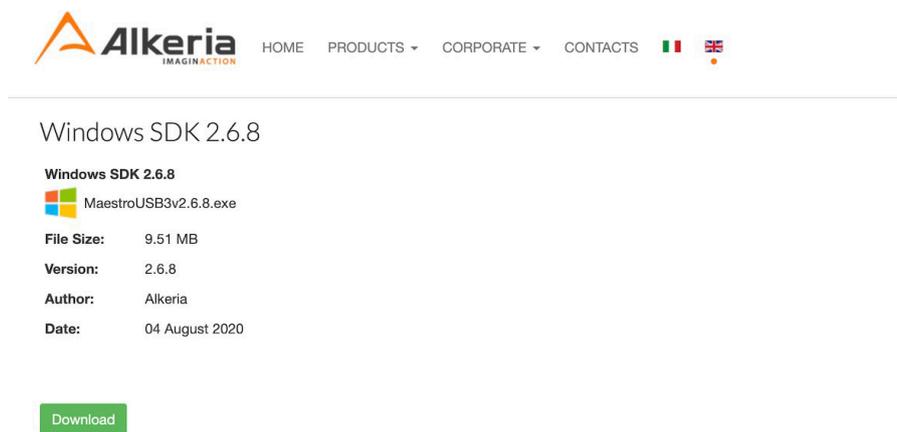


Figure 1.8: Example of single file view

Step 6: Click on the “Log out” orange button to end your session (Figure 1.8), then install the downloaded executable as administrator.

1.3 CONNECTIONS

Before starting, connect the camera to the PC following these steps:

Step 1: Mount the camera on a stable support;

Step 2: Mount the lens on the adapter;



Step 3: Connect the USB micro-B plug (Figure 1.2b) to the camera;



Step 4: Connect the USB type A plug (Figure 1.2a) to a SuperSpeed USB port on the PC.



1.4 FIRST START

1.4.1 Status LED

CELERA P features two status LEDs on its back, showing the operating conditions of the camera. When one or both camera connectors are plugged in, LEDs remain red until the computer detects and configures the camera, then they both turn to green. If just the main connector is plugged, the secondary LED remains off after OS enumeration. The second connector can be connected at any time. LEDs turn to orange when the camera is acquiring from the related connectors.

Different behaviours of the status LED may indicate that the camera is malfunctioning. For a complete reference on the status LED codes, refer to Table 5.2.

1.4.2 Run Alkeria player

MaestroUSB3 comes with a user-friendly software application, allowing to explore the main features of CELERA P cameras and check the correct camera and software installation. Once installed MaestroUSB3 SDK, you can find the application at the following path:

```
Program Files\Alkeria\USB3\MaestroUSB3\Players
```

Alternatively, you can easily start the Alkeria player by accessing the Windows Start button and look for *Alkeria player* from the MaestroUSB3 Program folder: Start->All programs->Alkeria->USB3->MaestroUSB3.



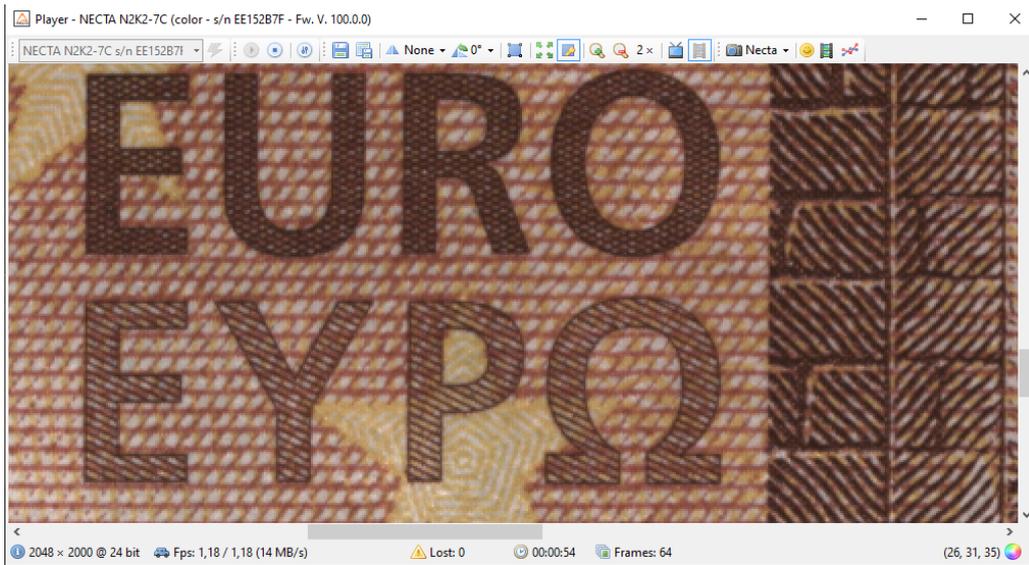


Figure 1.9: Alkeria player main window

A subset of the toolbar controls is shown in Table 1.1.

⚡	Init	Initialize the camera to default settings (camera power-up status).
▶	Play	Start image playback.
⏸	Stop	Stop image playback.
⚙	Settings	Open the settings panel.

Table 1.1: Relevant Alkeria player buttons

Press “Play” button to start the acquisition of images from the camera. At the bottom of the player window a status bar displays the following data:

- The image resolution and the pixel depth;
- The frame rate;
- A frame lost counter, which indicates whether some frames have been corrupted during transfer and have been discarded;
- A timer counter indicating the acquisition time;
- A frame counter;

Pressing the “Settings” button, you will have access to the main camera acquisition parameters such as Shutter and Gain. Move them while CELERA P is acquiring images to familiarize with the controls.

To get more information about player functionalities, please refer to Chapter 10.

2

Introducing CELERA P Cameras

CELERA P is Alkeria's answer to the demand of its OEM customers in medical and industrial fields. Featuring a USB 3.2 Gen 1x1 interface, complying with the modern advance in machine vision, CELERA P takes performances to a new level thanks to its unique dual-USB 3.2 Gen 1x1 solution, specifically designed to get the best SONY Pregius Polarized CMOS sensors, sharing the same compact, reliable and versatile form factor of its NECTA line-scan counterpart. With advanced firmware features, uncompromised quality and a large FPGA for on-demand customization, CELERA P is the flagship in the Alkeria cameras range.

2.1 CELERA P

CELERA P is a family of compact area scan cameras with dual USB 3.2 Gen 1x1 interface. The adoption of new technology Complementary MOS (CMOS) linear sensors and USB 3.2 Gen 1x1 connectivity allows CELERA P to reach a very high acquisition speed while still using a consumer-class interface. CELERA P is directly powered by the USB 3.2 Gen 1x1 bus eliminating the need for external power adapters. Reduced size and low power consumption, solid construction, low installation cost, ease of programming and versatility make CELERA P devices suited for the most demanding industrial applications: in-line inspection, web inspection, document scanning, and metrology.

Model Name	Sensor	Resolution (H x W)	Chroma
CELERA C5S-MP	SONY IMX250MZR	2464 x 2056 (5.01 MP)	Mono, Polarized
CELERA CO5S-MP	SONY IMX264MZR	2464 x 2056 (5.01 MP)	Mono, Polarized

Table 2.1: CELERA P cameras family overview



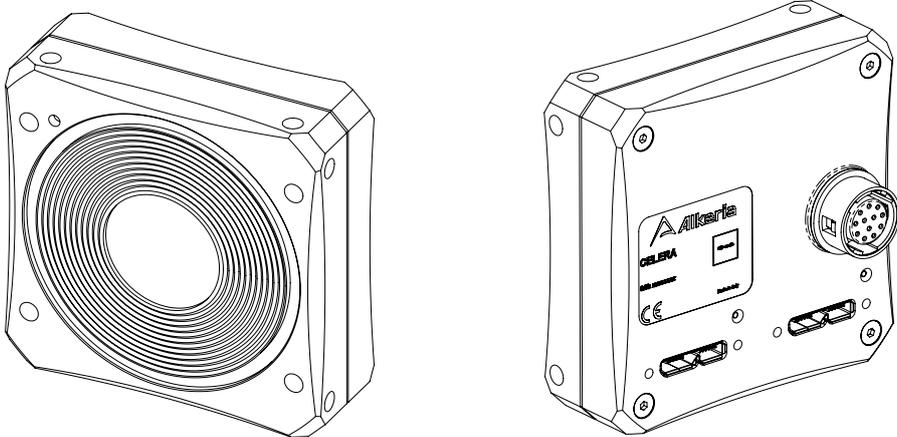


Figure 2.1: CELERA P camera

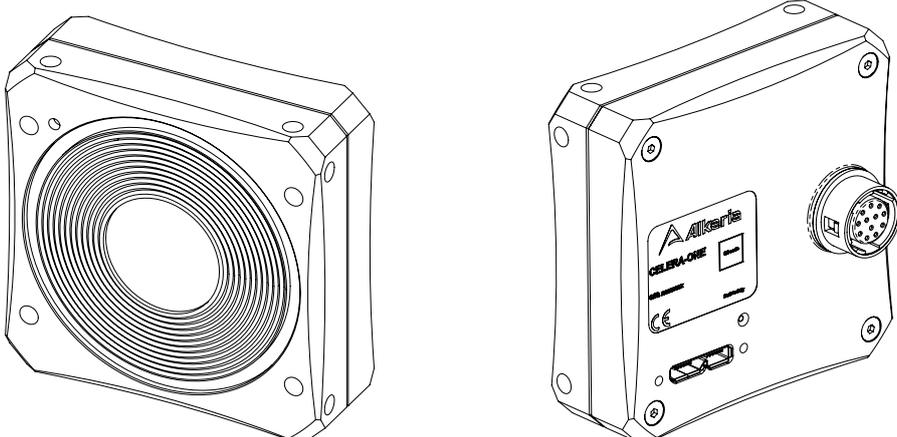


Figure 2.2: CELERA One P camera

2.1.1 Detailed Specifications

Specification	CELERA C5S-MP
Sensor model	SONY IMX250
Sensor type	Mono Polarized
Sensor resolution	2464(W) x 2056(H) (5.01 MP)
Sensor technology	CMOS, global shutter
Sensor format	2/3"
Pixel size	3.45 μm^2 \times 3.45 μm^2
Max. frame rate	152 fps
A/D Conversion	8, 10, 12 bits
Synchronization	External trigger, software trigger
Controls	Shutter, gain, sequencer
Shutter control	17 μs \div 5 s (1 μs steps)
Sequencer	Up to 64 pages
Binning factor	None
Readout	Normal, frame combiner
Power supply	3 W max, powered by USB 3.2 Gen 1x1
Inputs/outputs	2 in, 2 out, 1 I/O (RS-422, RS-644, LV-CMOS, LV-TTL)
Lens adapter	C-mount, F-mount
Interface	Dual USB 3.2 Gen 1x1
Pixel formats	RAW8, RAW16, RGB24
Weight	131 g (with C-mount adapter)
Size (without adapters)	56 mm x 56 mm x 26.7 mm
Size (with C-mount)	56 mm x 56 mm x 38.3 mm
Size (with F-mount)	56 mm x 56 mm x 67.3 mm
Conformity	CE, RoHS, FCC, IC
Operating temperature	0 \div 50 $^{\circ}\text{C}$ (referred to housing)
Software	MaestroUSB3
Link	www.alkeria.com/products/CELERA-series
Warranty	24 months

Table 2.2: CELERA C5S-MP Specifications



Specification	CELERA CO5S-MP
Sensor model	SONY IMX264
Sensor type	Mono Polarized
Sensor resolution	2464(W) x 2056(H) (5.01 MP)
Sensor technology	CMOS, global shutter
Sensor format	2/3"
Pixel size	3.45 μm^2 \times 3.45 μm^2
Max. frame rate	35 fps
A/D Conversion	12 bits
Synchronization	External trigger, software trigger
Controls	Shutter, gain, sequencer
Shutter control	17 μs \div 5 s (1 μs steps)
Sequencer	Up to 64 pages
Binning factor	None
Readout	Normal, frame combiner
Power supply	3 W max, powered by USB 3.2 Gen 1x1
Inputs/outputs	2 in, 2 out, 1 I/O (RS-422, RS-644, LV-CMOS, LV-TTL)
Lens adapter	C-mount, F-mount
Interface	Dual USB 3.2 Gen 1x1
Pixel formats	RAW8, RAW16, RGB24
Weight	131 g (with C-mount adapter)
Size (without adapters)	56 mm x 56 mm x 26.7 mm
Size (with C-mount)	56 mm x 56 mm x 38.3 mm
Size (with F-mount)	56 mm x 56 mm x 67.3 mm
Conformity	CE, RoHS, FCC, IC
Operating temperature	0 \div 50 $^{\circ}\text{C}$ (referred to housing)
Software	MaestroUSB3
Link	www.alkeria.com/products/CELERA-series
Warranty	24 months

Table 2.3: CELERA CO5S-MP Specifications

2.2 OPTIONAL ACCESSORIES

CELERA P cameras can be completed with the following accessories:

- NAD-C adapter to C-mount lens (see Section 3.4.1)
- NAD-F adapter to Nikon F-mount lens (see Section 3.4.2)
- NIO-x cable for I/O interconnection – 3, 5, 10 m long available (see Section 4.1).

2.3 ORDERING INFORMATION

Alkeria has various camera series in its product line: each series has several models, with different resolutions, color modes and accessories.

To identify a specific model version, Alkeria uses an internal codename system that allows to describe every camera specification with a unique code.

Understanding how this code works can be useful to our customers both to identify correctly a camera and to request information or order to our sales department.

Every camera code is composed of the following parts:

Camera model

This is the first and main part: it includes camera series and information about sensors like resolution and number of lines.

Color option

The second part, separated by a hyphen, defines the sensor color option for each camera model. In our product line, we use different sensor families, most of them available in color, monochrome or Near-InfraRed (NIR) mode.

Lens adapter

Last part of the code, indicates which lens adapter the camera is equipped with. It's the only part that can be omitted, in case you're choosing a camera without any additional lens adapters.



Figure 2.3: CELERA P Ordering information

2.4 USB 3.2 GEN 1X1 SUPERSPEED INTERFACE

CELERA P cameras exploit the USB 3.2 Gen 1x1 standard interface to fulfill the bandwidth requirements of fast image sensors and communicate with PC. In order to maximize the usable bandwidth of installed USB 3.2 Gen 1x1 controller, the user can choose between *isochronous endpoint* and *bulk endpoint* for transmitting video stream. The command stream (controlling camera features) is supported by a bidirectional interrupt endpoint providing quick response and low latency.

2.4.1 Isochronous endpoint

The super-speed *isochronous endpoint* used by CELERA P allows up to 3 burst transactions for each 125 μ s service interval (micro-frame); each burst transaction supports up to 16 packets made by 1024 B, reaching up to 3x16x1024 B as payload for a single micro-frame. The total allowed bandwidth is 375 MiB/s for CELERA P USB 3.2 Gen 1x1 connection. The *isochronous endpoint* allows the user to reserve a given amount of bandwidth for each device, regardless of the connected device number to the host.

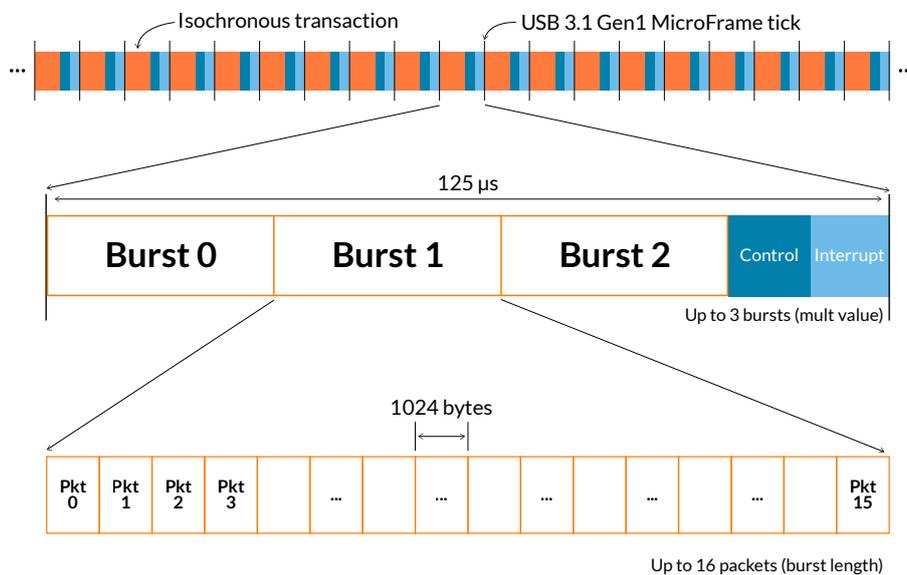


Figure 2.4: USB 3.2 Gen 1x1 Isochronous transactions structure

In order to exploit the maximum throughput, the computer must be able to support that load, therefore particular attention must be paid to choosing cables and USB 3.2 Gen 1x1 host controllers (see Section 5.1 for details).

2.4.2 Bulk endpoint

The super-speed *bulk endpoint* used by CELERA P transfers data using bursts of 1 to 16 packets, 1024 B long. The theoretical maximum bandwidth is 500 MiB/s for a single host, even if the camera will only use up to 375 MiB/s of the available bandwidth. Unlike an *isochronous endpoint*, a *bulk endpoint* can not reserve the bandwidth for itself: all the available bandwidth is shared with all the other devices present on the same host, even if connected to other ports. For this reason, when a CELERA P is connected to one USB3 port, it is not recommended to connect other USB devices, such as USB drives or Webcams, to the same host. When a CELERA P camera is connected using *bulk endpoint*, frame loss phenomena may occur when other devices will be operated.

2.4.3 USB 3.2 Gen 1x1 controller cards

Since each host controller performs better either with *isochronous* or *bulk endpoints*, it is recommended to make extensive testings to determine the best controller-endpoint configuration. This is especially true if you want to reach the maximum speed. To exploit the maximum achievable performance of the USB 3.2 Gen 1x1 controller, start with a low bandwidth limit (Section 10.3.6), e.g. 16 KiB, and start the acquisition. If no error is raised, stop the acquisition, increase the limit and repeat. If the controller is not able to support the selected bandwidth, a pop-up may appear or the application will freeze. To recover from this condition, unplug the USB cable from the camera and reconnect it. The maximum achievable bandwidth is the higher selected which raised no errors.

2.5 INSTALLATION REQUIREMENTS

For proper CELERA P performance, the controlling PC must meet the minimum requirements listed in Table 2.4 for single-camera applications and in Table 2.5 for multi-camera applications.

CPU	Intel Core i5 or AMD Ryzen 5
RAM	8 GB
Operating System	Windows 7/8/10/11, Ubuntu 20.04
USB 3.2 Gen 1x1 Controller	Based on Fresco Logic FL1100EX host or similar, plugged in a PCI Express 2.0 slot

Table 2.4: Minimum system requirements for single camera applications

CPU	Intel Core i7 or AMD Ryzen 7
RAM	16 GB
Operating System	Windows 7/8/10/11, Ubuntu 20.04
USB 3.2 Gen 1x1 Controller	Based on Fresco Logic FL1100EX host or similar, plugged in a PCI Express 2.0 slot

Table 2.5: Minimum system requirements for multi-camera applications

For further information on recommended USB host controllers, refer to Section 5.1.2.

In some operating conditions, the USB 3.2 Gen 1x1 data originated by CELERA P may reach 3.2 Gbit/s. PCI slots hosting USB 3.2 Gen 1x1 controllers must be able to support PCI Express 2.0 or higher in order to sustain the required throughput; insufficient PCI bandwidth may limit camera performance (see also Section 5.1). The camera case allows using USB 3.2 Gen 1x1 cables with screw-lock connector; it is highly recommended to adopt them in the presence of shocks and vibrations that may affect the USB connection to the computer.

2.6 MAESTROUSB3 SDK

The CELERA P family is supported by MaestroUSB3, a user-friendly software development system allowing quick code development for the MS Visual BASIC .NET/C++/C#. C++ development under Linux-based operating systems is supported through the Linux SDK. MaestroUSB3 is provided, for free use,



upon purchase of CELERA P cameras. Refer to the software manual available along with MaestroUSB3 SDK for a full description of the development system, the installation procedures, software functions and source code examples.



Note

All code examples in this document are written in C#.

2.6.1 Software License

CELERA P customers are granted free use of MaestroUSB3. For details about usage conditions, refer to the license agreement contained within the SDK and submitted for approval during installation.

2.7 SAFETY AND PRECAUTIONS

Electric shock hazard

Unapproved power supplies may cause electric shock. Serious injury or even death may occur. Computer equipment connected to the camera must meet the Safety Extra Low Voltage (SELV) and Limited Power Source (LPS) requirements.

Powered HUBs connected between the PC and the camera must meet the Safety Extra Low Voltage (SELV) and Limited Power Source (LPS) requirements as well.

All other equipment connected to the triggers or other ports must also have double insulation/reinforced isolation protection from the mains supply and its power supply must meet the Safety Extra Low Voltage (SELV) and Limited Power Source (LPS) requirements.

Remember that the camera case is made of conductive aluminum. Always check your mounting and avoid it to get in contact with wires or surfaces at dangerous electric potential.

Do NOT touch the camera with wet hands. Doing so may cause electric shock.



Fire hazard

Unapproved power supplies may cause fire and burns. Serious injury or even death may occur. Computer equipment connected to the camera must meet the Limited Power Source (LPS) requirements.

Powered HUBs connected between the PC and the camera must meet the Safety Extra Low Voltage (SELV) and Limited Power Source (LPS) requirements as well.

Foreign matter e.g. liquid, flammable or metallic materials may cause fire if inserted into camera during operations.

The camera housing can become very hot during operation. Do not operate the camera without lens or out of the recommended ambient temperature range. Always ensure a good airflow to cool down the camera housing. Read carefully Section 3.6.



Cautions

Do not expose the camera to X-rays. Exposition to X-rays may permanently damage the camera sensor. This kind of damage is not covered by warranty.

Never expose the sensor to laser sources or high-energy light. A constant exposure to light levels exceeding sensor saturation capability may lead to sensor irreversible failure.

Do not remove the camera's label. If the serial number can't be retrieved either from the camera registers or from the label, the warranty is void.

Do not open the camera housing. There are no user-serviceable parts inside. Internal components may be damaged by touching them. The warranty is void if seals are broken.

Use only the recommended 12-pin Hirose plug for the I/O interface. Camera connector can be damaged by plugs with different number of pins. Preassembled cables of different lengths are available as an option and can ease camera connections (see Section 2.2).



An incorrect electric connection or pin assignment may severely damage the camera.

CELERA P is designed to fit only USB 3.2 Gen 1x1 Micro-B connectors. Any other type of plugs may compromise the port connectivity.

Camera operating voltage is 5 VDC (directly powered through the USB connection). Camera must be supplied only with USB 3.2 Gen 1x1 compliant sources.

Disassemble, drop, try to repair or alter your CELERA P Camera in any way may damage it and possibly cause electric shocks. Keep unsupervised children far from the device.

Should any liquid (like water, beverages or chemical substances) flow into the camera, STOP using it IMMEDIATELY and ask your distributor or Alkeria SRL for technical support.

Store your CELERA P Camera with the lens opening covered to avoid dust contamination.

During operations, the temperature of the camera case should be kept in the 0-50 °C range.

3

Hardware Description

3.1 SENSORS

CELERA P cameras employ last-generation Polarized CMOS sensors manufactured by SONY. Please refer to the table above (see Section 2.1.1) to identify the sensor used in each camera model, indicating the resolution and size of the pixel cell.

3.1.1 SONY IMX MZR Sensors

3.1.1.1 Monochrome Spectral response

The graph in Figure 3.1 shows the quantum efficiency of the sensors used in CELERA P cameras equipped with SONY IMX sensors. The graph refers to the sensors used in Monochrome cameras.

3.1.1.2 Polarization filter array

Sony Pregius MZR image sensors exploit a Polarization Filter Array composed of four-directional polarizers, arranged as in Figure 3.2. The numbers represent the angles (in degrees) at which light can pass through the filter. A group of four pixels with 0-45-90-135 degrees filters is also called “superpixel”.

Through these four channels, it is possible to extract information about the light degree of polarization and angle of polarization.

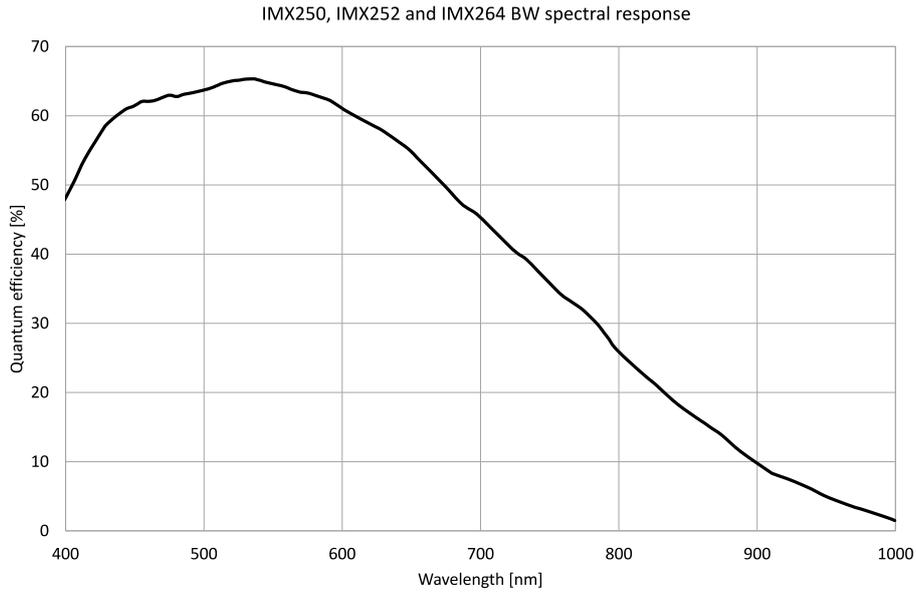


Figure 3.1: Quantum efficiency for SONY IMX polarized sensors - Source: SONY

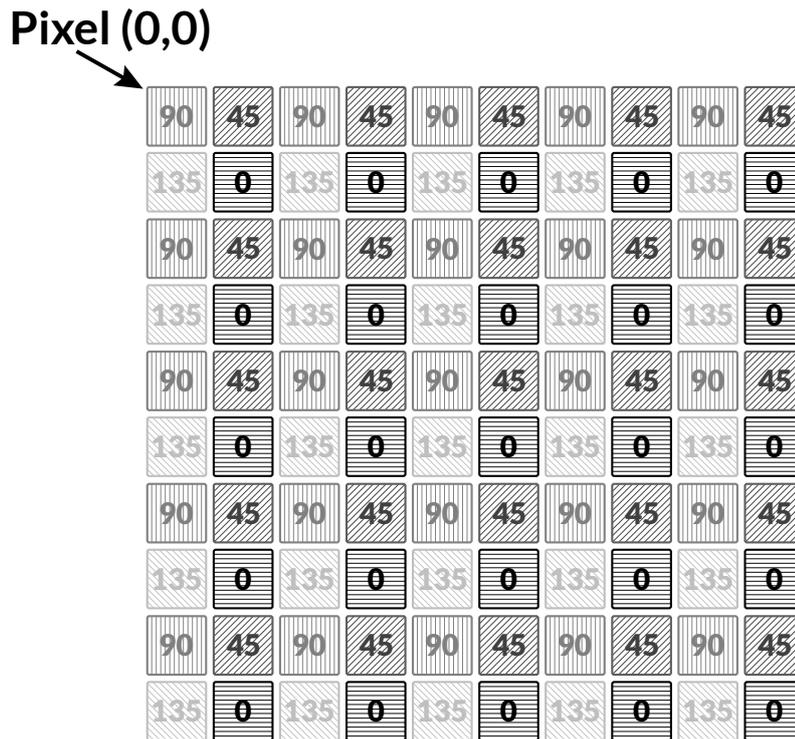


Figure 3.2: Polarizer filter pattern

3.2 FILTERS

CELERA P color camera models are equipped with Infrared cut-off filters to reduce unwanted camera sensitivity in the near-infrared spectrum.

CELERA P monochrome models are equipped with transparent protective glass with the properties reported in Table 3.1.



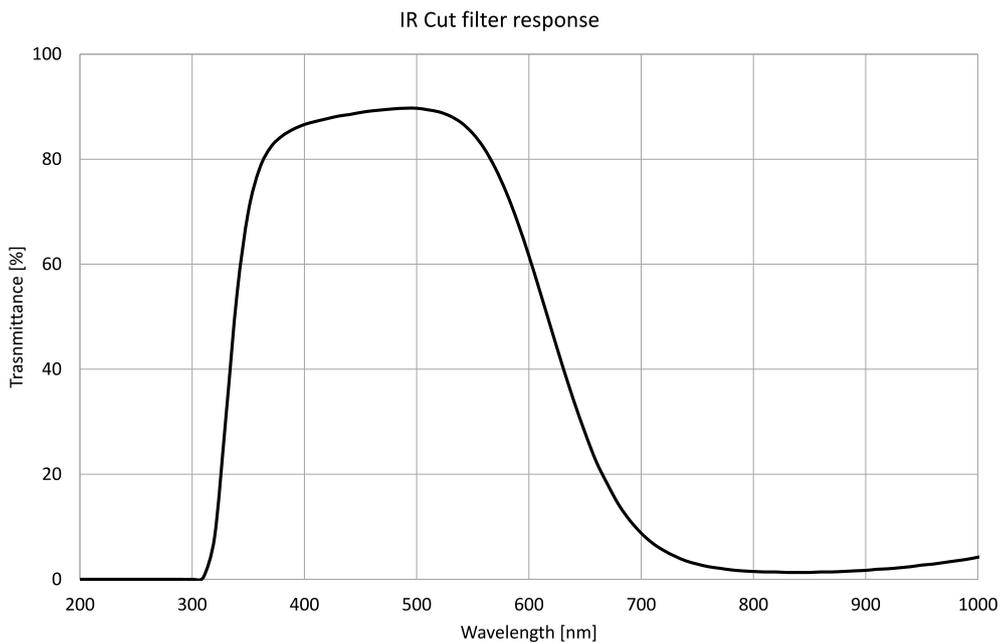


Figure 3.3: CELERA P IR Cut filter response - Source: Hoya Candeo Optronics Corporation.

Type	Anti-reflective
Material	Schott B 270 © i
Thickness	1 ± 0.05 mm

Table 3.1: Protection glass characteristics

Please note that CELERA P cameras can also be provided without protective glass or IR filter installed. Please contact Alkeria SRL Sales Offices for information.

3.3 MECHANICAL DESCRIPTION

The housing of CELERA P cameras is made of black anodized aluminum alloy, using high-precision machining. It is provided with four fixing front holes (M4), intended for custom lens or lens adapter connection, and two M4 holes at each side of the camera, for connecting to the mount, as shown by the drawings in Figure 3.4 and Figure 3.5. When designing the bracket that will support your CELERA P, refer to the reference planes (marked as A, B and C); using these reference planes will allow to achieve a precise positioning of the devices with significant repeatability. When the lens is mounted, the camera housing conforms to protection class IP30.

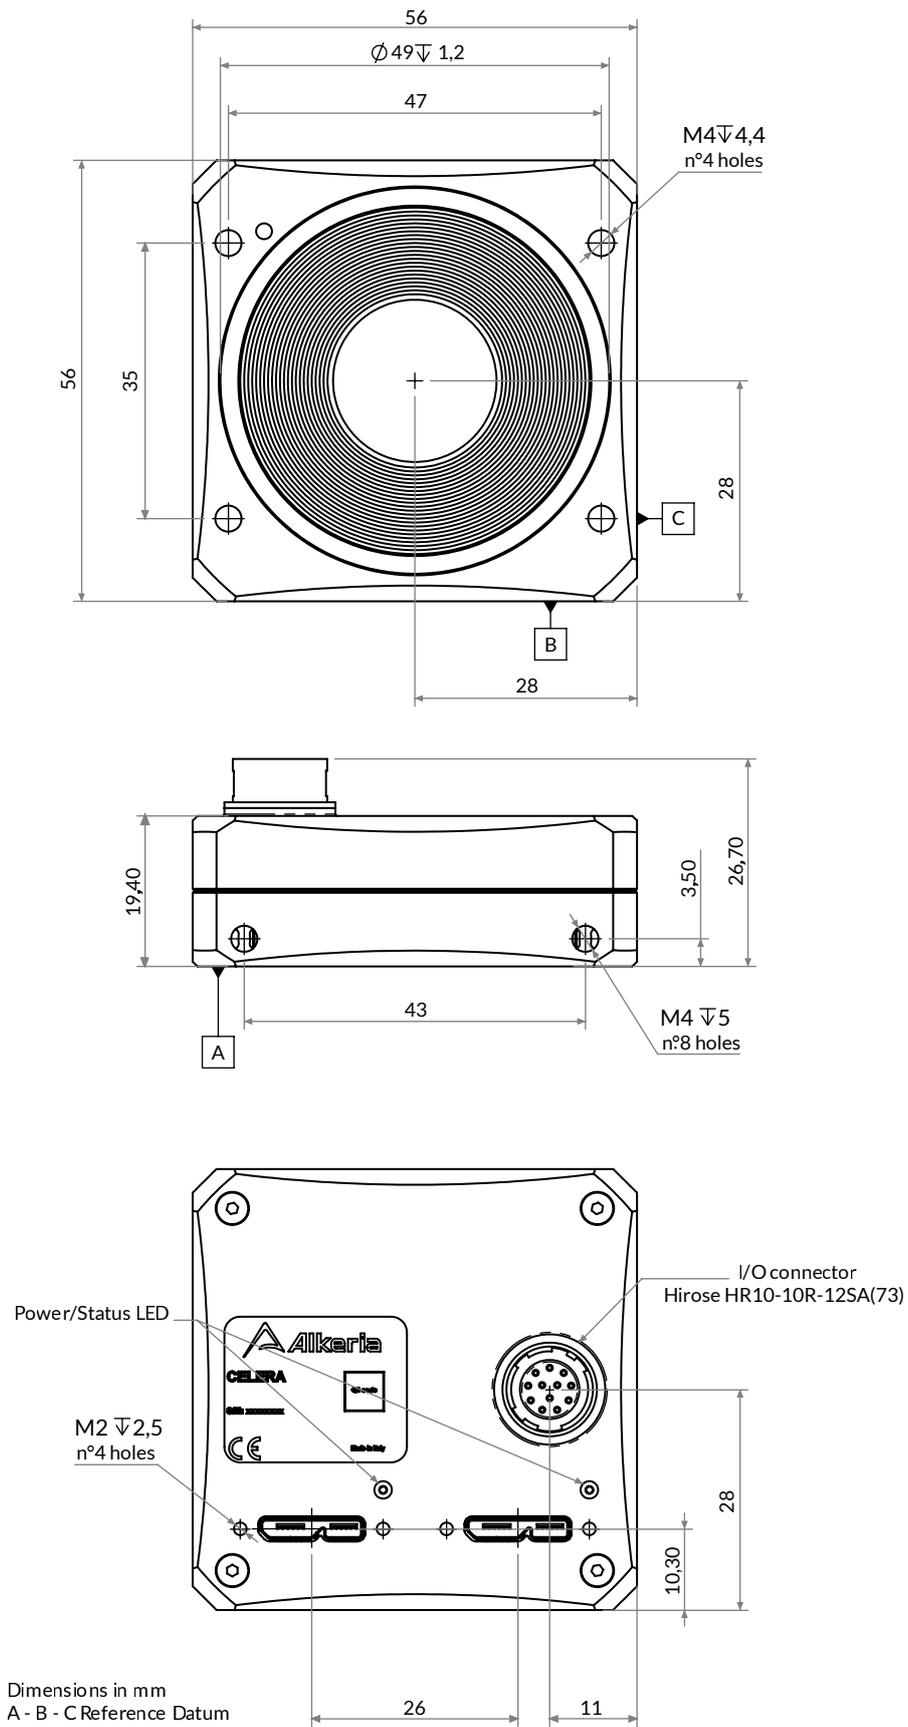


Figure 3.4: CELERA P camera dimensions (without lens adapter)

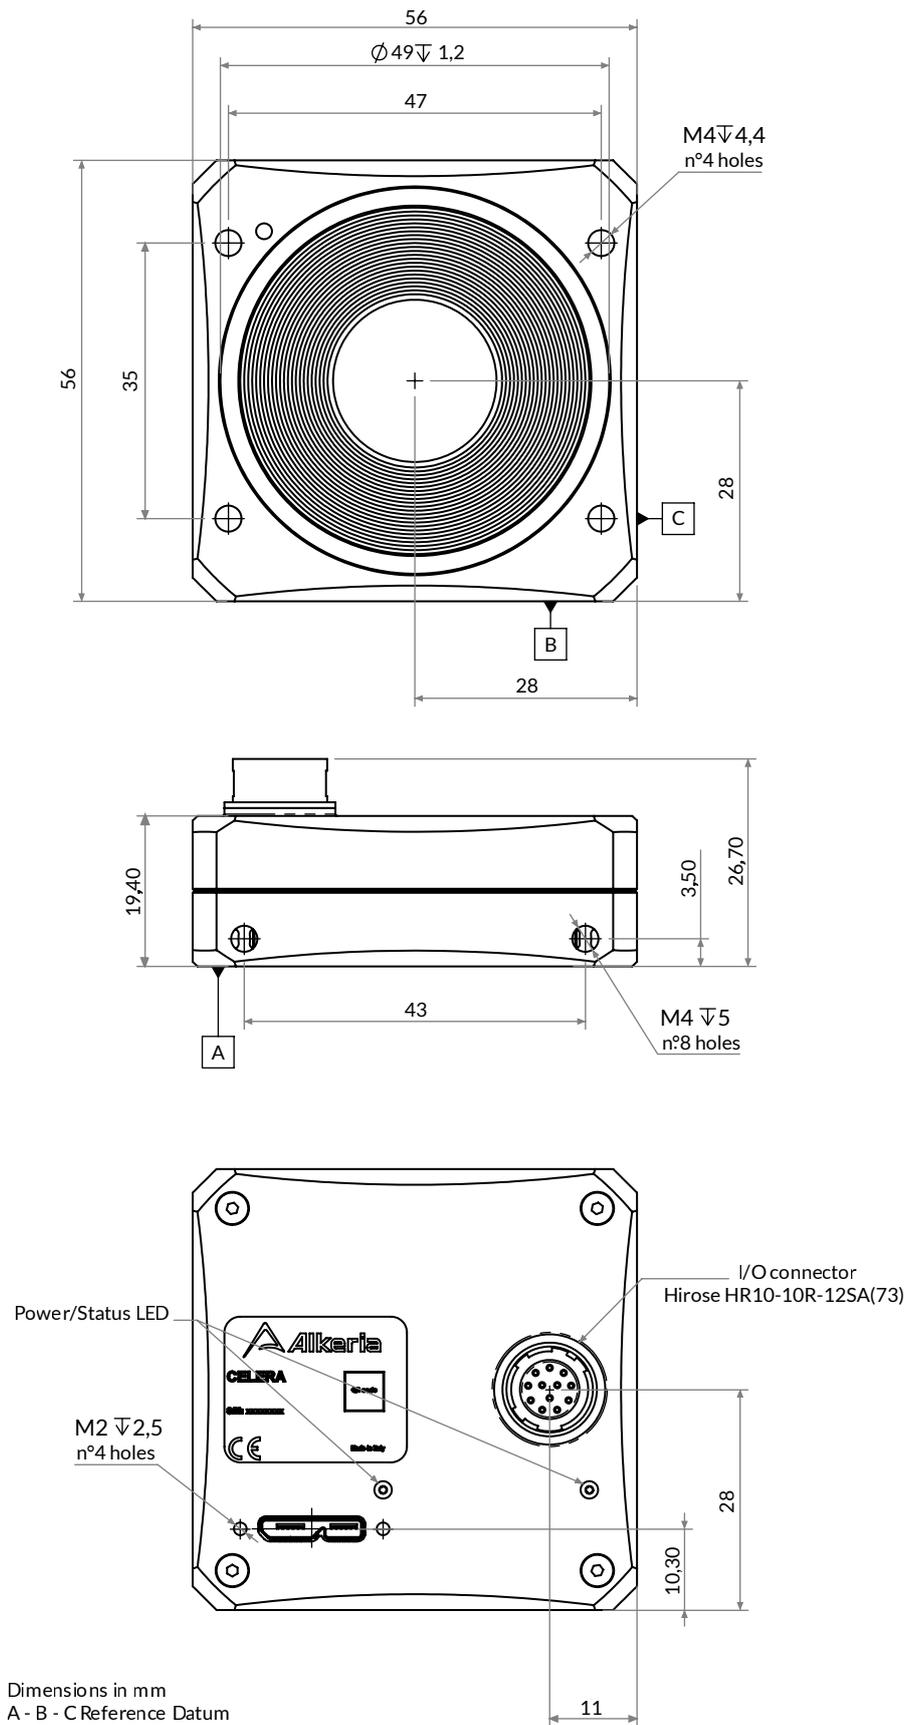


Figure 3.5: CELERA One P camera dimensions (without lens adapter)

3.4 ADAPTERS FOR STANDARD LENS

CELERA P family has some adapters available (described below) which allow using standard lens. The housing of CELERA P cameras also allows you to easily build your own adapters for custom optical lenses, to achieve the performance, economy and precision level required even by the most demanding application.

3.4.1 C-Mount adapter

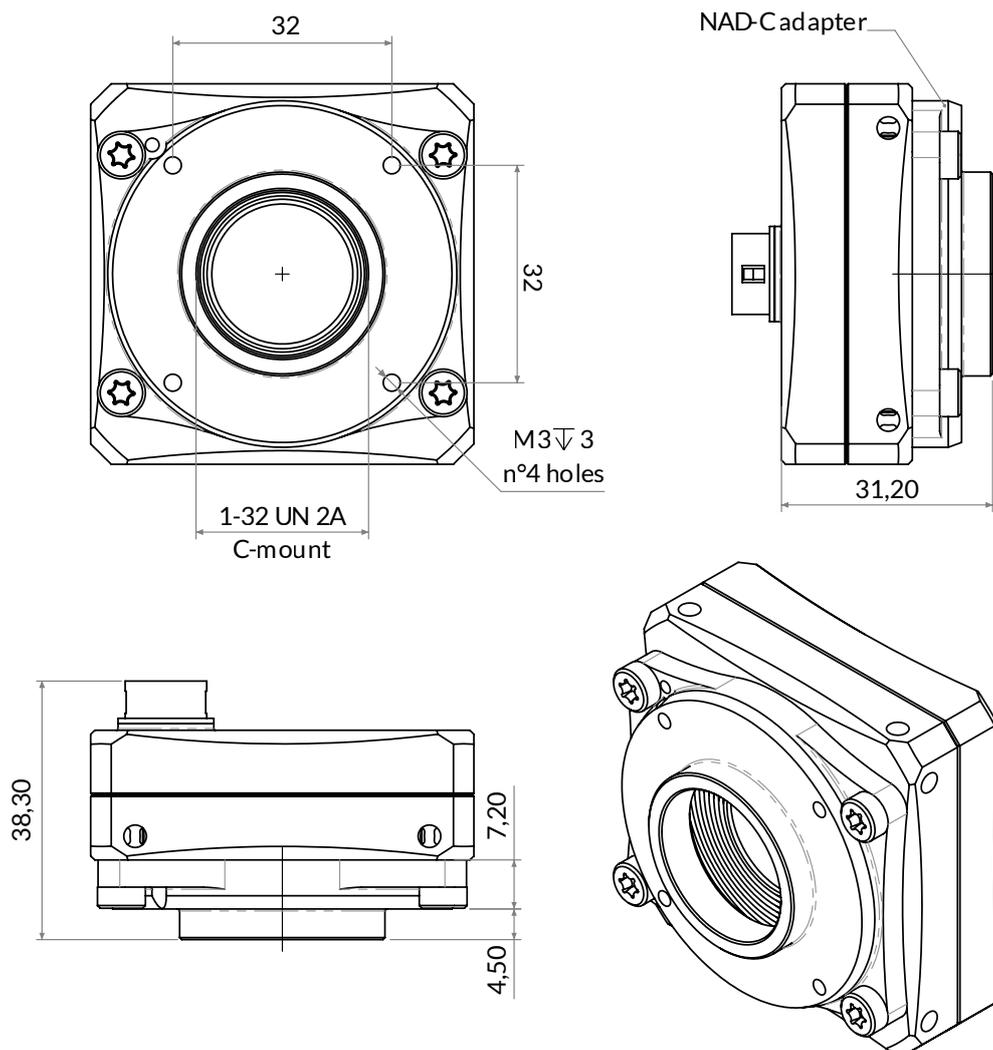


Figure 3.6: NAD-C C-Mount mechanical drawings

The NAD-C adapter, provided by default, allows interfacing CELERA P camera models with standard C-mount lenses. CELERA P cameras come with NAD-C adapter already assembled. If you need to disassemble it, just unscrew the four M4 hex front screws. This operation should be performed in a clean and dust-free environment. To reconnect the adapter, simply align it to the front holes of the camera and tighten the four M4 hex screws supplied with it.

**Warning**

The maximum tightening torque for screws is 2.0 N m. Exceeding the maximum tightening torque may damage the camera.

**Caution**

Do not contaminate the sensitive area of the camera. Avoid exposing optical parts to dust and dirt during handling operations; always operate in a clean working area, as dry as possible and free from dust. For best results, keep the camera facing downwards during operations.

3.4.1.1 Maximum lens protrusion

Maximum protrusion for a lens is the distance from the front surface of the sensor to the mounting surface of the lens flange. NAD-C C-Mount adapter allows installing only lenses with maximum protrusion of 11.80 mm.

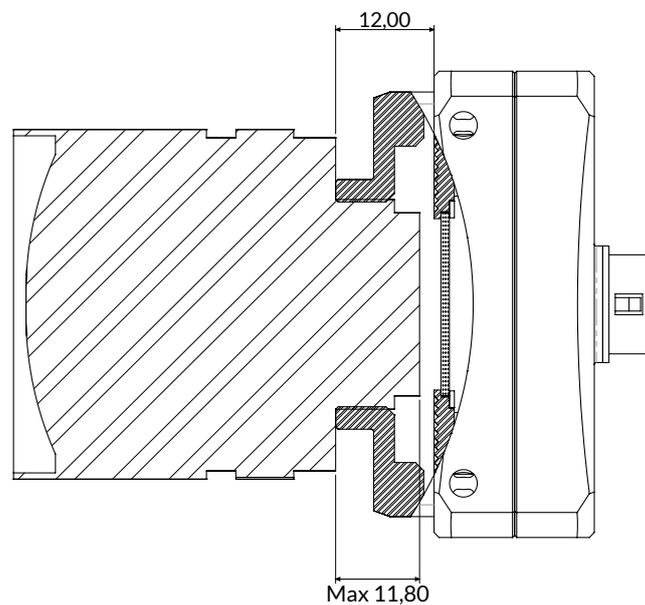


Figure 3.7: Maximum protrusion for C-Mount type lens

**Warning**

Mounting a lens with a protrusion longer than the maximum admitted value may seriously damage your CELERA P camera and your lens.

3.4.2 F-Mount adapter

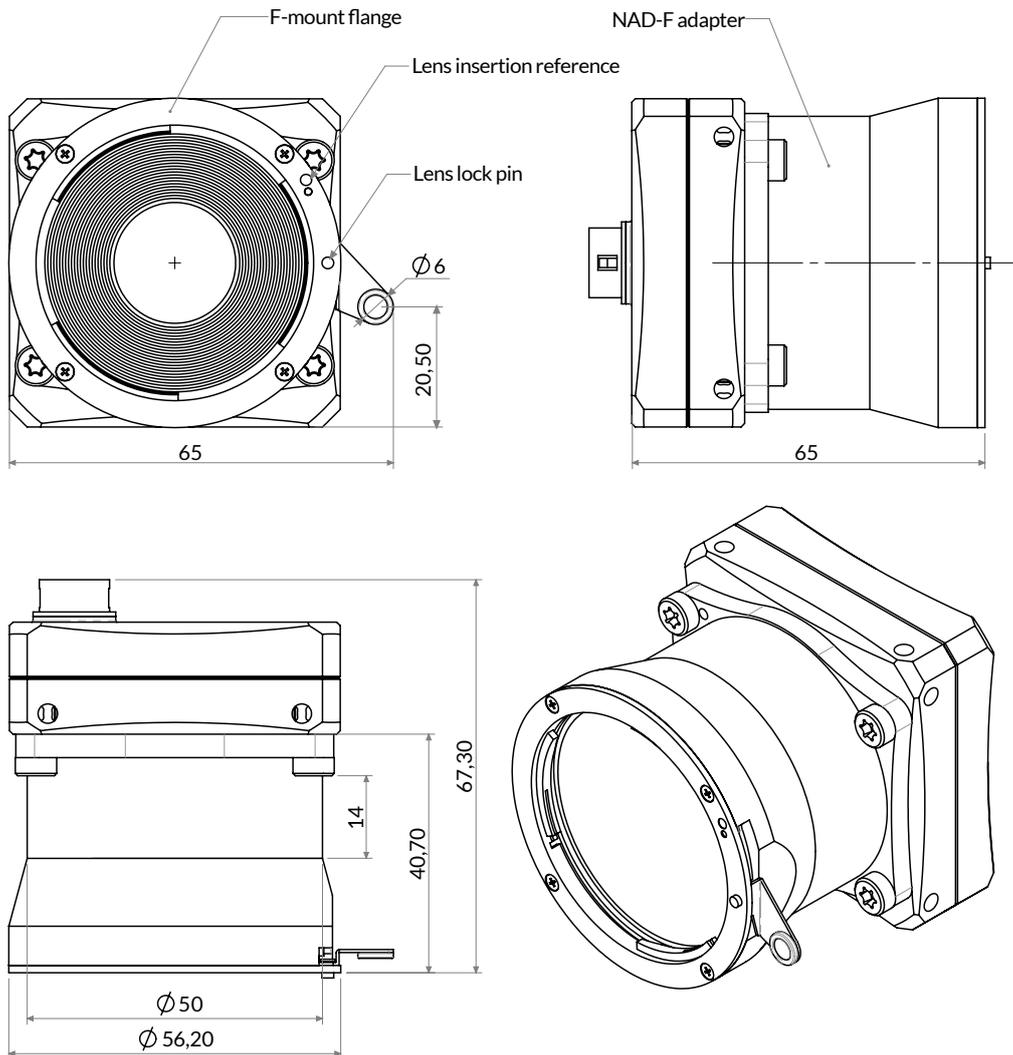


Figure 3.8: NAD-F F-Mount mechanical drawings

The NAD-F adapter allows interfacing any CELERA P camera models with standard F-mount lenses. To connect the adapter, simply align the NAD-F adapter to the front holes of the camera and tighten the four M4 hex screws supplied with it.



Warning

The maximum tightening torque for screws is 2.0 N m. Exceeding the maximum tightening torque may damage the camera.

Caution

Do not contaminate the sensitive area of the camera! Avoid exposing optical parts to dust and dirt during handling operations; always operate in a clean working area, as dry as possible and free from dust. For best results, keep the camera facing downwards during operations.

3.5 FLANGE FOCAL DISTANCE

The distance from the mounting flange to the sensor surface is called *flange focal distance*.

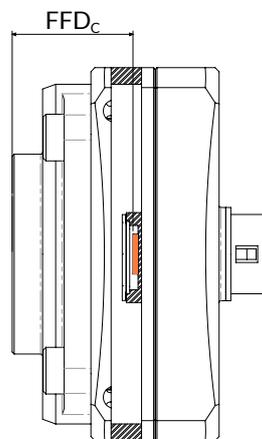


Figure 3.9: CELERA P camera equipped with C-Mount

CELERA P camera equipped with C-Mount adapter has a nominal flange focal distance FFD_C of 17.526 mm.

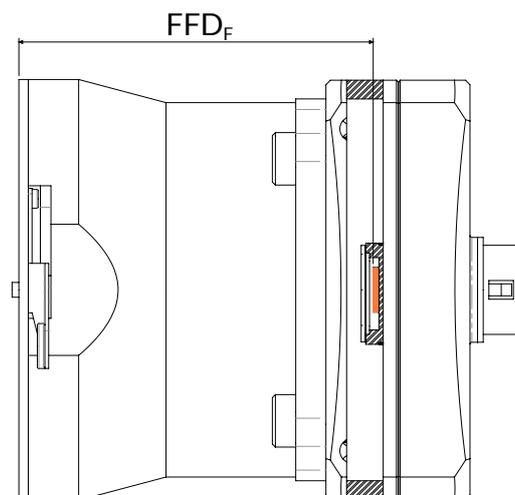


Figure 3.10: CELERA P camera equipped with F-Mount

CELERA P camera equipped with F-Mount adapter has a nominal flange focal distance FFD_F of 46.5 mm.



3.6 HANDLING PRECAUTIONS

The optical parts of CELERA P cameras are assembled in a clean environment and the camera lens mount is factory sealed using a protective film, preserving optical parts from being contaminated by dust. Remove the seal only just before connecting the lens. Never leave the mount hole uncapped. Perform the required operations quickly and without hesitation, keeping the camera facing downwards. It is recommended to carry out all the operations that may contaminate the optical parts (like removing the protective seal) in an appropriate environment, free from dust and humidity.

3.6.1 Temperature and humidity

	Min	Max	Notes
Housing temperature during operation	0 °C	50 °C	
Ambiental humidity during operation	20 %	80 %	Relative, non-condensing
Storage temperature	–15 °C	80 °C	
Storage humidity	20 %	80 %	Relative, non-condensing

Table 3.2: *Ambiental requirements*

During operations, the case of the camera must remain below 50 °C. Otherwise, sensitivity, linearity, dynamics, and signal/noise ratio may be degraded.

3.6.2 Warranty limitations

Removing the label, opening, or mishandling the camera will void its warranty.

3.6.3 Mechanical stress

CELERA P cameras are made using high-precision machining, taking care of sensitive parts positioning. Maintaining such accuracy is mandatory to avoid shock and stress that can deform reference surfaces. CELERA P connector can host cables with screws or locking systems; it is highly recommended to use these cables when CELERA P is exposed to shocks, vibrations, or harsh environments.

3.6.4 Heat dissipation

It is very important to provide good heat dissipation in order to maintain the camera housing temperature as low as possible. Operating the camera at high temperatures may impact negatively on image quality and may shorten camera life.

Warning



The camera housing may overheat during acquisition. Without proper heat dissipation image quality may be degraded and, in extreme environmental conditions, damage to the camera may occur. Never exceed the specified temperature limit during operation.

Since each installation is different, the following recommendations must be regarded as a starting point



for a correct thermal management, keeping in mind that these general guidelines must be customized by an experienced technician.

- Make sure a lens is always mounted on the camera. The lens acts as a heatsink and contributes keeping the system temperature low. The bigger the lens, the best it will work in keeping your camera cool. If your lens is not directly connected to the camera, always mount the camera on an aluminum or copper block in order to enlarge the radiating surface.
- Always monitor the camera housing temperature during the design phase of your project and keep an adequate safety margin in order to be sure that the case temperature will never exceed the maximum specified, even in the worst environmental conditions.
- Provide adequate heat dissipation by mounting the camera on a wide thermally conductive surface that can act as a heatsink and use a fan in order to provide forced air flow over the camera.
- Grant enough air circulation between the camera and other system components, especially hot ones.
- Do not cover the camera case with thermally insulant materials like plastic films or cases.

3.6.5 Monitoring internal temperature

During continuous acquisition, CELERA P temperature keeps rising until a steady temperature state is reached. CELERA P provides an internal temperature reading through an integrated sensor. Depending on the airflow, the internal temperature may be 10 °C to 20 °C higher than the housing. Continuous monitoring of the internal temperature is recommended to guarantee that the camera is performing correctly. Actions must be taken if the internal temperature rises above 70 °C. Refer to Section 10.3.2 to know more about reading the main board temperature using the CELERA P viewer. Moreover, you can implement temperature monitoring by yourself using the following code:

Example Code 3.1 | Temperature Monitoring

```
// Read the current temperature
float temp = device.Temperature;
// Retrieve the temperature measurement unit
UnitInfo unit = device.GetFeatureUnitInfo(Feature.Temperature);
MessageBox.Show(String.Format("Temperature: {0} {1}", temp, unit.Unit.ToString()));
```

3.6.6 Automatic internal temperature safety mechanism

An automatic temperature monitoring mechanism, shown in Figure 3.11, has been implemented in CELERA P cameras. The current temperature status can be retrieved by reading the `OverTemperatureStatus` property. Three statuses are defined:

- **Normal:** Temperature is below 70 °C. The camera is working within the safe operation area and standard functionality is guaranteed.
- **Warning:** Temperature exceeded 70 °C. The camera is still able to acquire images but the temperature is very high and near to the upper operating limit. Working in this limit condition is definitely not recommended. To return to *Normal* status the camera temperature must fall below 65 °C.



- **Fault:** Temperature exceeded the 80 °C operative limit and the image acquisition was suspended to reduce the temperature below the fault threshold. The acquisition can be resumed only when the temperature is less than 75 °C.



Figure 3.11: Temperature status transition

Software temperature monitoring thread may be activated using `OverTemperatureMonitorEnable` property. When the temperature monitoring thread is active, the `OverTemperatureStatusChanged` event is fired every time the `OverTemperatureStatus` changes. The following code shows how to register on the event and activate the thread:

Example Code 3.2 | Temperature Change Event

```
device.OverTemperatureStatusChanged += delegate(object o, EventArgs a)
{
    String msg = String.Format("Status: {0}", device.OverTemperatureStatus);
    MessageBox.Show(msg);
};
device.OverTemperatureMonitorEnable = true;
```

3.6.7 EMI/ESD precautions: noise and electrostatic discharge

CELERA P cameras are typically used in industrial environments, where many devices may generate electromagnetic interference and electrostatic discharge. Although CELERA P cameras are designed to be extremely resistant to perturbations from the external environment, strong EMI and ESD transients may cause unwanted behavior, such as false triggering and defects in an acquired image. Those issues can be fixed by adopting good practices in the harness and cable routing. To reduce EMI and ESD, it is therefore essential to take some good general precautions when connecting the equipment:

- Install the camera as far as possible from high current loads such as motors or solenoids, especially if powered by a switching power supply.
- Use cables with double shielding and keep them as short as possible. Keep the contact area always clean and protected from dust.
- Separate power cables from signal cables. Avoid power cables running parallel to signal ones. This recommendation applies both to camera cables and to any other cable used in the equipment.

- Pay attention to the ground connections: they must be implemented through a single reference node, avoiding ground loops. Keeping your system powered from a single outlet will greatly reduce ground loop-related problems.
- Install the camera far away from devices generating sparks or strong electromagnetic fields, such as, for example, large transformers, welding machines and electric motors.

3.7 CLEANING CELERA P CAMERA

Each CELERA P camera is carefully cleaned and checked before shipment. Nevertheless, using the camera in unclean environments may let dust enter the optical path. Since cleaning procedures require time and care and can be performed by trained personnel only, the best way of keeping your camera clean is to avoid extraneous matters entering the camera. Improper cleaning procedures may damage camera components. Contact Alkeria SRL if you are not familiar with the procedures described below. Any damage to the sensor, filter, protection glass and camera housing that occurred during cleaning procedures is not covered by the Alkeria SRL warranty.

3.7.1 Before starting

Risk of electric shock



Disconnect USB cable from the camera.

Disconnect the I/O cable, if present.

Wear ESD-safe clothes and operate in an ESD-safe environment to avoid damaging the camera (never use synthetic clothes or insulating chairs).

Discharge yourself by touching a conductive grounded surface before handling the camera.

3.7.2 Cleaning CELERA P camera housing

- Keep the lens mount hole sealed (using a lens or a proper cover) when cleaning the camera housing.
- Use only a soft, dry cloth.
- In case of persistent spots, use a soft cloth with a few drops of optical grade cleanser or neutral detergent, then dry quickly.
- Never use cleansers such as gasoline, spirits or solvents. Aggressive products may damage the camera housing surface.

3.7.3 Optical path cleaning

- Perform the cleaning procedure of any optical component in a dust-free clean environment.
- Avoid directly touching optical parts with bare fingers. Wear clean-room grade latex or nitrile powder-free gloves.



- Avoid touching any optical surface with rough materials.
- Use only optical grade wipes, so as not to leave dirt residues and to scratch the glass. Never use commercial grade cotton swabs.
- Use only low residue optical grade cleansers, this avoids haloes over the glass.

3.7.4 Impurities

Before cleaning any parts, it is crucial to understand where impurities are located. You can distinguish particles on the lens, filter or on the sensor by looking at live images on your player. To help identify any impurity in the optical path, it is recommended to set the smallest aperture by rotating the lens dial (larger values correspond to small apertures). Point the camera to a homogeneous bright target to highlight possible impurities artifacts. Impurities on the sensor appear as dark well-focused spots that remain still while you move the camera with respect to the subject (refer to Figure 3.13). Particles located on the filter surface look blurred, regardless of the lens focus, and remain still even when rotating the lens (refer to Figure 3.12). Dust on the lens looks blurred and rotates together with the lens.



Figure 3.12: Example of lens or filter impurities



Figure 3.13: Example of sensor impurities

3.7.5 Filter cleaning

Keep the camera facing downwards when removing the lens, lens adapter or dust cap. This prevents dust from collecting on the filter surface.



For better access to the sensor filter, it is recommended to remove the lens adapter.

Use a lens blower to remove impurities from the filter surface and the lens adapter. Reassemble the optical components and repeat the acquiring procedure. For a perfect result, it might be necessary to repeat the above procedure a few times.

If spots are still present, it may be necessary to mechanically clean the filter, following the procedure below:

- apply a small amount of cleaning liquid to a new lens cleaning wipe,
- wipe the filter surface in a delicate circular motion from the center to the sides to move impurities out of the sensor field of view,
- repeat the cleaning motion until all impurities are removed.

If you are not satisfied with your cleaning results, please contact rma@alkeria.com to arrange the camera return procedure (refer to Section 11.1).

Warning



Improper cleaning procedure may lead to filter surface scratches. If you are not familiar with glass cleaning technique please contact rma@alkeria.com to arrange the camera return procedure (refer to Section 11.1).

3.7.6 Sensor cleaning

Installing the camera according to the recommended procedures makes unlikely sensor contamination.

Warning



The sensor protection glass cannot be accessed anyhow without opening the camera housing. Doing it by yourself will void the camera warranty.

If you think your camera sensor needs to be cleaned, contact rma@alkeria.com to arrange the camera return procedure (refer to Section 11.1).

3.7.7 Using compressed air

Alkeria SRL does not recommend cleaning methods involving compressed air. This kind of procedure may lead to various damage.

- High-pressure air flow may push dust into the camera instead of removing it. Optical components may be permanently damaged and the sensor surface may be contaminated.



- Non-optical grade compressing systems may release oil vapor or moisture into the airflow. This contamination may damage the sensor or the camera and it could be very difficult to remove even for a trained operator.

If compressed air is used (never exceed 4 bar) you should choose an optic-approved air compressor with an anti-static ionizer and adopt filters to remove moisture and oil from the airflow.

3.7.8 After cleaning procedure

Risk of electric shock



Before reconnecting the plugs, be sure that cleaning materials have evaporated.

If any liquid has penetrated the camera housing, contact Alkeria SRL before plugging any connector (see Section 11.1).

4

Interfacing To The World

CELERA P features a robust circular I/O connector (Hirose p/n HR10-10R-12SA (73)) interfacing to external signals. The I/O connector provides two input lines, two output lines and a programmable I/O line; all lines support both differential and single-ended signaling according to the RS-422, RS-644, LV-TTL/LV-CMOS and 12 V-24 V standards (where available. Check sec 4.0.1 for further information). The I/O connector is located on the back of the camera as indicated in the following figure:

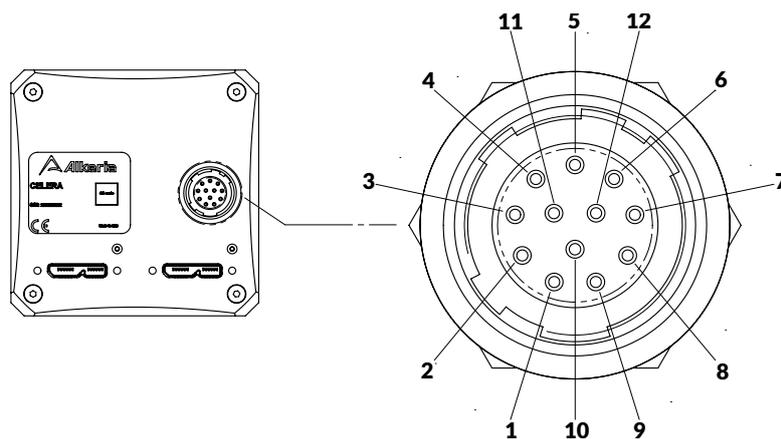


Figure 4.1: CELERA P I/O Connector

Pin	Name	Function
1	P0-	Bidirectional port, negative input
2	P0+	Bidirectional port, positive input
3	P1-	Input port, negative input
4	P1+	Input port, positive input
5	GND	Ground
6	DC Out	DC Output - 300 mA max
7	P3-	Output port, negative output
8	P3+	Output port, positive output
9	P2-	Input port, negative input
10	P2+	Input port, positive input
11	P4-	Output port, negative output
12	P4+	Output port, positive output

Table 4.1: I/O Connector Pinout

The I/O ports are disabled at power-on, to disconnect any external load and user termination whose power consumption may exceed the USB 3.2 Gen 1x1 standard requirements during the bus recognition and enumeration phase. The I/O ports are automatically enabled at the end of the USB enumeration phase.

4.0.1 Detecting I/O power

CELERA P features a 24 V tolerant I/O interface. However, previous CELERA P hardware releases tolerates only 5 V signaling: for this reason, on each camera this feature is specified on the label, in order to quickly identify which model is compatible with 24 V signals.



(a) CELERA P with 24 V tolerant I/O



(b) CELERA P with 5 V tolerant I/O

Figure 4.2: Differences between 24V and 5V labels

Caution

Always check your camera I/O power compatibility before interfacing the camera to other devices.

Connecting the camera to incompatible input signals may cause **permanent damage** to the camera itself.

4.1 I/O CABLE

The CELERA P I/O connector can host a cable to interface the camera to the world. Standard interface cables can be provided as optional accessories (refer to Section 2.2); they are made of five signal pairs, a power pair and an additional global braid shielding. The cable shielding is connected to the CELERA P aluminum case and to the protective earth of the controlling computer (through the USB cable). One end of the I/O cable features a Hirose connector (mod. HR10A-10P-12P) for connecting to CELERA P, the other end is left open for connecting to external devices. The wire insulating material in the cable is either solid color or striped lengthwise in two colors, according to the DIN47100 standard. Refer to the table below for a detailed description:

Pin	Name	DIN47100 color	Pin	Name	DIN47100 color
1	P0-	White	7	P3-	Blue
2	P0+	Brown	8	P3+	Red
3	P1-	Green	9	P2-	Black
4	P1+	Yellow	10	P2+	Purple
5	GND	Grey	11	P4-	Grey/Pink
6	DC Out	Pink	12	P4+	Red/Blue

Table 4.2: DIN47100 I/O cable color coding

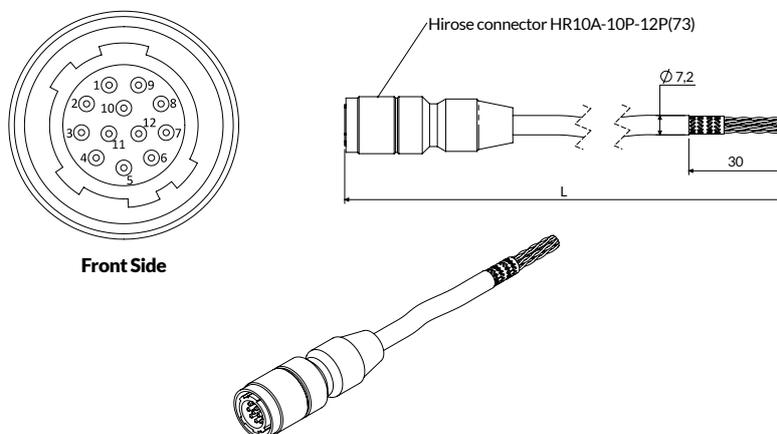


Figure 4.3: NIO-L I/O cable internal structure

If you need to build your own I/O cables, please use a good cable featuring a braid whose shielding coefficient is greater than 85 %, and connect the external braid shielding to the connector body. The maximum allowed length for the I/O cable is 10 m; it is recommended to use the shortest cable allowed by your application, see Section 2.2 for the available lengths.



Caution

Using cables not properly assembled may damage both the camera and connected devices.

4.2 POWER SELECTION

CELERA P can supply to an external device up to 300 mA at 3.3 Vdc or 5 Vdc. User can select between those two power level using the following code example:

Example Code 4.1 | IO Power Supply selection

```
if(device.PIOHighVoltageOutAvailable)
    device.PIOHighVoltageOut = true;
```

To select 5 V power voltage, set the `PIOHighVoltageOut` property to `True`.



Caution

While booting, CELERA P does not supply any power through the I/O. Once booted, the `PIOHighVoltageOut` is set to `False` (default value). Be sure that behavior will not damage the external hardware.

4.3 I/O MODULE

The signals available through the I/O connector natively support the RS-422 differential signaling and can also be used in RS-644, LV-TTL/LV-CMOS and 12 V - 24 V single ended signaling (where available). The CELERA P family uses differential transceivers (p/n LTC2855-LTC2865, manufactured by Linear Technology); to access any data not shown below, refer to the manufacturer's datasheet.

4.3.1 Input module structure

Figure 4.4 - 4.5 shows the internal structure of a CELERA P input module. An input internal termination can be enabled by software, replacing external end-of-line termination resistors; the input also features a voltage divider polarizing the “-” input to support single ended signaling (see Section 4.3.1.5).



Warning

To ensure proper operation of the input circuit, the reference ground related to input signals must be connected to the camera as well.

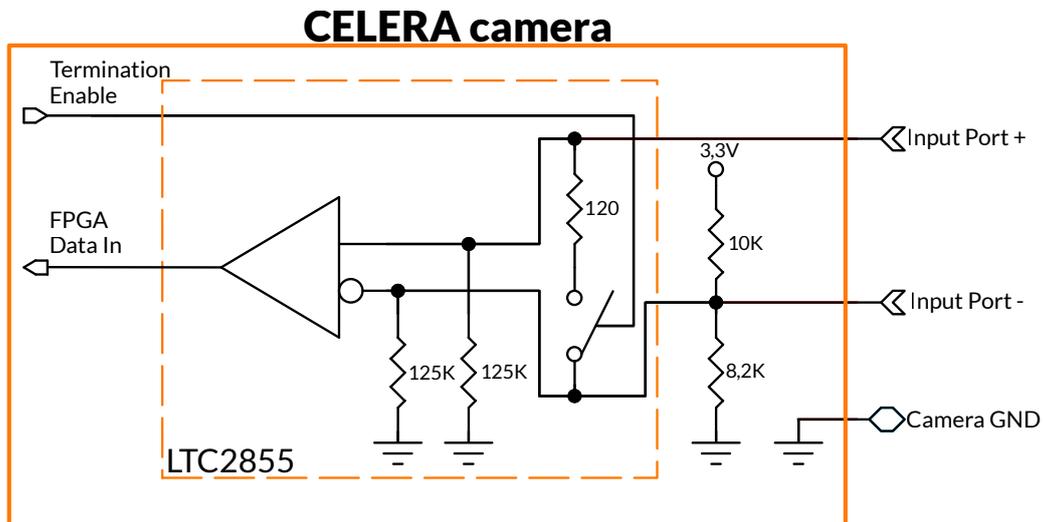


Figure 4.4: CELERA P with 5 V tolerant input port internal structure

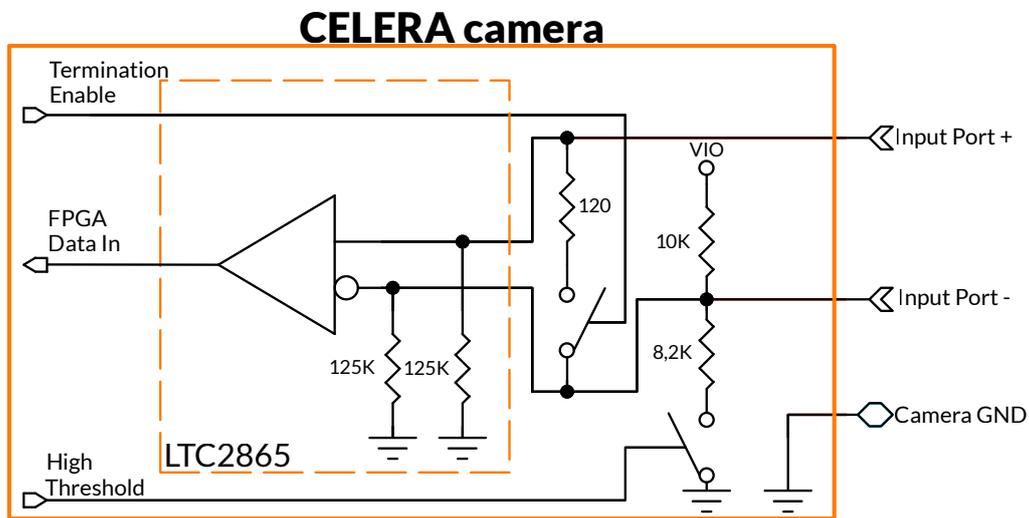


Figure 4.5: CELERA P 24 V tolerant input port internal structure

4.3.1.1 Debouncing module

Each CELERA P input line can feed a debouncing module to filter the input signal: enabling the debouncing module allows capturing stable signals with no spurious pulses when input signal suffers from electrical noise (e.g. signals generated by mechanical encoders or mechanical switches). The debouncing module waits for the input signal remaining stable for at least the user-programmed time interval (orange area in Figure 4.6); when this time is elapsed, the signal is considered valid and transferred to down-



stream modules.

Warning



The debouncing filter adds a delay to the signal chain, starting from the instant when it has actually become stable, as long as the selected sampling time (see Figure 4.6). The debounce time can be set between 0 (debouncing disabled) and 65 535 μs , with a 1 μs granularity.

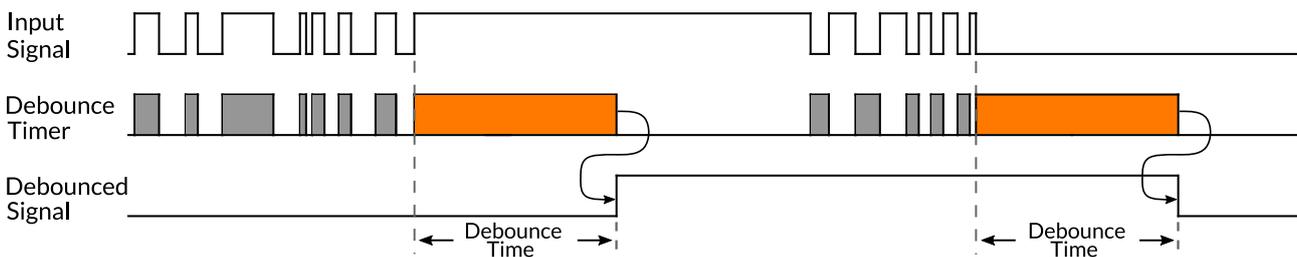


Figure 4.6: Time diagram of the debouncing filter

The debouncing module is independently available for all input lines and can be programmed with a different delay for each one of them.

Warning



When using the debouncing module, it is important to set a debounce time just longer than the maximum expected instability time of the input signal: setting shorter times might prevent filtering unwanted spurious transitions, while using longer times may cause missed detection of valid transitions.

4.3.1.2 Input events

CELERA P input modules detect and log input events (raising and falling edges) occurring to any input port; the event logging allows easy detection of changes in input signals, avoiding continuous input polling. Rising and Falling events can be individually read; reading an event flag immediately resets its status. This allows you to check if any input status transition has occurred since the last event flag reading.

The following code source reads the event flags bound to input port 1:

Example Code 4.2 | Input Change Event

```
bool riseEvent = device.PIOPorts[1].RisingEvent;
bool fallEvent = device.PIOPorts[1].FallingEvent;
```



Figure 4.7: Input event generation and readout

Warning



Event flags are set at each input event; when consecutive input events of the same type (rising or falling) happen between two event flag readouts (event flag overrun), the input event latches the first event only and the following events will be lost.

4.3.1.3 RS-422

CELERA P input ports natively support differential signaling according to the RS-422 standard.

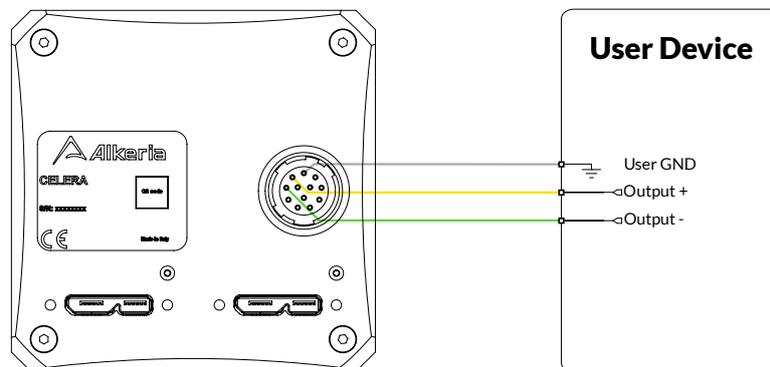


Figure 4.8: Connecting a RS-422 input signal

If your application requires connecting multiple devices to the same RS-422 line, please use a bus topology. For example, if you want to connect a trigger signal to multiple cameras, please implement the connections as shown in Figure 4.9:



Caution

AVOID other topologies (e.g. star) when connecting devices.

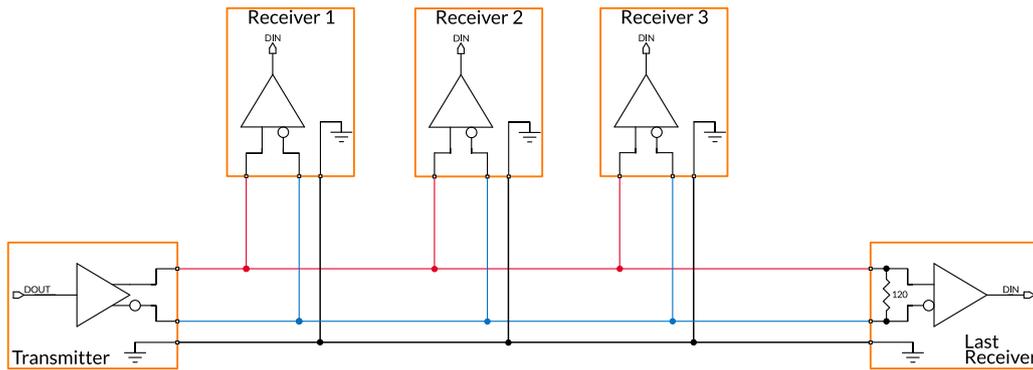


Figure 4.9: Connecting an output port to four input ports, terminating the last input port

Warning



To ensure the electrical signal integrity on the bus, you must connect only the termination resistor ($120\ \Omega$) to the last device (on the right in the figure above). If the last device is a CELERA P camera, you can simply enable its internal termination via software (see Code 4.16).

As a general guideline, the master device (driving the bus) should be at one end of the line, the cables connecting each device to the bus should be as short as possible and the termination should be present (or enabled) only for the latest slave device.

4.3.1.4 RS-644

Input modules can also support RS-644 signals.

Warning



To achieve signaling compatibility, you must **always** keep the internal input termination enabled, even if this is not the last device of the bus.

Moreover, although the RS-644 standard (like RS-422) allows a bus connection, we recommend using point-to-point connections only avoiding connecting devices other than the RS-644 transmitter and CELERA P.

4.3.1.5 LV-TTL / LV-CMOS / 12 V - 24 V

CELERA P input ports natively support differential signals according to the RS-422 standard. Anyway, input modules can also support single-ended LV-CMOS, LV-TTL and 12 V - 24 V signals (where available): as shown in Figure 4.10, an internal bias network keeps the “-” input line at a fixed voltage level, that can be configured according to the maximum voltage of the external signal. A single-ended signal connected to the “+” is therefore detected as logical “1” when its level is at least 0.5 V higher than “-” reference

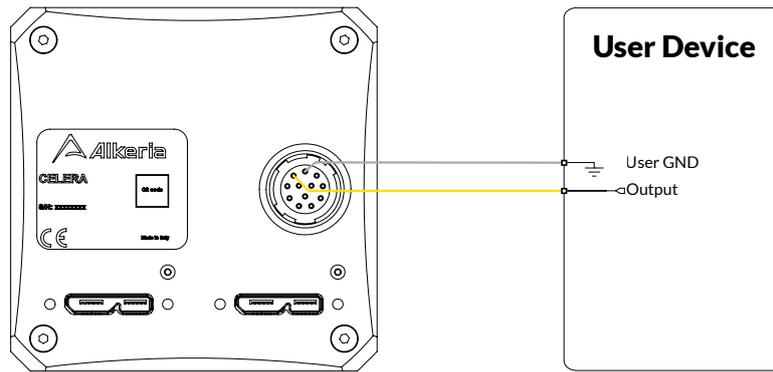


Figure 4.10: Connecting a LV-TTL signal to input port P1+

signal. Following table shows how to configure the threshold level in CELERA P with 24 V tolerant I/O, using the properties `PIOHighVoltageOut` and `PIOHighThreshold`.

Input maximum Voltage	PIOHighVoltageOut	PIOHighThreshold	Reference Voltage
3.3 V	False	False	1.49 V
3.3 V	False	True	3 V
5 V	True	False	2.25 V
5 V to 24 V	True	True	5 V

Table 4.3: Single ended “-” input voltage value



Note

Threshold level settings are common for all input ports.



Warning

When an input port is connected to a LV-CMOS/TTL signal its input termination must be kept disabled; otherwise, the input signal cannot be correctly detected.



Caution

Input signals **must never exceed +30 V** on CELERA P with 24 V tolerant I/O. Input signals **must never exceed +6 V** on CELERA P with 5 V tolerant I/O.

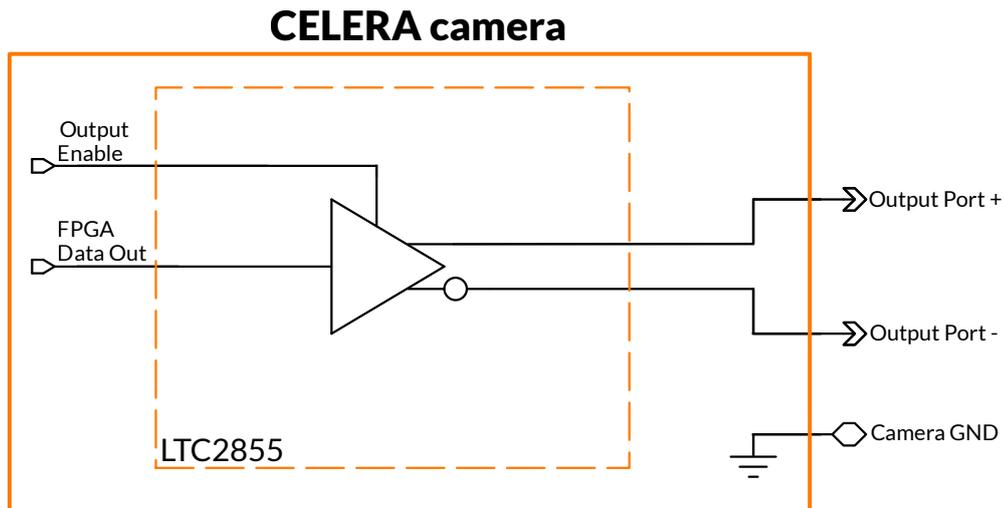


Figure 4.11: CELERA P with 5 V tolerant output port internal structure

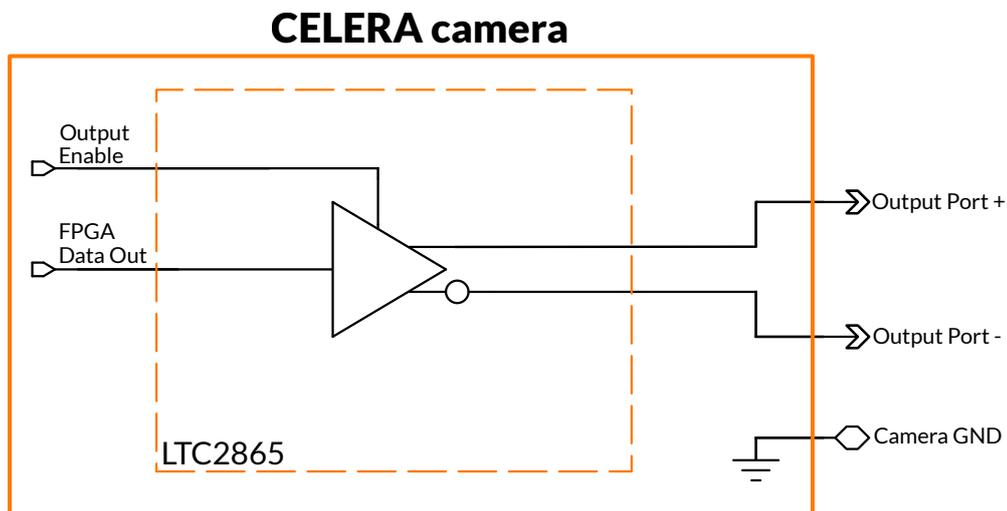


Figure 4.12: CELERA P with 24 V tolerant output port internal structure

4.3.2 Output module structure

CELERA P output ports natively support differential signaling according to the RS-422 standard and may be used even in RS-644 and LV-TTL mode. Figure 4.11 - 4.12 shows the internal structure of an output port. The CELERA P family employs differential transceivers (p/n LTC2855-LTC2865, manufactured by Linear Technology); to access any data not shown below, refer to the manufacturer's datasheet.



Warning

To ensure proper operation of the output circuit, the camera reference ground must be connected to the slave device as well.

4.3.2.1 RS-422

CELERA P output ports natively support differential signaling according to the RS-422 standard.

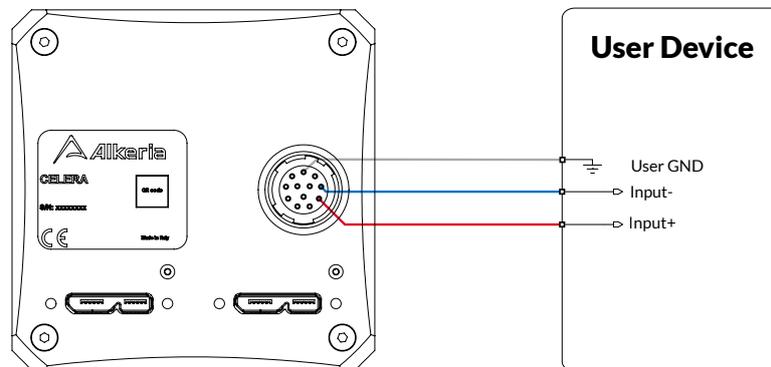


Figure 4.13: Connecting output port P3 to a RS-422 input

Warning



To ensure signal integrity on the bus it is highly recommended to use the RS-422 bus topology and keep all the bus connections to slave devices as short as possible. The master device (the CELERA P camera) must be located at one end of the bus; a terminating resistor ($120\ \Omega$) must be connected only to the farthest slave at the other end of the bus (see Figure 4.9).

4.3.2.2 RS-644

CELERA P outputs (supporting the RS-422 standard) may also be adapted to drive devices whose inputs follow the RS-644 standard. To make signaling compatible it is necessary to use a resistive divider, as shown in Figure 4.14, adapting the output signal level of the camera output to the RS-644 device input levels.

Warning



To ensure proper operation of the output circuit, the camera reference ground must be connected to the slave device as well.

Although the RS-644 standard allows bus topology (like RS-422), we strongly recommend using point to point connections only, avoiding connecting devices other than the CELERA P camera and the RS-644 receiver.

Warning

Connecting CELERA P camera outputs to an external RS-644 device inputs **WITHOUT** using the recommended resistive divider may seriously damage your device.

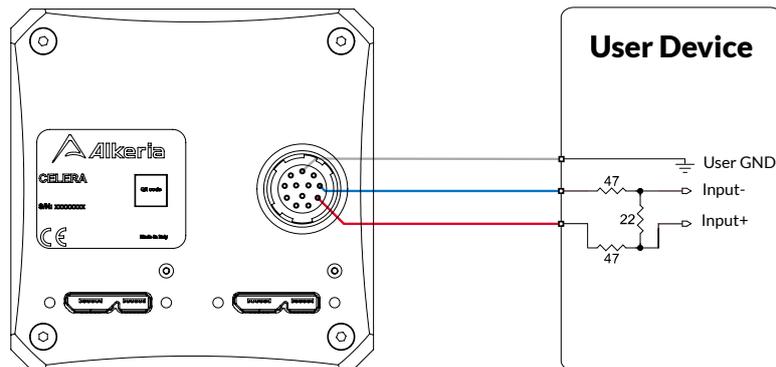


Figure 4.14: Connecting output port P3 to a RS-644 input

4.3.2.3 LV-TTL / LV-CMOS

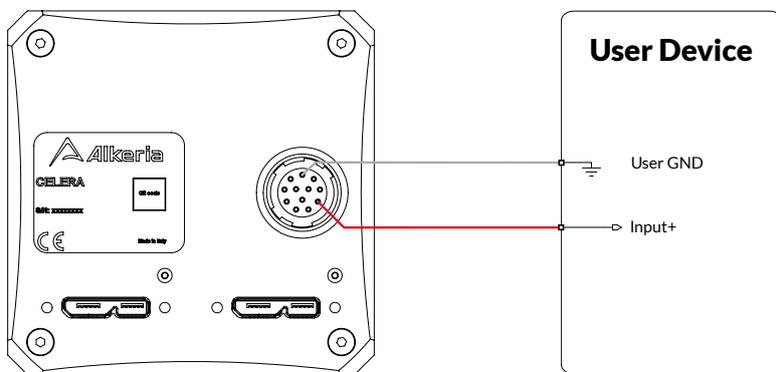


Figure 4.15: Connecting output port P3+ to a LV-TTL / LV-CMOS input

CELERA P outputs can be interfaced also to LV-TTL/LV-CMOS inputs using the connections shown in Figure 4.15: the '0' logic level generated by the output driver is lower than 0.5 V, while the '1' level is about 3.3 V; both levels therefore satisfy the input requirements for both LV-TTL and LV-CMOS signaling. Please connect the P+ output for direct signaling, or P- output for inverted logic signaling.

Warning

To ensure proper operation of the output circuit, the camera reference ground must be connected to the slave device as well.

4.3.2.4 5 to 24 V Output

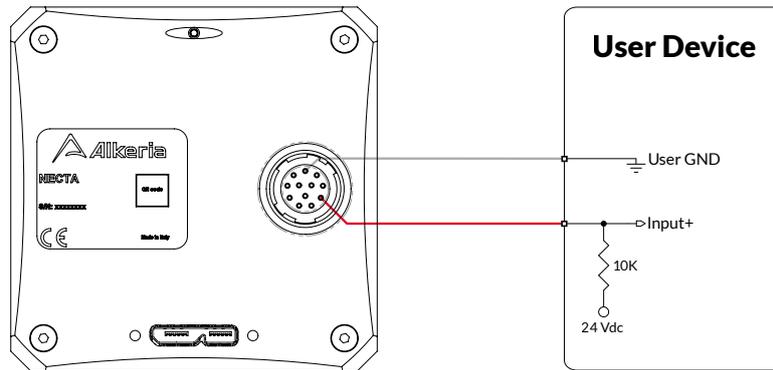


Figure 4.16: Connecting output port P3+ to a 24 V input

CELERA P with 24 V tolerant I/O interface can drive also 5 to 24 V inputs using the connections shown in Figure 4.16: the '0' logic level is generated by the output driver "shorting" the external pullup resistor to ground, while the '1' level is imposed by the external pullup voltage. This configuration needs to be enabled using the procedure in Section 4.5.2.

External pullup resistor value must be calculated in order to maintain the 0 V output current under 30 mA, as shown below:

$$R_{Pullup}[k\Omega] \geq \frac{V_{Pullup}[V]}{30 \text{ mA}} \quad (4.1)$$

Note that the lowest pullup value, the slowest commutation time, the highest '0' logic voltage value.

4.3.3 Bidirectional module structure (port 0)

CELERA P port 0 can be software-configured either as an input or as an output. When the camera is powered on, the port is initially configured as an input (termination disabled); it can be set as an output by software. All the statements above about input and output ports, including methods to interface to signals with logic levels different from RS-422, apply also to port 0. For more information on how to configure and use the input/output port refer to the code samples in Section 4.5 and to the examples found in the MaestroUSB3 SDK.

4.3.4 I/O switching time

As reported in the I/O schematics shown in Figure 4.4-4.5 and below, CELERA P cameras use RS-422 differential transceivers mod. LTC2855-LTC2865, made by Linear Technology. They allow very short switching time: the input propagation delay, due to the input receiver, is less than 70 ns, the output delay is less than 50 ns¹; both rise and fall time are less than 12.5 ns.

¹Valid only for push-pull output configurations. When the output is open-collector, delay depends on the external pull-up.

Warning

Input signals are usually processed by the debouncing module (see Section 4.3.1.1), which avoids false acquisitions when the input signals may contain glitches. However, the debouncing module obviously limits the input signal bandwidth: when an input signal is changing very fast, properly setting the related debouncing module, or even disabling it, may be necessary to avoid losing events.

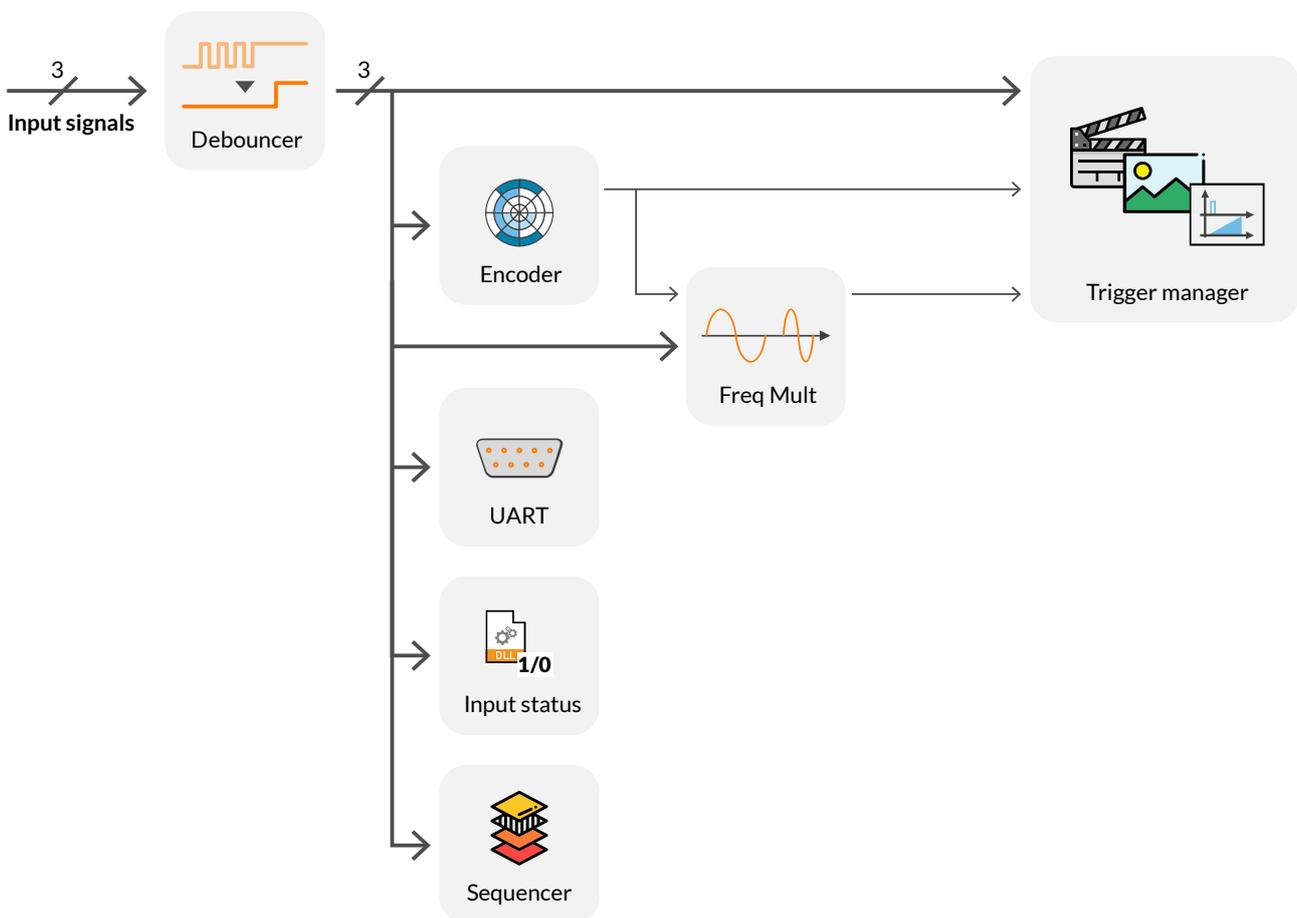
4.4 USING INPUT SIGNALS

Figure 4.17: Input port internal routing

As shown in Figure 4.17, signals acquired through input ports can be routed, along with other internally generated signals, to the internal camera processing modules; some outputs of the processing modules can be routed to the *trigger manager* module, which controls camera timing and acquisition mode.

4.4.1 Encoder module

The *encoder module* allows interfacing the camera to an external encoder; it generates a pulse (tick) for each encoder transition and updates a resettable counter tracking the current position. Phase and

quadrature signals (marked as A and B in Figure 4.18 and following) can be routed to any of the three camera inputs and are fed to the *encoder module* after being filtered by the *debouncing module* (see Section 4.3.1.1).

4.4.1.1 Encoder hysteresis

The encoder module uses a threshold mechanism to ignore temporary direction reversals due to vibrations and mechanical plays. The figures above show the operation of the *encoder module*, respectively in the cases of constant rotational speed (Figure 4.18) and input jitter due to mechanical vibrations (Figure 4.19).

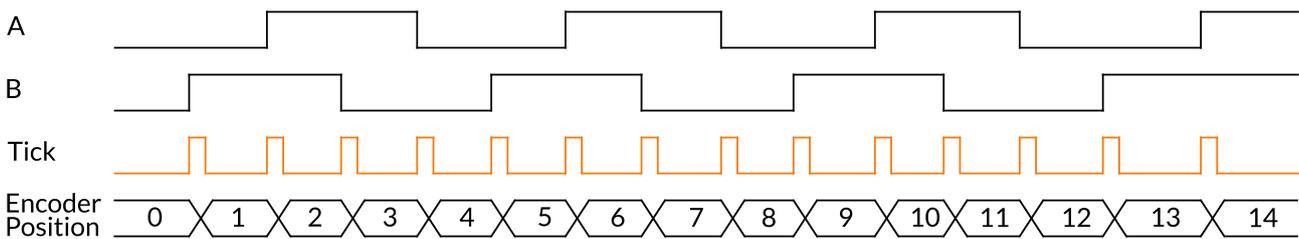


Figure 4.18: Ticks generated in normal operations

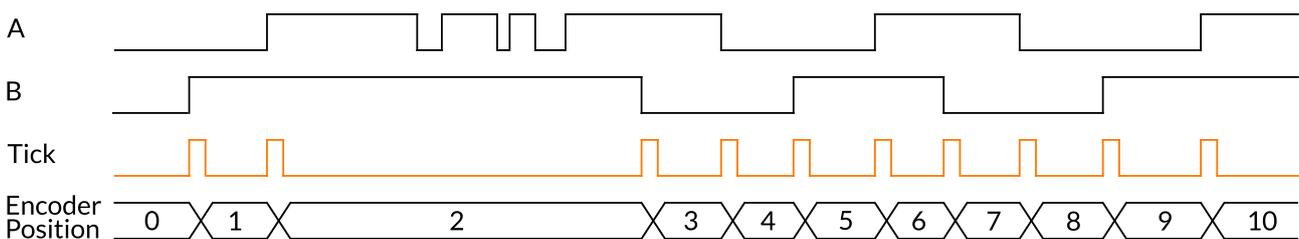


Figure 4.19: Ticks generated in the presence of jitter

4.4.1.2 Direction reversal

The `IgnoreDirection` property controls the behavior of the *encoder module* when an actual (permanent) direction reversal occurs: when it is set to true, the module continues generating ticks regardless of the direction of rotation (see Figure 4.20 and Figure 4.21).

As you can see, on T1 the backwards step is ignored due to the hysteresis effect. Therefore, no ticks are generated, even if the encoder continues to rotate backwards (T2) and position counter is decreased. When the encoder starts turning forward again (T3), the internal position counter will be increased again. However, ticks will be generated again only at T4, i.e. when the counter reaches the value it had just before the encoder direction inversion.

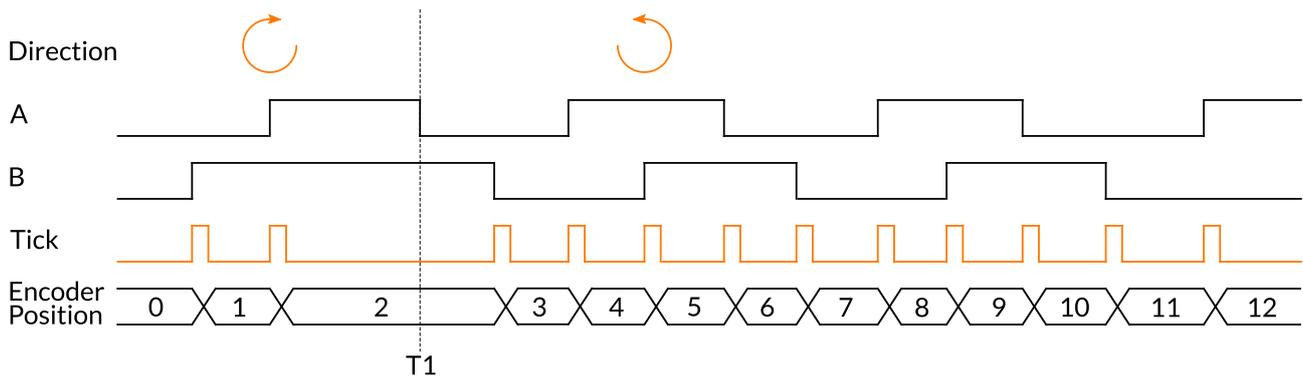


Figure 4.20: Ticks generated when ignore direction is enabled

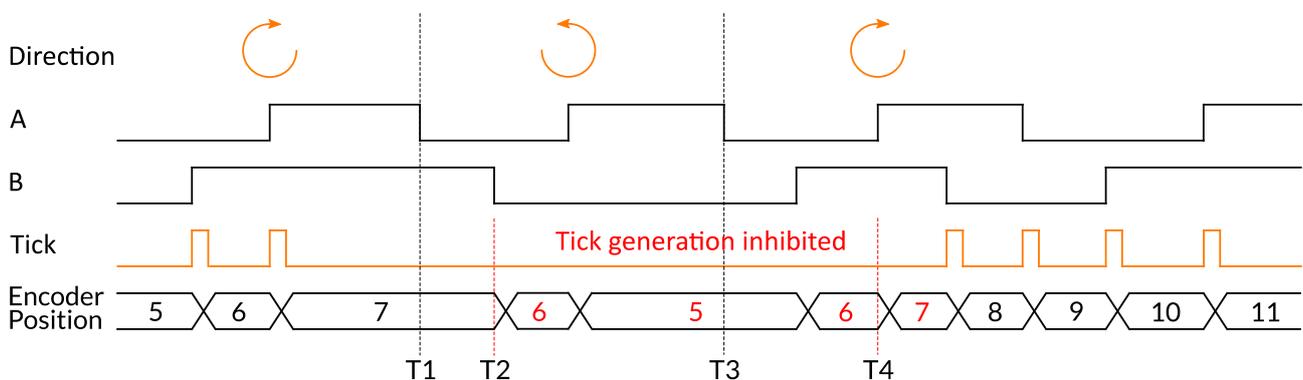


Figure 4.21: Ticks generated when ignore direction is disabled

4.4.1.3 Configuring the encoder module

The following code sets the input ports 1 and 2 as the phase (A) and quadrature (B) encoder inputs. The *encoder module* is programmed to generate a trigger only when rotating in the positive direction.

Example Code 4.3 | Encoder ports configuration

```
device.Encoder.InputA = 1;
device.Encoder.InputB = 2;
device.Encoder.IgnoreDirection = false;
```

4.4.1.4 Reading and resetting encoder position

The current encoder position can be read at any time as a 32-bit unsigned integer. The returned value is the last value of the *encoder module* position counter at the time of the request.

The *encoder module* position can be read and reset to 0 via software or with an external signal.

The following example shows how to reset encoder via software:

Example Code 4.4 | Encoder position read

```
uint position = device.Encoder.CurrentPosition; // Read counter current value
device.Encoder.Reset();                       // Reset value to 0
position = device.Encoder.CurrentPosition;     // Now position is 0
```

Note

When the encoder position is reset, the targets of all trigger modules are automatically reset too and restart counting from 0 (see Chapter 6).

The code 4.5 configures rising edge on port 2 as encoder reset source:

Example Code 4.5 | Encoder reset with external source

```
if (device.Encoder.ResetAvailable)
{
    EncoderResetSource[] resetSources = device.Encoder.GetAvailableResetSources();
    if (Array.Exists(resetSources, t => t == EncoderResetSource.External))
    {
        // Configure Input port 2 as Reset Input on the rising edge.
        device.Encoder.ResetExternalInput = 2;
        // Configure Reset as edge-sensitive.
        device.Encoder.DetectResetExternalInputEdge = true;
        // Reset will be performed on rising edge of input.
        device.Encoder.InvertResetExternalInput = false;
        // Enable external encoder reset.
        device.Encoder.ResetSource = EncoderResetSource.External;
    }
}
```

4.4.2 Frequency Multiplier (Phase Locked Loop (PLL))

When you want to capture events faster or slower than the related trigger signal frequency or longer /shorter than the encoder step interval, you can use the CELERA P camera internal *frequency multiplier*: signals coming from both I/O connector and *encoder module* can be processed to change the acquisition frequency. The multiplier detects the rising edges of the signal selected as a source and generates an output pulse train at the resulting frequency. The output frequency f_o is generated from the input frequency f_i according to the following formula:

$$f_o = f_i \cdot \frac{M}{D} \quad (4.2)$$

where M and D are the Multiplier and Divisor factor, respectively. The allowed frequency range for the input signal goes from 400 Hz to 4 MHz.



The maximum allowed input jitter, expressed as the maximum absolute variation of the input period, is:

$$\frac{1}{f_i \cdot M} \quad (4.3)$$

while the maximum absolute jitter of the trigger output is not greater than 21 ns.

Note



Jitter in frequency input signals or encoder rotational affects the output trigger, resulting in erratic acquisition cadence. Minimize input jitter in your application for optimum performance.

Note



To get a more stable triggering signal it is recommended to use a programmable encoder instead of PLL.

The following code selects the source for the *frequency multiplier* and the multiplying factor, enable `FrameStartTrigger` and set PLL as trigger source:

Example Code 4.6 | PLL configuration

```
device.PLL.Source = PLLSource.External;           // Select I/O port 0 as PLL
    source
device.PLL.ExternalInput = 0;
device.PLL.Multiplier = 10;                       // Set multiplier factor to 10 /
    3
device.PLL.Divisor = 3;
device.FrameStartTrigger.Source = TriggerSource.PLL; // Set PLL as trigger source
device.FrameStartTrigger.Enabled = true;         // Enable Frame Start Trigger
```

The maximum and minimum allowed values for M and D can be retrieved by reading the following properties:

Example Code 4.7 | PLL boundaries readout

```
uint maxM = device.PLL.MaxMultiplier;
uint minM = device.PLL.MinMultiplier;
uint maxD = device.PLL.MaxDivisor;
uint minD = device.PLL.MinDivisor;
```

4.4.3 Trigger manager

The signal incoming from an input port can be also simply routed to the *trigger manager*. Every signal can operate on all the events listed below:



- Acquisition-start;
- Frame-start;
- End-of-exposure.

For further information refer to Chapter 6.

4.5 CONTROLLING OUTPUT PORTS

CELERA P outputs can be directly controlled by software or reflect the state of internally generated signals; the latter allows to synchronize lighting systems and/or external capture devices with CELERA P acquisition.

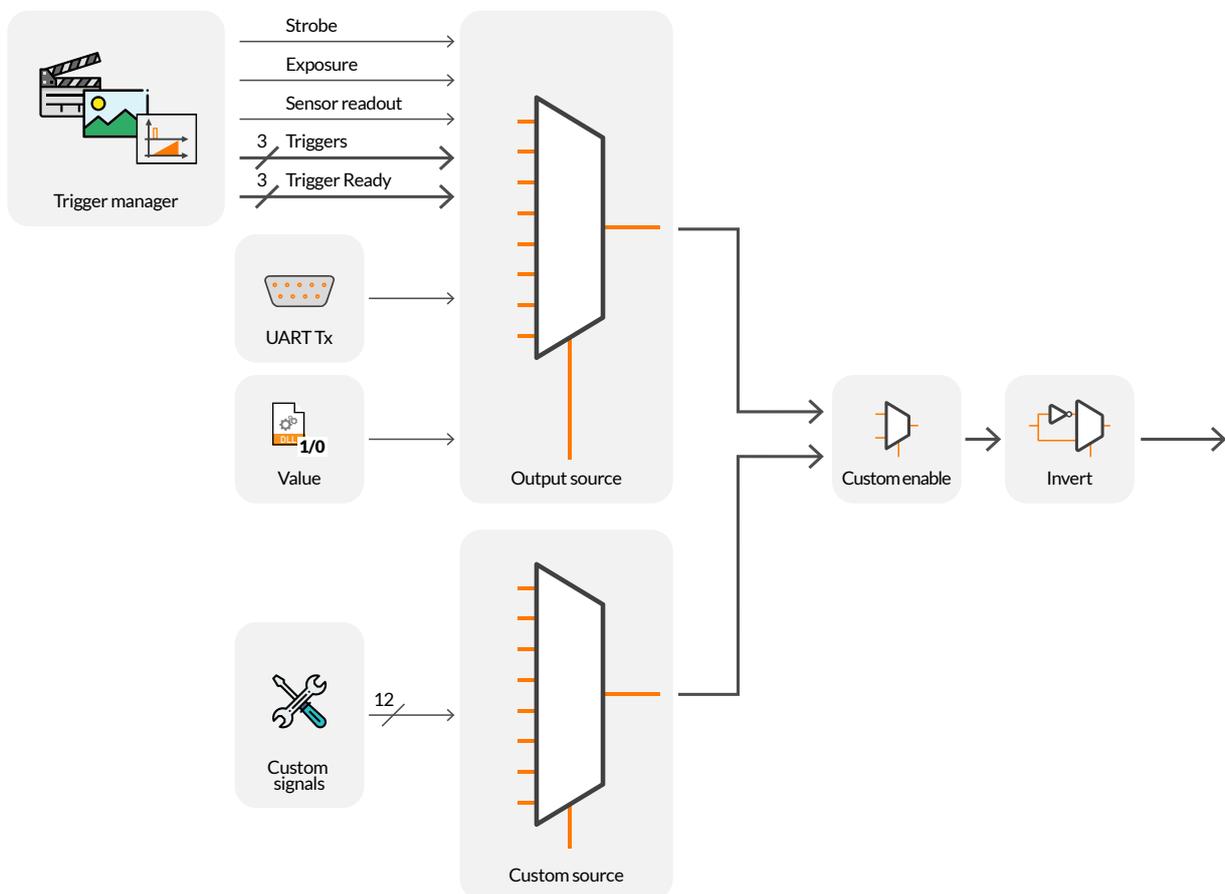


Figure 4.22: Output port internal routing

4.5.1 Polarity

The polarity of each output port can be reversed through the Invert property. This property works regardless of the output source. The following example reverses the polarity for output port 3:

Example Code 4.8 | Output inversion

```
device.PIOPorts[3].Invert = true;
```

Note

The Invert property affects output signals only. It has no effect on input signal decoding.

4.5.2 Open collector

The high voltage output mode can be directly set by your application. The following code sets port 4 as open-collector:

Example Code 4.9 | Drive 24 V input signals

```
if (device.PIOPorts[4].OpenCollectorModeAvailable)
    device.PIOPorts[4].OpenCollectorMode = true;
```

4.5.3 Software output

The logic level of any output port can be directly set by your application. The following code sets port 3 as a software-controlled output and sets the output level as logic '1':

Example Code 4.10 | Output controlled via software

```
device.PIOPorts[3].Invert = false;           // Logic '1' == electric High
device.PIOPorts[3].Value = true;           // Set port 3 output high
device.PIOPorts[3].Source = OutputSource.Manual; // Port 3 output now manually driven
```

Note

The electrical level generated at the output port is related to the state of the Invert and the OpenCollectorMode properties (see Sections 4.5.1 and 4.5.2).

4.5.4 Trigger Output

Output signals generated by the *trigger manager* module can be connected to output ports. This allows synchronizing ancillary devices to the camera acquisition phases: for example, a lighting device can be synchronized to the camera exposure using the *Strobe* signal output. Next sections illustrate how these signals can be routed to output ports and how to configure them.



4.5.4.1 Exposure

The *exposure* signal is active during the exposure phase of each line capture (the time the shutter is open). The following code sets the *exposure* signal as the source for output port 3.

Example Code 4.11 | Exposure as P3 source

```
device.PIOPorts[3].Source = OutputSource.Exposure;
```

The *exposure* signal can be used to synchronize multiple CELERA P devices, so that the acquisition in progress signal of the master camera can be routed as a capture trigger for slave cameras. This method is simple and effective, but it is still affected by an intrinsic delay due to I/O switching time, debouncing filters etc; if your application requires precise synchronization of multiple cameras, or when external non-camera devices (e.g. lighting systems) must be perfectly synchronized to the acquisition, consider using the *strobe* signal instead and the related delay mechanism, as described in 4.5.4.2.

4.5.4.2 Strobe

The *strobe* pulse can be generated by setting two programmable delays from the trigger event, for rising and falling delays. These two delays can be properly set with 1 μ s resolution, according to your needs.

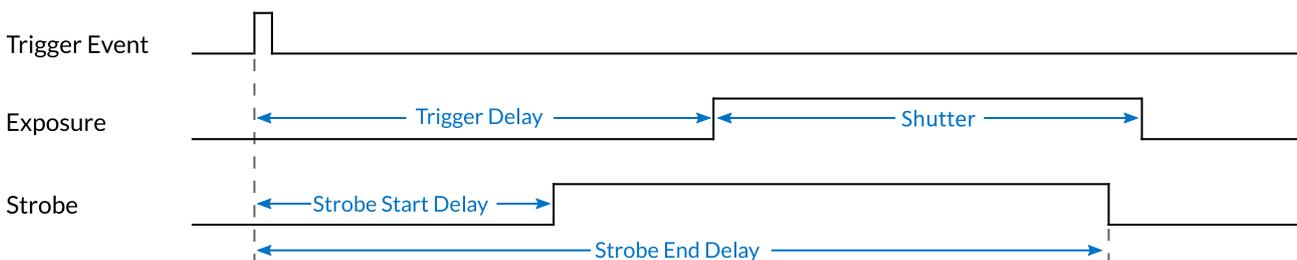


Figure 4.23: Strobe pulse

The following code configures the *strobe* signal and routes it to output port 3:

Example Code 4.12 | Strobe as P3 source

```
UnitInfo unit = device.Strobe.DelayUnitInfo;           // Retrieve Delay unit info
double startDelay = 1e-6;                             // Set strobe start delay to 1 us
double endDelay = 10e-6;                              // Set strobe end delay to 10 us
device.Strobe.StartDelay = (uint)(startDelay / unit.Factor);
device.Strobe.EndDelay = (uint)(endDelay / unit.Factor);

device.PIOPorts[3].Source = OutputSource.Strobe;
```

Note

The *strobe* signal is not a generalization of the *exposure* signal described in 4.5.4.1, but actually a different signal with its own use: both signals originate from the *frame start* event trigger, although they can have different delays with respect to it. E.g., starting from a trigger event (e.g. crossing of an encoder target position), CELERA P can start an exposure with a given delay (using the *trigger manager*) and generate the *strobe* signal with a shorter delay to pre-trigger the lighting system.

4.5.4.3 Trigger

Trigger signals generated from input ports and/or internal processing modules (encoder and frequency multiplier) can be routed to output ports. Each trigger signal rises on the corresponding event trigger signal (acquisition, frame, end-of-exposure – see Chapter 6) and remains active for about 5 μ s. Like the *exposure* signal, trigger outputs allow synchronizing external devices to the camera trigger events.

Example Code 4.13 | Frame start trigger as P3 source

```
device.PIOPorts[3].Source = OutputSource.FrameStartTrigger;
```

4.5.4.4 Trigger ready

The *trigger manager* module also generates a ready signal for each trigger module (acquisition, frame, end-of-exposure – see Chapter 6), indicating that the corresponding trigger module is ready to accept a trigger signal. *Trigger ready* signals are normally high (active); they fall on the corresponding trigger event and rise again when a new trigger can be accepted. When a *trigger ready* signal is low, all the related trigger events are ignored.

Example Code 4.14 | Frame start trigger ready as P3 source

```
device.PIOPorts[3].Source = OutputSource.FrameStartTriggerReady;
```

4.5.5 Custom sources

Additional application-specific output sources can be available on some CELERA P models with customized firmware.

Example Code 4.15 | Custom signal 10 as P0 source

```
device.PIOPorts[0].CustomOutputSource = 10;
device.PIOPorts[0].CustomOutputSourceEnabled = true;
```



4.5.6 Input and output ports usage examples

The following code configures CELERA P port 0 (bidirectional) as an input, sets 10 μ s as debounce time and enables the internal differential termination:

Example Code 4.16 | P0 configuration as input

```
device.PIOPorts[0].Direction = IODirection.Input; // Configure port 0 direction
device.PIOPorts[0].DebounceTime = 10;           // Set debounce time to 10us
device.PIOPorts[0].Termination = true;          // Enable termination
bool status = device.PIOPorts[0].Value;         // Read port 0 value
bool rising = device.PIOPorts[0].RisingEvent;   // Read port 0 rising event
```

The following code configures port 0 (bidirectional) as an output and sets level as high:

Example Code 4.17 | P0 configuration as output

```
device.PIOPorts[0].Direction = IODirection.Output; // Configure port 0 direction
device.PIOPorts[0].Value = true;                   // Set output high
```

4.6 SERIAL INTERFACE MODULE

CELERA P cameras are equipped with a *serial interface module* to communicate with external devices. This module is able to send and receive data through dedicated FIFO buffers. Incoming data are stored in an input FIFO and can be retrieved via simple read commands issued to the camera. Output data sent through write commands are temporarily stored in an output buffer and then sent through the serial interface.

Each FIFO is 64-byte deep. If the receiving FIFO gets full before the received data are retrieved by your application, an error bit is set. This condition can be checked via the Overrun property.

The Application Programming Interface (API) provides methods to check the input buffer level and size, to set the requested baud rates and assign I/O pins to serial Tx and Rx. Hardware handshake is not supported.

Note



If your application needs serial input or serial output only, you can enable just the required pin (Tx or Rx), avoiding wasting an I/O pin for the unneeded function (see below).

Example Code 4.18 | Serial interface output configuration

```

device.PIOPorts[0].Source = OutputSource.UARTTx; // Uart Tx on Port 0
device.PIOPorts[0].Direction = IODirection.Output; // Port 0 output direction
device.UART.BaudRate = 38400; // 38400 bps
byte[] b = new byte[16]; // Data to send
device.UART.Send(b); // Send byte to Tx pin

```

In case you want to send a message whose size in bytes is greater than the output FIFO size, you should mind that the Send method is blocking, i.e. it waits until the last byte of the message has found its place in the output FIFO. To be sure that the Send method will not pause your application flow, you should always send a number of bytes lower than `device.UART.TxFIFOSize` and wait until the output FIFO is empty before calling the Send method.

Example Code 4.19 | Big buffer send over serial interface

```

int bytesToSend = bigBuffer.Length; // Remaining bytes to send
int srcIndex = 0; // Index to the next byte to send
uint txFifoSize = device.UART.TxFIFOSize; // This is the size of output FIFO
while (bytesToSend > 0) // While we have bytes to send
{
    // Allocate a temp buffer.
    byte[] buffer = new byte[Math.Min(bytesToSend, txFifoSize)];
    // Copy the data to send from the big buffer.
    Array.Copy(bigBuffer, srcIndex, buffer, 0, buffer.Length);
    // Wait for the output fifo to be empty.
    while (!device.UART.TxFIFOEmpty)
        Thread.Sleep(500); // Leave CPU time to other user threads
    // Send the buffer
    device.UART.Send(buffer);
    // Update indexes and counters
    srcIndex += buffer.Length;
    bytesToSend -= buffer.Length;
}

```

Example Code 4.20 | Serial interface input configuration

```

device.UART.Reset(); // Input FIFO Reset
device.UART.InputPort = 1; // Uart RX on Port 1

uint rxFIFOLevel = device.UART.RxFIFOLevel; // How many bytes have been received
if (rxFIFOLevel > 0)
{
    // Check if there has been an overrun error
    if (device.UART.Overrun)
        Debug.WriteLine("Input FIFO overrun detected");
    // Extract the received bytes
    byte[] data = device.UART.Read(rxFIFOLevel);
}

```



5

System Setup

5.1 USB SETUP

CELERA P is controlled and powered through the USB connector. When the camera is connected to the PC through one USB 3.2 Gen 1x1 hub, you must be sure that the hub directly connected to the camera uses a suitable power supply: using poor quality power supplies may degrade the performance of the camera or damage it.

For maximum performance, the controlling computer must be equipped with appropriate USB 3.2 Gen 1x1 interface (see section 5.1.2).

CELERA P data throughput can reach 3.2 Gbps; it is therefore recommended to reserve a USB 3.2 Gen 1x1 host controller for the camera.

CELERA P data throughput can reach 6.4 Gbps on two USB3 connectors; it is therefore recommended to reserve a USB 3.2 Gen 1x1 host controller for each camera connector.

If any other device must coexist with CELERA P , it must not transfer data while camera is operating. CELERA P can also operate with USB interfaces prior to USB 3.2 Gen 1x1 . Depending on the setup, some functionality may not be available or suffer significant performance degradation.

Keep USB cable far from potential EMC interference sources (e.g. power cords and cables carrying strong impulsive currents) during installation.

Refer to Section 3.6.7 for further information.

5.1.1 How to choose a suitable USB cable

Cables must match the USB 3.2 Gen 1x1 standard in order to properly work with CELERA P camera. Refer to “Universal Serial Bus 3.2 Specification” available at www.usb.org.

One of the USB greatest advantages is that it provides a 5 V power supply. Connected USB devices are



usually powered through the USB cable, eliminating the need for an external power supply. Since USB is also designed for quick and easy connections/disconnections, standard connectors do not keep cables firmly enough to withstand the heavy vibration encountered in industrial applications.

With time, standard connectors can work themselves loose and cause malfunctioning. Loose USB cables can lead to data loss, software hang-ups and blue screens. In the wrong environment they can even lead to fire or explosion. To avoid these problems, the CELERA P USB 3.2 Gen 1x1 connector can accommodate cables with screw-lock connectors. Using these cables is highly recommended especially when movements and vibrations may affect the stability of the connection between the camera and the PC.

If the cable is subjected to repeated stress, it is also recommended to adopt flexible chain-specific cables. The maximum recommended length for the USB cable is 3 m. Longer distance (up to 8 m) can be covered by selected high-quality cables or using USB 3.2 Gen 1x1 hubs or active extension cords, commercially available.

It is important to evaluate the electrical resistance of the cable power section. The power and ground wires shall comply with the aforementioned electrical requirements. Thin cables usually cause large voltage drop, limiting the required power being provided to the device. Furthermore, a good shielded cable will improve EMI/RFI performance.

5.1.2 Recommended USB interface

To get maximum performances out of Alkeria cameras, it is essential to choose the right USB3 host controller, focusing on its maximum throughput, since the controller is responsible for the actual available bandwidth.

Not all the USB3 host controllers are capable to manage maximum data transfer rate. While choosing your USB3 host controller, please pay attention to brand, model and number of controllers available on it. For example, a 2 ports USB3 host board with single 5 Gb/s controller will NOT be suitable for running two cameras at once at maximum speed; a 4 ports USB3 host board with dual 10 Gb/s controller will be capable of running up to 4 single-USB3 cameras at maximum speed.

Recommended adapters should feature one of the following host controllers:

- Texas Instrument TUSB7340/TUSB7320, isochronous mode only (5 Gbit/s max);
- Fresco Logic FL1100EX (5 Gbit/s max);
- Integrated Intel USB 3.2 Gen 1x1 Host (10 Gbit/s max on some models).
- Asmedia - ASM3142 (10 Gbit/s max).

Only Texas Instruments controllers currently achieve maximum throughput for isochronous endpoint (48 KiB per micro-frame, see Figure 2.4) and thus maximum frame rate. Fresco Logic FL100EX and Intel integrated controllers achieve maximum throughput of 375 MB/s for Bulk endpoints. Other controllers usually achieve 42 KiB to 45 KiB per micro-frame only, involving a 10 % loss in maximum speed.



Note


Trying to reach a bandwidth higher than the maximum supported by the controller usually makes the camera stop communicating correctly and may freeze the controller. When this happens, unplug and re-plug the camera to re-establish a correct communication.

Furthermore, we recommend to disable any technology that may slow down the CPU frequency and responsiveness (SpeedStep and all Power Management States/C-States). These settings can be usually accessed through the BIOS/UEFI configuration utility.


When CELERA P is running at maximum frame rate, its throughput saturates the bandwidth of both USB 3.2 Gen 1x1 connections (2 x 3.2 Gbit/s). It is recommended using two independent USB 3.2 Gen 1x1 hosts (not required for CELERA One P).

Low-cost USB 3.2 Gen 1x1 to PCI Express multiport adapters, as well as USB 3.2 Gen 1x1 ports built-in in some PCs, use a single controller and/or internal USB 3.2 Gen 1x1 hubs. Devices connected to adjacent ports therefore often share the same USB 3.2 Gen 1x1 controller and may interfere with proper CELERA P operation.

For a correct setup, using two independent controllers is recommended as shown in Figure 5.1a. If your system does not have enough PCI express slots available, you can opt for a card with multiple hosts. If the PC motherboard is equipped with a compatible integrated USB 3.2 Gen 1x1 host controller, it can be used in combination with a PCI Express USB 3.2 Gen 1x1 host adapter as reported in Figure 5.1b. For any doubt about the choice of the host controller or PC settings, please contact Alkeria SRL technical support at support@alkeria.com.

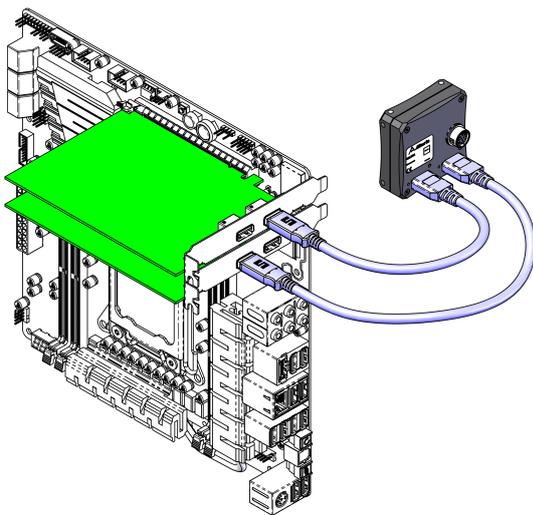

(a) Two USB3 Host card setup

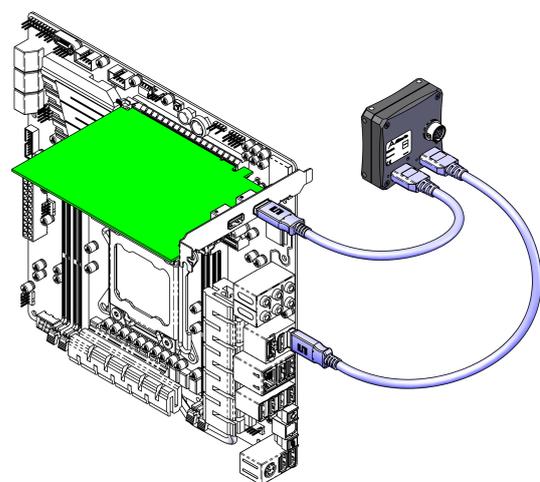

(b) USB3 Host card and integrated USB3 Host

Figure 5.1: CELERA P camera dual port setup

5.2 STATUS LED

CELERA P features a status LED on its back, showing the operating conditions of the camera. When a USB connector is plugged in, LED remains red until the computer detects and configures the camera. At that point the LED turns green. When the camera starts acquiring, LED turns orange.

Table 5.2 details the meaning of the status LED indications.

Status LED	Status
OFF	Device not powered
RED	Camera powered, waiting for driver enumeration
GREEN	USB plugged and enumerated
ORANGE	Camera acquiring
BLINKING	Generic error (contact support@alkeria.com)
Other	Generic error (contact support@alkeria.com)

Table 5.1: Status LED behaviour

Different behaviours of the status LED may indicate that the camera is malfunctioning.

CELERA P features two status LEDs on its back, showing the operating conditions of the camera. When one or both camera connectors are plugged in, LEDs remain red until the computer detects and configures the camera, then they both turn to green. If just the main connector is plugged, the secondary LED remains off after OS enumeration. The second connector can be connected at any time. LEDs turn to orange when the camera is acquiring from the related connectors.

The following table shows the meaning of the status LEDs indications. For CELERA One P please refer to primary LED only.

Primary LED	Secondary LED	Status
OFF	OFF	Device not powered
RED	RED	Camera powered, waiting for driver enumeration
GREEN	OFF	Primary USB plugged and enumerated
GREEN	GREEN	Both USB plugged and enumerated
ORANGE	OFF	Camera acquiring from primary USB
ORANGE	ORANGE	Camera acquiring from both USB
BLINKING	-	Generic error (contact support@alkeria.com)
-	BLINKING	Generic error (contact support@alkeria.com)

Table 5.2: Status LED behaviour

Different behaviours of the status LEDs may indicate that the camera is malfunctioning.



5.3 WHEN ONE CELERA P IS NOT ENOUGH...

You can even connect multiple CELERA P cameras at the same PC and use them simultaneously: API makes it possible to balance each video data stream.

When designing the application, you can choose how the connected CELERA P cameras will share the available USB 3.2 Gen 1x1 bandwidth, freely modulating acquisition rate, pixel format and Region-Of-Interest (ROI) of each CELERA P based on the specific application needs. Refer to Section 8.5.6 for further details.



6

Trigger

CELERA P supports asynchronous triggering, which allows capturing a specified number of images, controlling exposure start and duration through configurable events called “triggers”.

The modules generating trigger events are examined below. They are:

- Acquisition-start trigger;
- Frame-start trigger;
- End-of-exposure trigger.

6.1 TRIGGER SOURCES

Each trigger is supported by a special module, which can be enabled and processes one or more of the trigger sources available within the camera. Trigger sources available for CELERA P are listed in Table 6.1.

External	Trigger is generated on the detection of an input event. The trigger module can be activated either by the rising edge or by the high level; the input logic can also be reversed in order to detect the falling edge or the low level.
Software	Trigger is generated through the SoftwareTrigger software method.
PLL	Trigger is generated by the tick of the frequency multiplier module (see Section 4.4.2).
Encoder	Trigger is generated whenever the encoder position counter increases by a programmable number of steps (set through the EncoderInterval property).
EncoderOnce	Trigger is generated only the first time the encoder position counter reaches the value of EncoderInterval property.

Table 6.1: Trigger sources



The `GetAvailableSources` method, when applied to a trigger module, returns the trigger sources that can be selected for that module.

Example Code 6.1 | Get all selectable trigger sources

```
TriggerSource[] sources = trigger.GetAvailableSources();
if (Array.Exists(sources, t => t == TriggerSource.Encoder))
    trigger.Source = TriggerSource.Encoder;
```

6.2 ACQUISITION START TRIGGER

The *acquisition-start* trigger (`AcquisitionStartTrigger`) event enables the acquisition of a given number of frames, called a *burst*. When the module is enabled¹, the camera waits for a start acquisition trigger before starting capturing a burst.

The number of frames in a burst is set by the `AcquisitionBurstLength` property; when the burst is complete, the camera waits for a new start acquisition trigger, that will trigger the acquisition of the next burst.

The sources available for this module are `External`, `Software`, `Encoder` and `EncoderOnce`. When this module is disabled², the acquisition is always active.

6.3 FRAME START TRIGGER

The *frame-start* trigger (`FrameStartTrigger`) event enables the acquisition of a frame. When the module is enabled³, the camera waits for a frame start trigger before starting an exposure.

When the exposure is complete and the required ROI has been acquired, the camera waits for a new *frame-start* trigger, that will trigger the acquisition of the next frame.

The sources available for this module are `External`, `Software`, `PLL` and `Encoder`. When the module is disabled⁴, the frame start triggers are internally generated based on the value of `FrameRate` property.

6.4 END-OF-EXPOSURE TRIGGER

The *end-of-exposure* trigger (`ExposureEndTrigger`) event terminates the exposure of a frame. The only available trigger source for this module is `External`. When the module is disabled⁵, the duration of the exposure is controlled by the Shutter control value (see Section 8.6.1).

¹`AcquisitionStartTrigger.Enabled = true`

²`AcquisitionStartTrigger.Enabled = false`

³`FrameStartTrigger.Enabled = true`

⁴`FrameStartTrigger.Enabled = false`

⁵`ExposureEndTrigger.Enabled = false`



6.5 TRIGGER DELAY

Each module can delay the signaling of the trigger event for a period of time, set through the module's `TriggerDelay` property.

When an external signal is used as a trigger source, the delay set through `TriggerDelay` combines with the delay due to the debounce time set on the related input port (see Section 4.3.1.1).



Note

When encoder is not used, it is mandatory to set `EncoderDelay` to 0. If not, no trigger event will be raised.

For *frame-start* trigger, user can also set `TriggerDelay` when in free run. If controlling an external lighting system with Strobe, `TriggerDelay` can be used to compensate delay introduced by controlling-chain and time for the light to reach steady-state. Following the example of Figure 4.23 a representation of the statement above is depicted in Figure 6.1.

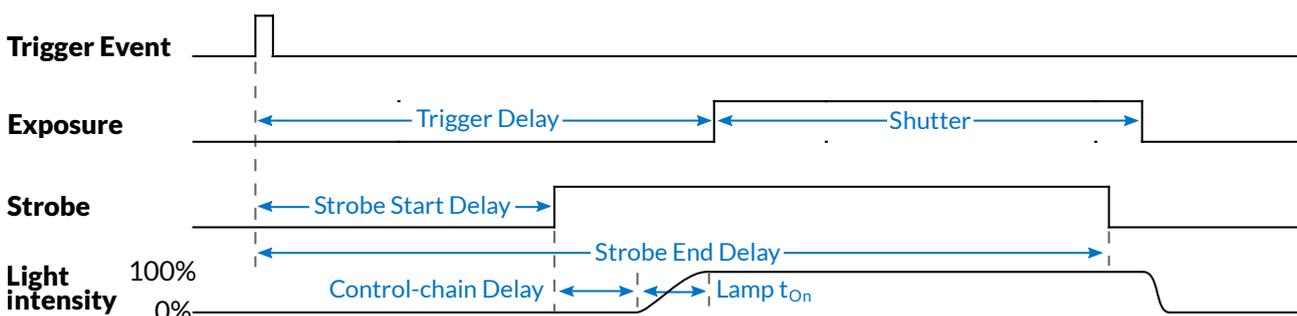


Figure 6.1: Trigger delay with external light

6.5.1 Encoder delay

Acquisition-start trigger and *frame-start* trigger can also delay the signaling of the trigger event for a certain amount of encoder steps. This can be set through the module's `EncoderDelay` property.

The granularity of `EncoderDelay` is 1 encoder step.

When using `EncoderDelay`, `TriggerDelay` should be set to 0. If not, the trigger event will be delayed by an additional `TriggerDelay` time after encoder required displacement.

6.5.2 Trigger overrun

Each trigger module generates its own ready signal indicating that it is able to receive a new trigger:

- `AcquisitionStartTriggerReady`
- `FrameStartTriggerReady`
- `ExposureEndTriggerReady`



These signals are named after the generating trigger module and can be sent to the output ports. You can also identify when the exposure is in progress by checking the exposure signal status.

A trigger module accepts an input signal only when its trigger-ready signal is active; trigger signals are otherwise ignored and increment an overrun counter. The number of trigger events that have not been accepted can be retrieved using the `TriggerErrors` (read-only) property related to that trigger module.

Example Code 6.2 | Usage of the `TriggerErrors` property

```
if (device.FrameStartTrigger.TriggerErrors > 0)
    Debug.WriteLine("Invalid triggers detected.");
```

Figure 6.2 shows a possible timing of *exposure* and *frame-start* trigger-related signals.

The exposure begins after the specified trigger delay and a new trigger signal can be accepted only when `FrameStartTriggerReady` is asserted. After receiving a valid trigger, the *trigger-ready* signal goes low, indicating that the requested exposure is being processed.

The second trigger in the picture is ignored as the `FrameStartTriggerReady` signal is still low; the error condition is detected and increments the trigger overrun counter.

The third trigger signal is properly received and accepted as the previous exposure is already complete.

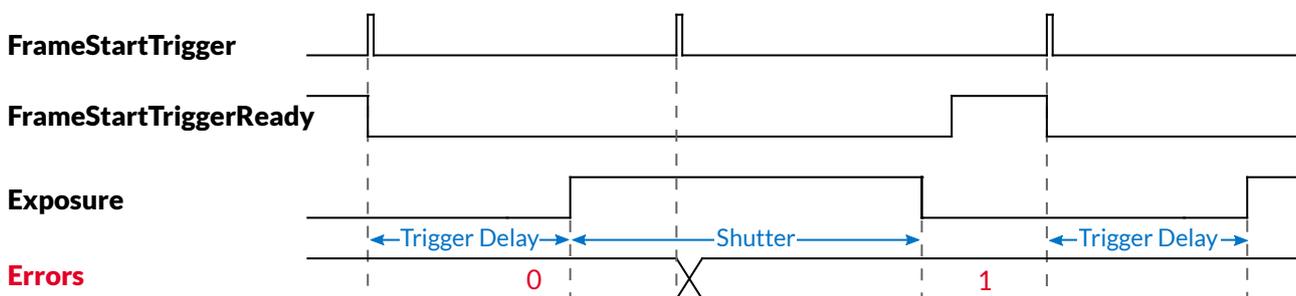


Figure 6.2: Exposure timings

6.6 TRIGGER CONFIGURATION EXAMPLE

6.6.1 External trigger frame acquisition

The following example assumes that you want to acquire a frame every time a rising edge on input port 1 is detected. Frame start trigger ready signal is routed to output port 3.

As shown in Figure 6.3, the frame-start-trigger-ready signal has to go high before the rising edge of the signal on port 1. If this constraint is not respected, the trigger will not be accepted.



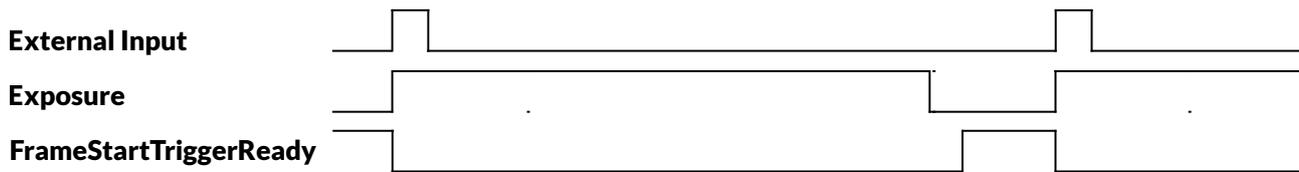


Figure 6.3: External trigger frame acquisition timings

Example Code 6.3 | External trigger frame acquisition

```
device.Shutter = 1000; // Set shutter time to 1 ms
device.FrameStartTrigger.Source=TriggerSource.External; // Select the external trigger
source
device.FrameStartTrigger.ExternalInput = 1; //Select input port 1
device.PIOPorts[1].DebounceTime = 1; // Set debounce time to 1 us
device.FrameStartTrigger.DetectExternalInputEdge = true; // Detect an edge of the
trigger source
device.FrameStartTrigger.InvertExternalInput = false; // Choose the rising edge of the
trigger source
device.FrameStartTrigger.Enabled = true; //Enable frame trigger
device.PIOPorts[3].Source = OutputSource.FrameStartTriggerReady; // Select output port 3
for the trigger ready signal
```

6.6.2 Signal-driven exposure time

The following example assumes that you want to acquire a frame every time a rising edge on input port 1 is detected. The exposure will end when a falling edge is detected on the same port. Frame start trigger ready signal is routed to output port 3, while ExposureEndTriggerReady signal is routed to output port 4.

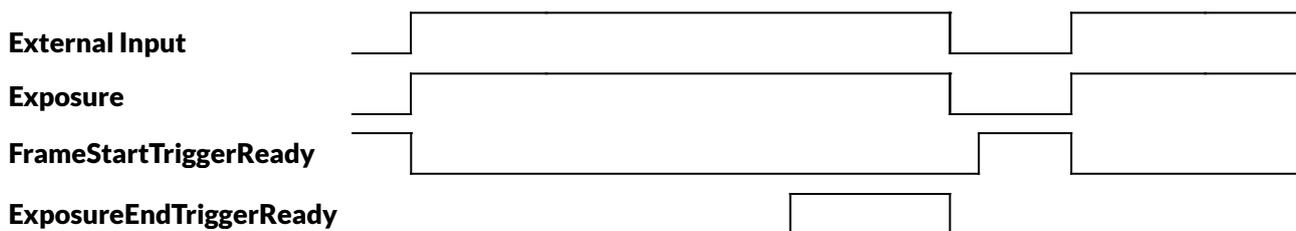


Figure 6.4: Signal-driven exposure timings

As shown in Figure 6.4, the FrameStartTriggerReady signal has to go high before the rising edge of the signal on port 1. Similarly, the ExposureEndTriggerReady signal has to go high before the falling edge of the signal on port 1. If these constraints are not respected, the triggers will not be accepted.

Example Code 6.4 | Signal-driven exposure time

```
device.PIOPorts[1].DebounceTime = 1; // Set debounce time to 1 us
device.FrameStartTrigger.Source = TriggerSource.External;
device.FrameStartTrigger.ExternalInput = 1; // Select input port 1
device.FrameStartTrigger.DetectExternalInputEdge = true;
device.FrameStartTrigger.InvertExternalInput = false; // Rising edge
device.FrameStartTrigger.Enabled = true; // Enable frame trigger
```



```

device.PIOPorts[3].Source = OutputSource.FrameStartTriggerReady; // Trigger ready
device.ExposureEndTrigger.Source = TriggerSource.External;
device.ExposureEndTrigger.ExternalInput = 1; // Select input port 1
device.ExposureEndTrigger.DetectExternalInputEdge = true;
device.ExposureEndTrigger.InvertExternalInput = true; // Falling edge
device.ExposureEndTrigger.Enabled = true; // Enable frame trigger
device.PIOPorts[4].Source = OutputSource.ExposureEndTriggerReady; // Trigger ready

```

6.6.3 Encoder synchronization

In the following example the camera acquires images of some items carried by a conveyor. The camera receives an incoming trigger signal on port 0, whose falling edge enables the acquisition of 4 frames. Each frame is acquired every 1000 steps of an encoder, whose signals are connected to ports 1 and 2.

Example Code 6.5 | Encoder synchronization

```

// Setup acquisition trigger:
// Set debounce time to 100 us
UnitInfo units = device.PIOPorts[0].DebounceTimeUnitInfo;
device.PIOPorts[0].DebounceTime = (ushort)(100e-6 / units.Factor);
// Set port 0 direction
device.PIOPorts[0].Direction = IODirection.Input;
// Enable acquisition start trigger
device.AcquisitionStartTrigger.Enabled = true;
// Set trigger source
device.AcquisitionStartTrigger.Source = TriggerSource.External;
device.AcquisitionStartTrigger.ExternalInput = 0;
// Detect falling edge
device.AcquisitionStartTrigger.InvertExternalInput = true;
device.AcquisitionStartTrigger.DetectExternalInputEdge = true;
// Set the number of frames to be acquired
device.AcquisitionBurstLength = 4;

// Setup frame trigger:
// Port 1 and 2 are input only, therefore there is no need to set port directions.
// Set debounce time to 1 us
device.PIOPorts[1].DebounceTime = (ushort)(1e-6 / units.Factor);
device.PIOPorts[2].DebounceTime = (ushort)(1e-6 / units.Factor);
// Set the encoder quadrature inputs
device.Encoder.InputA = 1;
device.Encoder.InputB = 2;
// Detect only forward movements
device.Encoder.IgnoreDirection = false;
// Enable frame trigger
device.FrameStartTrigger.Enabled = true;
// Set trigger source
device.FrameStartTrigger.Source = TriggerSource.Encoder;
// Acquire a frame every 1000 steps
device.FrameStartTrigger.EncoderInterval = 1000;

// Start acquisition
device.Acquire = true;

```



7

The processing Chain

The image processing is performed on-camera, both by the sensor and the embedded FPGA, saving computational power on your PC and making it available for the application. Refer to Section 8.6 for more information about camera controls such as white balance, digital gain, etc.

Figure 7.1 shows the FPGA image processing chain, referred to a monochrome polarized camera.

7.1 LIGHT METER

CELERA P evaluates the compensation parameters (white balance, luma) over an image area called *LMR* (*light meter ROI*). It is contained into the current ROI (and usually coincides with it), but it can be limited to a part of the ROI only to meet particular requirements (for example, to exclude a saturated region of the image).

The data analyzed by the *light meter* are sampled before any transformation by image processing controls such as *digital gain*, *white balance*, *brightness*, *contrast* and user Look-Up Table (LUT).

Specifying the Light Meter ROI (LMR) requires setting its position and size through the `startX`, `startY`, `sizeX` and `sizeY` parameters¹.

Example Code 7.1 | Set LMR starting from `x = 256`, `y = 384`, and `512 x 800` pixels wide

```
device.SetLightMeterROI(256, 384, 512, 800);
```

¹Light meter ROI position coordinates are set with respect to the upper left point of the current ROI.

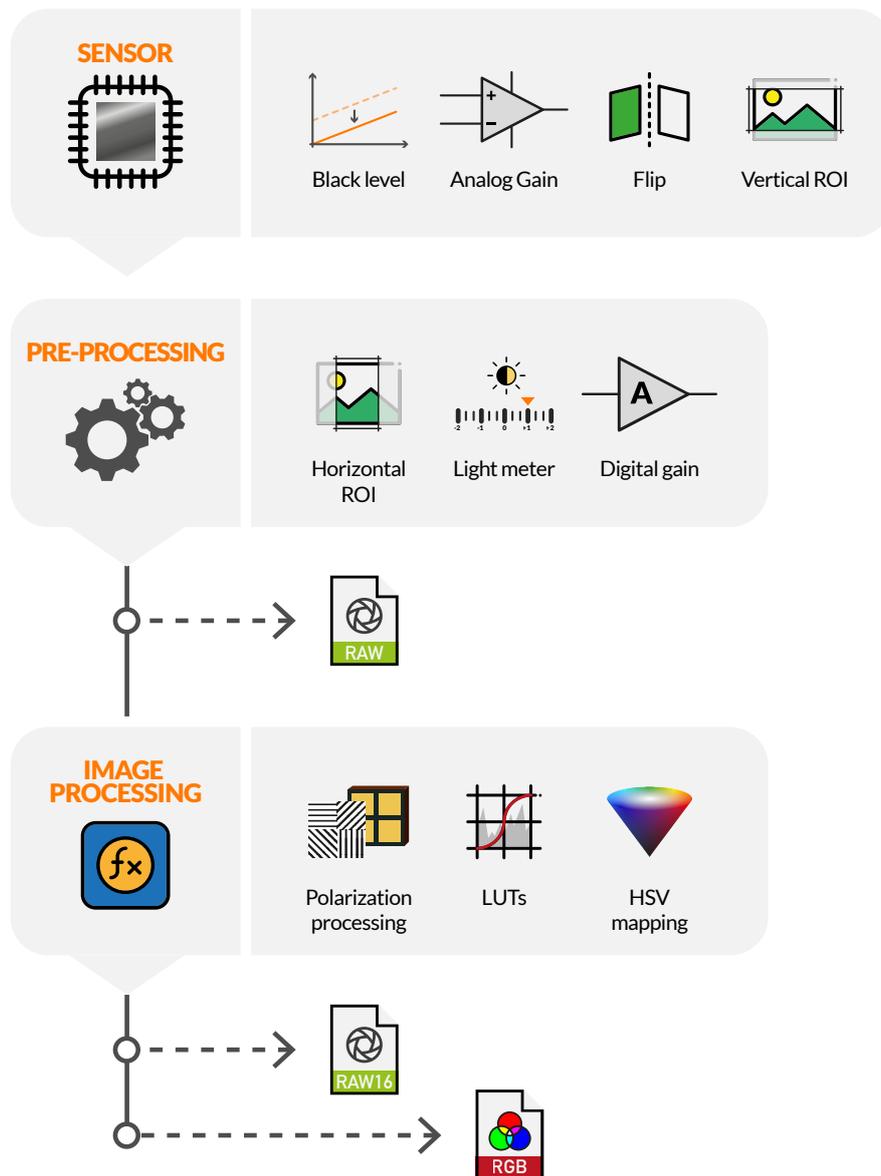


Figure 7.1: Monochrome polarized camera processing chain diagram

7.2 CHUNK DATA

CELERA P cameras can optionally transmit a set of additional information along with the acquired image, that can be used for debugging purposes and data analysis: a frame is identified by its serial number and time stamp; it can also be associated to the encoder position and the input status captured during its exposure.

Data are user-selectable by software methods. The bandwidth required is very small; however, it might reduce the maximum frame rate, slightly affecting the performance in some high-demanding applications.

7.2.1 Frame number

The `FrameNumber` field is a progressive 16-bit unsigned integer. If the acquisition-start trigger is active (see Section 6.1), the counter is reset at the acquisition startup and counts from 0 to `AcquisitionBurstLength - 1`, then starts over; otherwise, the counter cycles from 0 to 65535, then starts over.

Example Code 7.2 | Enable frame number chunk data field

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameNumber);
```

7.2.2 Time stamp

The `TimeStamp` is a 16-bit unsigned integer generated from a 1 ms timer and cleared when acquisition is started. The `TimeStamp` value is the value of the timer counter, as captured at the frame-start trigger event.

Example Code 7.3 | Enable time stamp chunk data field

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameTimeStamp);
```

7.2.2.1 Time stamp resolution

The timer resolution that advances the time stamp counter can be changed using the `TimeStampExponent` property. This property represents the unit of time expressed in power of 10, i. e. a value of -3 means $10^{-3} = 1$ ms.

A list of all possible values for the `TimeStampExponent` property can be retrieved using the `GetAvailableTimeStampExponents` method.

7.2.3 Encoder position

The `EncoderPosition` is a 32-bit unsigned value indicating the position of the encoder as captured at the frame-start trigger event.

Example Code 7.4 | Enable encoder position chunk data

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameEncoderPosition32);
```

7.2.4 Input status

The `InputStatus` is a bitfield indicating the status of the PIO ports, captured at the frame-start trigger event.



Example Code 7.5 | Enable input status chunk data captured at frame-start trigger event

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameInputStatus);
```

7.2.5 Burst number

The BurstNumber field is a 16-bit progressive unsigned number. If the Acquisition-start trigger is active (see Section 6.1), the counter is incremented at each acquisition-start trigger.

Example Code 7.6 | Enable burst number chunk data field

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameBurstNumber);
```

7.2.6 Sequencer page

The SequencerPage field indicates the active sequencer page number (see Section 6.3), as captured at the frame-start trigger event.

Example Code 7.7 | Enable sequencer page chunk data field

```
device.EnableChunkData = true;
device.EnableChunkDataField(ChunkDataField.FrameSequencerPage);
```

7.2.7 Configuration example**Example Code 7.8** | Configure chunk data, capture a frame and display the relevant data

```
device.EnableChunkData = true; // Enable chunk data transmission
device.SetEnabledChunkDataFields(new ChunkDataField[] {
    ChunkDataField.FrameNumber,
    ChunkDataField.FrameTimeStamp,
    ChunkDataField.FrameEncoderPosition32,
    ChunkDataField.FrameInputStatus
});
device.Acquire = true; // Start acquisition
// Wait for a frame and extract chunk data
Pair<Bitmap, ChunkData> pair = device.GetImageChunk(true);
ChunkData data = pair.Second;
Debug.WriteLine("Frame number: " + data.FrameNumber);
Debug.WriteLine("Timestamp: " + data.TimeStamp);
Debug.WriteLine("Encoder position: " + data.EncoderPosition);
```

7.3 FRAME COMBINER

CELERA P features a *frame combiner* module stitching a programmable number of frames together into a larger one. The frames are stitched together vertically in their chronological order.



7.3.1 Flush and AutoFlush

When the *frame combiner* module is active, the output picture becomes available only when all the related input frames has been triggered and acquired.

When the acquisition is stopped before a whole set of frames has been acquired, you can still use the flush operation to retrieve a “partial” frame, where the missing tiles are replaced by black images.

A *flush* operation can be invoked manually or automatically (auto-flush) when a programmable timeout expires.

7.3.2 Configuration example

Example Code 7.9 | Configure chunk data, combine 10 frames, set 1 second timeout, flush operation triggered

```
device.FrameCombinerSize = 10; // Combines 10 frames into a bigger one
// If no frames are received after 1s, an auto flush operation is triggered:
// (set timeout to 0 to disable the timer)
device.FrameCombinerTimeout = 1000;
device.Acquire = true; // Start acquisition
device.FrameCombinerFlush(); // This manually triggers a flush operation
```



Warning

For Celera P family, Frame Combiner operations in *Mode 0* are allowed only for the main Video Source. The Secondary Video Source must be disabled.

8

Capturing images

8.1 VIDEO MODES

Before starting acquiring with CELERA P you must choose a *video mode*, associated with a specific configuration (ROI, pixel format, frame rate, etc.). Video modes allow selecting image resolution, region of interest (ROI) and output format.

CELERA P video mode can be selected through the `VideoMode` property, as per the following example:

Example Code 8.1 | Select camera video mode

```
device.VideoMode = 1;           // Set Video Mode 1
```



Warning

Video modes can be selected only when the camera is not acquiring.


8.1.1 Mode 0 (Polarized Outputs)

Mode 0 provides monochrome outputs of the Polarization computing module. The processing chain settings inside the module may be changed by selecting an appropriate `PolarizedOutput`. The polarized outputs available in Video Mode 0 are:


- `Pixel 0/45/90/135`: provides pixels with the selected filter orientation. Light with a polarization angle closer to the selected filter produces a whiter pixel.



- **Virtual Angle:** starting from an arbitrary polarization angle defined by the user through the `VirtualAngle` property, calculates the frame which would be acquired by a monochrome camera with a similar filter in front of the lens. This property may be changed during acquisition, in order to simulate the rotation of a physical polarizing filter.
- **Reflection Removal:** removes flares and reflections from the image using polarization data, by selecting the pixel with the minimum value inside the superpixel.
- **Stokes 0/1/2:** outputs Stokes parameters derived from superpixels values, used for later calculations.
- **DoLP:** outputs degree of linear polarization. DoLP is a measure of how much incoming light waves are coherently polarized. A black pixel means completely unpolarized light; a white pixel means a perfectly polarized light.
- **AoLP:** outputs angle of linear polarization. AoLP represents the average polarization angle of incoming light.¹ A black pixel represents an angle of -90° , a white pixel represents an angle of 90° , a mid gray pixel represents an angle of 0° . Since the polarization angle has a period of 180° , black and white represent the same angle of polarization (90° wraps to -90°). Thus, AoLP monochrome image is not suitable for direct visualization due to the high amount of salt-and-pepper noise introduced by this encoding when the angle is close to 90° . A more meaningful encoding is provided in Video Mode 2 through the HSV to RGB conversion.

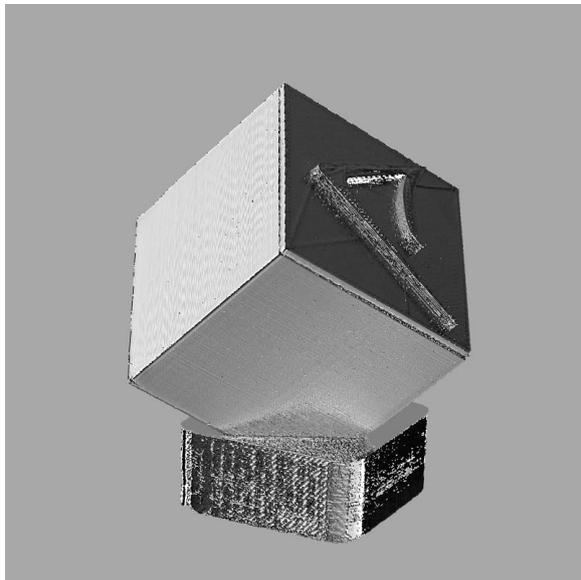

(a) AoLP

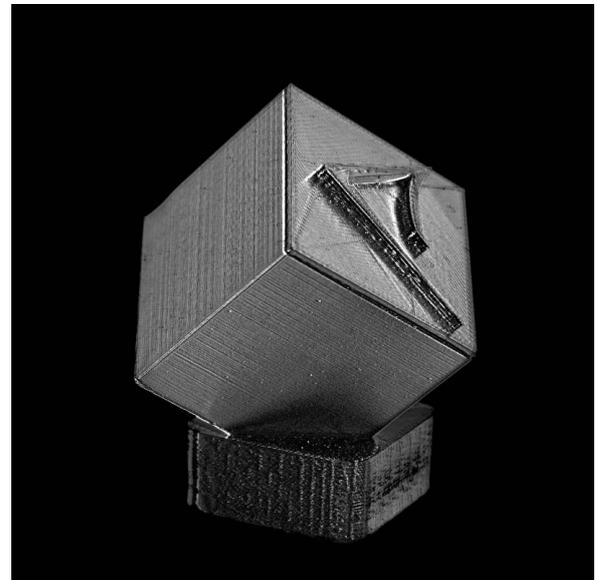

(b) DoLP

Figure 8.1: Mode 0 outputs

¹The higher DoLP is, the more accurate the estimate of AoLP is. Unpolarized light has zero DoLP and undefined AoLP.

Note

In Video Mode 0 and 2, each superpixel is processed in order to provide a single pixel. For this reason, maximum horizontal and vertical resolution are halved.

8.1.1.1 Extracting polarized data

Stokes 1 and Stokes 2 outputs are encoded in 16-bit offset binary code, in order to guarantee a correct representation on screen (S'_1, S'_2). To recover the actual values (S_1, S_2) refer to the equations below:

$$S_1 = S'_1 - 2^{15}$$

$$S_2 = S'_2 - 2^{15}$$

DoLP can be useful when expressed in percentage (0% unpolarized, 100% fully polarized). To convert the pixel into percentage, refer to the following formula:

$$DoLP_{\%} = \frac{DoLP}{2^{16}} \cdot 100$$

AoLP in radians can be recovered from the output pixels using the following formula:

$$AoLP_{rad} = \frac{\pi}{2} \left[\frac{AoLP}{2^{15}} - 1 \right]$$

8.1.1.2 Secondary Video Source

When working in Video Mode 0, it is possible to acquire a second video stream. All combinations between different Video Mode 0 polarized outputs are allowed. All pairs of frames acquired this way are calculated simultaneously starting from the same RAW sensor data.

Example Code 8.2 | Secondary video source in Video Mode 0

```
Device.VideoMode = 0;
Device.PolarizedOutput = PolarizedOutput.Stokes0;
if (Device.SecondaryVideoSourceAvailable)
{
    Device.SecondaryVideoSourceEnabled = true;
    Device.SecondaryVideoSourcePolarizedOutput = PolarizedOutput.DOLP;
}
```



Note

Enabling or disabling the secondary video source involves automatic recomputing of the *packet size* boundaries (see Section 8.5.4).

8.1.2 Mode 1 (RAW)

Mode 1 allows acquiring RAW data from the sensor, with no additional processing (available pixel formats are RAW8 and RAW16). When in *Mode 1*, the processing chain is partially disabled; this mode can be used to make calculations starting from the bare raw data coming from the sensor. Unlike *Mode 0* and *Mode 2*, *Mode 1* allows the acquisition of all pixels.

8.1.3 Mode 2 (FusionView)

Since monochrome format is not suitable for visualizing AoLP information, *Mode 2* exploits HSV color space to map polarization information into a meaningful color scheme. The image is sent to the PC in RGB24 pixel format. The polarized outputs available in Video Mode 2 are:

- AoLP: provides the Angle of Linear Polarization mapped on the HSV color space as follows:

$$H = \frac{AoLP_{rad}}{\pi} \quad S = 1 \quad V = 1$$

Figure 8.2a shows an AoLP frame: every color has maximum saturation, and Value is the brightest.

- AoLP/DoLP: provides a channel fusion between AoLP and DoLP, mapping the Degree of Linear Polarization on the Saturation component of the HSV color space and the AoLP on the Hue component.

$$H = \frac{AoLP_{rad}}{\pi} \quad S = DoLP\% \quad V = 1$$

Figure 8.2b shows an AoLP/DoLP frame: the saturation is greater where light is more polarized, so the angle information is more meaningful. Value is still at maximum brightness.

- AoLP/DoLP/S0: provides a channel fusion between AoLP, DoLP and S0, mapping Stokes0 on the Value component, DoLP on the Saturation component and AoLP on the Hue component of the HSV color space.


$$H = \frac{AoLP_{rad}}{\pi} \quad S = DoLP\% \quad V = \frac{Stokes0}{2^{16}}$$

Figure 8.2c shows an AoLP/DoLP/S0 frame: similar to AoLP/DoLP, but the Stokes0 parameter gives additional information about the actual lighting of the scene: darker areas are less illuminated.

8.2 REGION OF INTEREST (ROI)

If you don't need to acquire the whole sensor image, you can get just part of it setting a ROI. This may save the time required to transfer the unnecessary parts of the image possibly increasing the resulting frame rate.



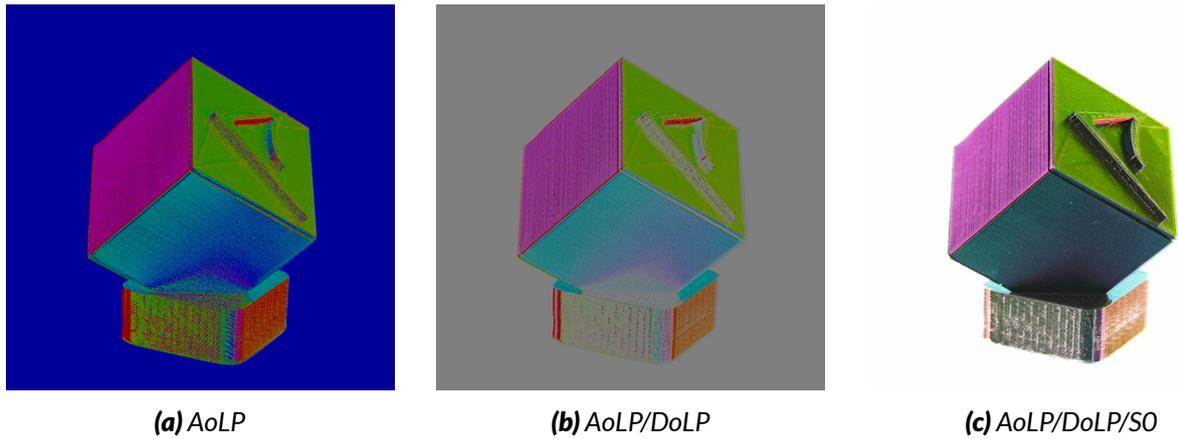

(a) AoLP

(b) AoLP/DoLP

(c) AoLP/DoLP/SO

Figure 8.2: Mode 2 outputs

A ROI is defined by programming the requested number of rows and columns and the starting position (setting the image ImageStartX, ImageStartY, ImageSizeX and ImageSizeY parameters as shown below):

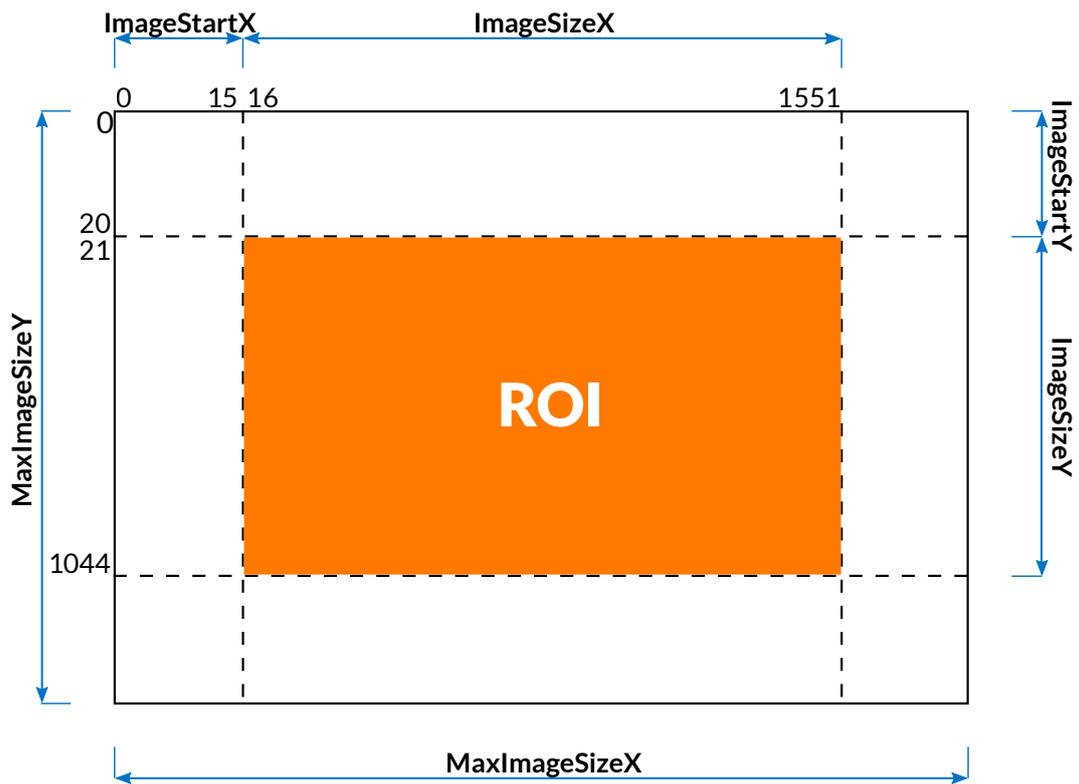


Figure 8.3: ROI description

Example Code 8.3 | ROI configuring example

```
// Ensures that ROI start position plus size does not exceed max sensor area
device.ImageStartX = 0;
device.ImageStartY = 0;
// Set ROI size
device.ImageSizeX = 1536;
device.ImageStartX = 16;
// Set ROI starting position
device.ImageSizeY = 1024;
device.ImageStartY = 21;
```

**Warning**

ROI parameters can be set only when camera is not acquiring.

**Note**

To avoid errors, please care that ImageStartX + ImageSizeX does not exceed MaxImageSizeX. The same applies also to ImageStartY and ImageSizeY.

**Note**

Changing ROI parameters involves automatic recomputing of the *packet size* boundaries (see Section 8.5.4).

8.3 PIXEL FORMAT

The *pixel format* parameter controls the format used for sending image pixels to the PC. The available formats depend on the camera model and the selected video mode:

Pixel Format	Video Mode	Bytes per pixel
RAW16	0/1	2
RAW8	1	1
RGB24	2	3

Table 8.1: Available pixel formats

The RGB24 format uses 3 bytes (24 bits) per pixel; it may therefore represent 16.7 million colors. For CELERA P, pixel formats in Mode 0 are called RAW instead of MONO (as in other camera models) even



though the frame is processed, to distinguish from a standard Monochrome processing (i.e. contrast, sharpness).

Note



When using *Mode 1* RAW formats, please consider that the camera output will be an image filtered with the polarized array, resulting in a checkered image.

Example Code 8.4 | Set pixel format to RGB24

```
device.ColorCoding = ColorCoding.RGB24;
```



Warning

Pixel format can be set only when camera is not acquiring.

Note



Changing pixel format involves automatic recomputing of the packet size boundaries (see Section 8.5.4).

8.4 ADC RESOLUTION

All CMOS camera sensors incorporate an on-chip ADC to digitize the pixel values. Each sensor family features different ADC technology and their resolution may differ.

The *ADC resolution* influences the conversion speed, i.e. the time it takes for the ADC to convert is proportional to the selected *ADC resolution* and affects the maximum frame rate. The *ADC resolution* may hence be reduced to speed up image acquisition. Please refer to the detailed specification tables (Section 2.1.1).

When the maximum allowed *ADC resolution* is selected, CELERA P internal processing chain uses the whole pixel dynamics as supplied by the ADC through all the processing chain. The pixel value is truncated (e.g. in 8-bit color codings) as needed just before sending the image data to the PC. This grants that the highest pixel data accuracy is achieved. On the other hand, reducing the *ADC resolution* uses a lower number of bits to represent pixel values so that higher frame rates can be achieved on the cost of conversion accuracy. You can then find the best trade-off between frame rate and *ADC resolution* that meets the requirements of your application.



Example Code 8.5 | Set ADCResolution property to 10 bits

```
device.ADCResolution = 10;
```

**Warning**

ADC resolution can be set only when camera is not acquiring.

**Note**

Changing ADC resolution involves automatic recomputing of the *packet size* boundaries (see Section 8.5.4).

8.5 FRAME RATE AND BANDWIDTH

Acquired frames are sent to the host computer through the USB 3.2 Gen 1x1 connection. Thanks to these channels it is possible to take advantage of a total bandwidth of about 5 Gbit/s for each channel. However not all the theoretical bandwidth is really available for USB data transmission. CELERA P user can choose between the USB standard isochronous channel, taking advantage of a reliable bandwidth of up to 3.2 Gbit/s (for each channel), or the bulk channel, more reliable on USB controllers that are integrated on PC motherboards.

8.5.1 Reserving bandwidth for isochronous channel

As shown in Section 2.4, the USB standard isochronous channel is based on a time interval of 125 μ s, i.e. each second is divided into 8000 parts (or micro-frames). The bandwidth available for a device is defined by calculating the amount of KiB that the device can transmit during each micro-frame. The isochronous channel bandwidth cannot be reserved in any quantity: data transmission is made of 1024 Bytes-long packets. Each device can transmit a burst made from 1 to 16 packets, and up to 3 bursts in a micro-frame.

The configuration indicating the number of packets and bursts that can be sent in a micro-frame is called alternate settings (or simply alternate). Each device provides a series of alternates, each one defining a bandwidth to be reserved on the isochronous channel. Selecting one of these alternates means reserving its bandwidth for the current device. The selection of an alternate is automatically performed by API, based on current camera bandwidth requirements.

Note

Not all USB host controllers can handle the total available bandwidth: for more information about the recommended hardware configuration supporting the maximum CELERA P cameras throughput, refer to Section 2.4.

8.5.2 Bandwidth limits for isochronous endpoint

User can limit the maximum bandwidth reserved to the camera through the `SetBandwidthLimits` method. This allows connecting multiple cameras on the same host without experiencing bandwidth sharing conflicts. It can also be used to limit camera performance when connected to a poor USB 3.2 Gen 1x1 host controller, as mentioned in Section 5.1.2.

USB Packet size	Burst size	Number of bursts	Bytes per micro-frame	Bandwidth
1 KiB	× 3	× 1	3 KiB	24 000 KiB/s
1 KiB	× 6	× 1	6 KiB	48 000 KiB/s
1 KiB	× 8	× 1	8 KiB	64 000 KiB/s
1 KiB	× 10	× 1	10 KiB	80 000 KiB/s
1 KiB	× 11	× 1	11 KiB	88 000 KiB/s
1 KiB	× 12	× 1	12 KiB	96 000 KiB/s
1 KiB	× 13	× 1	13 KiB	104 000 KiB/s
1 KiB	× 14	× 1	14 KiB	112 000 KiB/s
1 KiB	× 15	× 1	15 KiB	120 000 KiB/s
1 KiB	× 8	× 2	16 KiB	128 000 KiB/s
1 KiB	× 9	× 2	18 KiB	144 000 KiB/s
1 KiB	× 10	× 2	20 KiB	160 000 KiB/s
1 KiB	× 11	× 2	22 KiB	176 000 KiB/s
1 KiB	× 12	× 2	24 KiB	192 000 KiB/s
1 KiB	× 14	× 2	28 KiB	224 000 KiB/s
1 KiB	× 16	× 2	32 KiB	256 000 KiB/s
1 KiB	× 12	× 3	36 KiB	288 000 KiB/s
1 KiB	× 13	× 3	39 KiB	312 000 KiB/s
1 KiB	× 14	× 3	42 KiB	336 000 KiB/s
1 KiB	× 15	× 3	45 KiB	360 000 KiB/s
1 KiB	× 16	× 3	48 KiB	384 000 KiB/s

Table 8.2: Available isochronous alternate settings

In addition, CELERA P cameras have the ability to handle different limits for either the two USB 3.2 Gen 1x1 . connections; CELERA P will correctly handle the resulting bandwidth based on the chosen values.

Example Code 8.6 | Sets a bandwidth limits of 32 KiB per microframe for each channel on CELERA P

```
device.SetBandwidthLimits(new uint[] {32, 32});
```

Example Code 8.7 | Sets a bandwidth limits of 32 KiB per microframe on CELERA One P

```
device.SetBandwidthLimits(new uint[] {32});
```

Note



When calling the `SetBandwidthLimits` method, a valid alt-interface bandwidth –expressed as bytes per micro-frame– must be selected. To get a list of all available bandwidth-limit values the `GetAllowedBandwidthLimits` method can be invoked.

8.5.3 Bandwidth limit for bulk endpoint

In bulk endpoint mode the burst size is fixed at x16, resulting in a 16 KiB of data per bulk request. The bandwidth limit control can be seen as the average data transferred every 125 μ s but has no effect on the burst size itself.

8.5.4 Packet size for isochronous endpoint

The packet size parameter controls the maximum amount of data the device can send during a microframe. Not all values are permitted: the boundaries for the allowed *packet size* are adjusted by the camera according to the operating conditions; they depend on several parameters (*ROI*, *Analog to Digital Converter (ADC) resolution*, *pixel format*, etc.) influencing both acquisition speed and size of data to be sent. Refer to Section 8.5.4.1 for more details about how the required bandwidth can be estimated.

Note



When the camera automatically recalculates the *packet size* range, it also sets the *packet size* to the current maximum allowable value.

Note



The maximum allowed value for the *packet size* is the optimum value, beyond which there is no frame rate increase. Setting a *packet size* larger than `MaxPacketSize` generates an exception.

Note

The amount of bandwidth available on each interface can be restricted by the `SetBandwidthLimits` method, refer to Section 8.5.2.

Before starting live image acquisition, based on the current *bandwidth limits* and current *packet size*, API selects the lowest available alt-interface providing the required bandwidth.

Note

Selecting a bandwidth limit stricter than the minimum required bandwidth makes acquisition start impossible. An exception is thrown to signal this error condition.

The following code sets the `PacketSize` to 8192 B per micro-frame (8 KiB per micro-frame), after checking it does not exceed the maximum allowed packet size.

Example Code 8.8 | Set `PacketSize` property

```
device.PacketSize = Math.Min(device.MaxPacketSize, 8);
```

**Warning**

`PacketSize` property can be set only when camera is not acquiring.

Note

`PacketSize` property has unit as specified in `PacketSizeUnitInfo` unit info.

8.5.4.1 Calculating the required bandwidth

Whenever an operating parameter of the camera is set, CELERA P automatically calculates the upper and lower (optimum) `PacketSize` limits, optimizing camera performance. Nevertheless, it is useful to be aware of parameters affecting the acquisition speed and, consequently, determining bandwidth requirements (and vice versa).

The video stream bandwidth is influenced by video mode, ROI size, binning value, pixel format, ADC resolution, shutter floor, and chunk data. Refer to the relevant sections for information about these controls.



The following explanation is simplified for better understanding: the actual calculations made by CELERA P to determine the required bandwidth and maximum frame rate are slightly more complex and take into account some additional details that have been left out here for the sake of simplicity.

In general, the required bandwidth is calculated based on the number of bytes per micro-frame μ_B generated by the sensor:

$$\mu_B = (I_B + CD_B) \cdot R \cdot \frac{125\mu s}{1s} \quad (8.1)$$

The quantity between round brackets is the total size in bytes of the frame and is the sum of two components:

- I_B is the image size in bytes and is the product of image width ROI_W , image height ROI_H and number of bytes per pixel P_B ($I_B = ROI_W \cdot ROI_H \cdot P_B$).
- CD_B depends on the number of enabled chunk data fields, i.e. the size (in bytes) of ancillary information related to each of the lines and the frame (see Section 7.2). CD_B can be calculated as $ROI_H \cdot CD_B^{line} + CD_B^{frame}$.

R is the image rate and is calculated as follows:

$$R = \frac{f_{SENSOR}}{W \cdot ROI_H} \quad (8.2)$$

where W is the overall size of the sensor (number of pixels in a row) and f_{SENSOR} is 100 MHz.

In other words, the above formula states that the number of bytes sent per micro-frame is the size in bytes of each frame multiplied by the image rate and divided by 8000 (number of micro-frames per second).

The value of $I_B + CD_B$ should be increased by 0.4% due to communication packet headers overhead.

8.5.5 Packet size for bulk endpoint

Similarly to the bandwidth limit (Section 8.5.3), the packet size represents the average data produced by the camera every 125 μ s. The calculation is performed in the same manner as the isochronous endpoint, but it is not possible to reserve such bandwidth due to the bulk transfer very nature.

8.5.6 Connecting multiple devices to the same host

When multiple devices are connected to the same host controller, the sum of the bandwidth used by all the devices must not exceed the total bandwidth available on the host (48 KiB max per micro-frame). The bandwidth limit control is the right tool that can be used to define the bandwidth to be reserved to a single device.



Note

A small part of the USB 3.2 Gen 1x1 bus bandwidth is reserved for controlling the camera: depending on the USB 3.2 Gen 1x1 controller you are using, adding another CELERA P camera to the same controller may generate a small overhead (3-6%) slightly reducing the total bandwidth available for image transfer.

Warning

When using bulk endpoint, keep in mind that the total bandwidth is shared by all the devices connected to the host. Bandwidth can not be reserved by a single device but you can limit it by reducing the packet size properly.

8.5.7 Frame rate

The frame rate parameter controls the acquisition period, i.e. the time between the acquisition of two consecutive images, and is expressed in frames per second (Hz).

The *frame rate* control has effects only when the *frame start trigger* is disabled. Otherwise, the time between two consecutive acquisitions is determined by the trigger frequency. CELERA P provides two *read-only* variables reporting the allowed range (upper and lower limits) for the *frame rate*. The lower limit is constant (1 fps), the upper limit depends on the available bandwidth (see Section 8.5.4.1): any direct or indirect change of the *packet size* control involves recomputing the maximum frame rate.

Unlike other video mode parameters, *frame rate* can be modified also during frame acquisition.

Note

When changing one of the controls affecting bandwidth (see the complete list in Section 8.5.4.1), the upper *frame rate* limit is recomputed and the current *frame rate* may automatically be reset to the maximum allowed value. Please see Section 8.5.8 for further details.

Note

The actual *frame rate* can be lower than the requested one when the current shutter time exceeds the acquisition period.

In general, the maximum value for the *frame rate* control is determined by three factors:



1. time required for converting and transferring the image from the sensor to the camera;
2. bandwidth available on the USB 3.2 Gen 1x1 bus;
3. size of the selected ROI.

To achieve the largest *frame rate* allowed by the application (see also Section 8.5.9), please:

1. decrease the *ADC resolution* (decreasing the conversion time for each frame);
2. ensure that the *shutter* time is not such large as to affect (increase) the minimum acquisition period;
3. set the optimal *packet size*, i.e. the maximum allowed given current operating conditions;
4. use the lowest ROI size compatible with the application.

Example Code 8.9 | Set `FrameRate` property

```
// Set 30 fps, without exceeding the maximum allowed value.  
device.FrameRate = Math.Min(device.MaxFrameRate, 30);
```

8.5.8 Preserve rates

As mentioned before, CELERA P updates the upper *frame rate* limit when the current *packet size* is modified. This happens either upon direct request (e.g. `device.PacketSize = 32`) or when changing parameters affecting *packet size* limits (see Section 8.5.4.1).

Whenever the upper *frame rate* limit is updated, CELERA P can increase the current *frame rate* value to that value in order to guarantee the maximum available acquisition speed, or the current *frame rate* value can be preserved.

This behavior is controlled by the `PreserveRates` property. When true, CELERA P keeps the previously frame rate unaffected, as long as the old value is still inside the range of the allowed rates. Otherwise, if the property is set to false, the *frame rate* will always be maximized.

Example Code 8.10 | Enable the `PreserveRates` functionality

```
device.PreserveRates = true;
```

Note



CELERA P cameras `PreserveRates` feature is enabled by default; it can be disabled by setting it to false.

8.5.9 Maximizing frame rate

To achieve maximum performance, you must pay special attention to correctly define some fundamental operating parameters such as lighting, exposure time and pixel format.

First of all, it is advisable to plan the environment where the camera will be operating so that the field is being illuminated with enough light to ensure exposure time is as short as possible;

To maximize performance, you must select the pixel format (color coding) using the smallest representation among those suitable for the particular application; for example, if you need to capture monochrome images just to show them on a display, selecting the MONO8 pixel format is possibly enough, as the extra information content provided by the MONO16 format is generally not reproducible by conventional screens.

Finally, avoid using ROI larger than necessary: it would generate unnecessary traffic, increasing the allocated bandwidth on USB 3.2 Gen 1x1 bus and slowing down the PC processing. Planning a proper use of the USB 3.2 Gen 1x1 bus bandwidth (choosing appropriate combinations of packet size) allows operating multiple CELERA P cameras at once on a single PC, achieving sufficient performances for most applications and minimizing the overall hardware cost.

8.6 CONTROLS

CELERA P cameras feature several controls, affecting the operation of the sensor and acting on the video signal processing chain. The API provides software methods that allow your application to control the camera; for more information about the numerical representation of each parameter, their range of operation and access policy, please refer to MaestroUSB3 SDK manual and examples.

Note



Brightness, Contrast, Saturation, Hue, WhiteBalance, Gamma, DigitalGain, UserLut, controls have no effect when using a RAW color coding

8.6.1 Shutter

The Shutter control adjusts the exposure time of the frames acquired by the camera. The following example sets the duration of the exposure time to 100 μ s:

Example Code 8.11 | Set Exposure time with unit factor

```
// Retrieve ShutterUnit
UnitInfo unit = device.GetFeatureUnitInfo(Feature.Shutter);
// Convert exposure time in shutter units
uint reqShutter = (uint)(100e-6 / unit.Factor);
// Request minimum achievable exposure time in shutter units
uint minShutter = device.GetFeatureMin(Feature.Shutter);
// Set the greatest between requested exposure time and minimum shutter
device.Shutter = Math.Max(minShutter, reqShutter);
```



Note

Setting an exposure time longer than the current frame period decreases the actual frame rate. Consequently, current frame period becomes slightly larger than the currently selected exposure time, due to analog-to-digital conversion time.

MaestroUSB3 viewer and application examples show in detail how to use the Shutter control and allow to experience the interactions with frame rate.

8.6.1.1 High resolution shutter

Due to the sensor architecture, the shutter time is set with limited precision and it is rounded to meet the time constraint of the sensor in use. The camera has a read-only property returning the actual duration of the resulting exposure.

Example Code 8.12 | Get the exposure length, expressed in seconds

```
float shutter = device.HighResShutter; // Read the actual exposure in seconds
```

8.6.1.2 Shutter resolution

As stated in Section 8.6.1.1, actual exposure time may be slightly different from the value requested by your application.

The camera is able to change the shutter time in steps whose duration depends on `PacketSize`. The shutter resolution is a read-only control that lets you know the actual duration of these steps. A smaller value means you can approximate the desired shutter time with greater precision.

8.6.1.3 Automatic exposure

CELERA P *automatic exposure* control enables the automatic setting of the shutter to achieve a specific average image intensity (*luma*). In order to use this feature, you must specify a *setpoint* (the target *luma*) and enable *automatic exposure*. The camera will calculate the appropriate *shutter*, frame by frame, to keep the *luma* at the required *setpoint*.

You can also limit the maximum *shutter* value set by the routine to avoid excessive *frame rate* slowdown.

Example Code 8.13 | Set up automatic exposure

```
// Check if automatic exposure is available
if (device.GetFeatureAutoCapability(Feature.Shutter))
{
    device.AutoExposureRef = 128; // Set the desired luma target
    device.AutoExposureLimit = 3333; // Limit the maximum shutter to 33.33ms (30fps)
    device.AutoExposure = true; // Enable auto exposure feature
}
```



A typical *automatic exposure* setup procedure includes the following steps: issue an initial *manual* camera setup (*shutter*, *gain*, etc.) first, so that the resulting image has the desired brightness level; invoke `AutoExposureRefSetPoint`, updating the `AutoExposureRef` property with the current *luma* value. The following code explain how to take advantage of this method:

Example Code 8.14 | Set up automatic exposure

```
// After reaching the desired image brightness you can invoke the following commands:  
device.AutoExposureRefSetPoint();  
device.AutoExposure = true;
```

8.6.2 Analog Gain

The `Gain` control adjusts the gain of the analog section of the sensor; it allows to adjust the analog sensitivity to compensate for insufficient lighting.

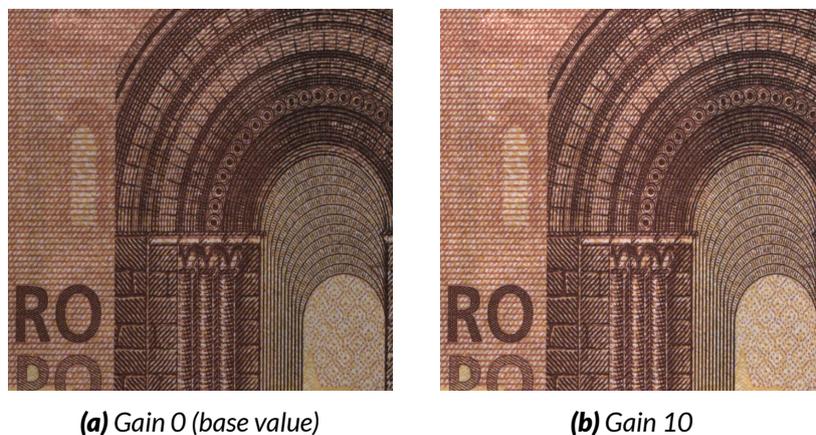


Figure 8.4: Example of `Gain` control effect.

Warning



To maximize the signal-to-noise ratio (SNR) of the acquisition, it is recommended to choose a lighting system that allows using the lowest possible `Gain` values.

Note



The sensor's analog gain is slightly dependent on the selected ADC resolution; the same `Gain` value may therefore generate slightly different gain levels when operating at different ADC resolution. You should set the operating ADC resolution before choosing the `Gain` level required by the application.

8.6.3 Digital Gain

When, despite using the sensor analog amplifiers (Gain control), the resulting images cannot achieve the desired brightness level, you can enable a digital amplifier module scaling the acquired signal up.


Note



The unity gain value is 1024, therefore the digital amplifier module can also be used as an attenuator choosing values below 1024.

Example Code 8.15 | Set digital gain level

```
// Set digital gain to 1536/1024 (gain step = 1/1024)
uint maxDigitalGain = device.GetFeatureMax(Feature.DigitalGain);
device.DigitalGain = Math.Min(1536, maxDigitalGain);
```

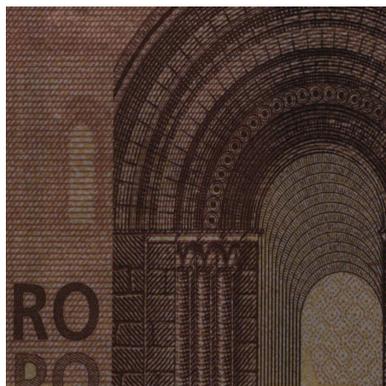

(a) Digital Gain 700



(b) Digital Gain 1024 (neutral)



(c) Digital Gain 1300

Figure 8.5: Example of Digital Gain control effect.

Warning



By its very nature, the digital amplification may generate missing codes; it may happen that the combination of the ADC resolution and the Digital gain make some brightness values less frequent (or even suppress them). If these artefacts negatively affect the acquisition, they can be reduced by selecting the maximum ADC resolution compatible with the speed requirements of the application.

8.6.4 User LUTs

CELERA P can apply a conversion table (look-up table, or LUT) to the incoming image data to change color/brightness distribution. The API functions allow to store up to four LUTs into the camera non-



volatile memory; viewer and application examples show in detail how to use User LUTs and experience the advantages.



Warning

On Celera P family, LUT are applied to SO, AoLP and DoLP values before the HSV mapping. Thus, they are effective only in *Mode 2*.

To apply a user LUT, you must save it first into the camera; the following example stores a LUT into the camera and selects it:

Example Code 8.16 | Store lut into the camera

```
float[] lut = new float[device.UserLut.LutLenght]; // Create a linear sample LUT
for (int i = 0; i < device.UserLut.LutLenght; i++)
    lut[i] = (float)i / ((float)device.UserLut.LutLenght - 1);

if (device.UserLut.LutWritable(1)) // If LUT 1 is writable
    device.UserLut.Write(1, lut); // Write LUT 1 to camera memory

device.LutIndex = 1; // Select LUT 1
device.GammaEnabled = false; // Disable gamma to enable LUTs
```

Note



In user application a good approach is setting LUT index when the camera is not acquiring, since during the LUT loading operation CELERA P could ignore external triggers and/or lose frames.

8.6.5 Virtual Angle

When Virtual Angle polarized output is selected in Video Mode 0, the `VirtualAngle` control defines the virtual linear polarizer's angle. This parameter may be changed during acquisition, to emulate the physical rotation of a polarizer in front of a lens.

8.6.6 Saturation Detection

When AoLP or DoLP polarized outputs are selected in Video Mode 0, it is possible to activate a saturation detection alarm, which colors overexposed and underexposed areas of the source image.

A pixel is marked as overexposed when one of the four components of the superpixel is above the `SaturationThresholdMax`. A pixel is marked as underexposed when each of the four components of the superpixel is below the `SaturationThresholdMin`. When activated, the codes 0 and 255 are used to signal underexposure and overexposure. When using Alkeria Player, the acquired frames are displayed

with a custom bitmap: overexposed pixels are shown in yellow and underexposed pixels are shown in blue.

8.6.7 Luma

Luma is a read-only control that returns the average image luminance; Luma is evaluated within the currently selected LMR (see Section 7.1). The returned value is related to the last acquired image when the request was received by the camera.

Example Code 8.17 | Read the Luma value of the last image

```
uint currentLuma = device.Luma;
```



Note

Color cameras evaluate Luma using conversion factors $R = 0.299$, $G = 0.587$, $B = 0.114$.

8.6.8 Time Stamp

TimeStamp is a read-only control that returns the runtime status of TimeStamp counter. TimeStamp is a 16-bit unsigned integer generated from a 1 ms timer and cleared when acquisition is started.

Example Code 8.18 | Read the TimeStamp value

```
ushort currentTime = device.TimeStamp;
```

8.6.9 Flip and Rotate

The Flip control allows flipping the image horizontally, vertically and diagonally.

Example Code 8.19 | Flip the image diagonally

```
device.Flip = FlipMode.Diagonal;
```

The Rotate control rotates the image counterclockwise along the orthogonal axis across its center; the granularity of the rotation is 90 deg.

Example Code 8.20 | Rotate the image of 270 deg

```
device.Rotate = RotateMode.R270;
```



8.7 SAVING DEVICE CONFIGURATION

You can save the status of CELERA P camera controls and calibration and reload it on demand: camera setup is saved into the internal flash memory and can then be reloaded even after powering off and on the device. CELERA P cameras can store multiple user configuration, allowing user to preset various scenarios and recall them whenever needed. The maximum number of user configuration is firmware-dependant;

Example Code 8.21 | Retrieve the maximum number of user configurations

```
ushort cfgNum = device.MaxFlashIndex() + 1;    // Get max number of user configurations
```

Example Code 8.22 | Save and restore camera configuration and calibration

```
ushort cfgIndex = 1;
// Save control and calibration into camera memory
device.Save(cfgIndex);
// Load control and calibration from camera memory
device.Load(cfgIndex);
```

Example Code 8.23 | Erase configuration

```
// Erase control and calibration from camera memory
device.Erase(cfgIndex);
```

8.7.1 Export and import XML

CELERA P cameras allow user to export and import camera configuration and calibration to an XML file. It can be useful to share camera status during remote assistance session or to configure multiple cameras with the same set of parameters.



Note

Calibration parameters are exported to XML if and only if a calibration process has been conducted or recalled from camera memory.

Example Code 8.24 | Export camera configuration and calibration previously saved on camera memory

```
ushort cfgIndex = 2;
// Load control and calibration from camera memory
device.Load(cfgIndex);
// Creating xml file name
string filename = "C:\Users\UserName\Desktop\CamCfg" + cfgIndex.ToString() + ".xml";
// Export xml file
device.SaveXml(filename);
```



Example Code 8.25 | Load from XML and save into camera memory

```
ushort cfgIndex = 1;
// Import camera configuration from xml file
device.LoadXml("C:\Users\UserName\Desktop\CamCfg.xml");
// Save control and calibration into camera memory
device.Save(cfgIndex);
```

8.8 CONFIGURATION EXAMPLE

Example Code 8.26 | Set camera's main parameters and enable live acquisition

```
device.Camera = 0; // Connect to the first camera
device.ImageSizeY = 1024; // Set the height of the frame
device.VideoMode = 0;
device.ColorCoding = ColorCoding.Mono16; // Set the pixel format
device.LiveControl = form.LivePanel; // Target control for displaying imgs into
device.Acquire = true; // Start acquisition
```

8.9 PATTERN GENERATOR

CELERA P cameras implement an internal fixed pattern generator, which provides synthetic images and allows you to check if the camera is correctly installed and working over the USB 3.2 Gen 1x1 connection. The pattern generator simulates the behavior of the camera implementing all the parameters controlling the acquisition, except for those strictly dependent on the sensor (e.g. gain, shutter, etc.).

Example Code 8.27 | Enable pattern generator

```
device.PatternGen.Enabled = true;
```

**Warning**

Enabling or disabling the pattern generator during acquisition may lead to a frame loss.

9

Alkeria Advanced Sequencer

CELERA P cameras are equipped with an *advanced sequencer* module able to modify some camera controls on the fly, according to an external or internal event. This module allows to setup different sets of video parameters that can be selected and quickly cycled during frame acquisition. Parameters are set instantaneously between the acquisition of two consecutive frames as soon as the trigger condition is detected. The *advanced sequencer* module allows, for example, changing the shutter time depending on an external selector signal or shifting the Region-Of-Interest (ROI) at each frame to track a moving target.

9.1 SEQUENCER ENABLED CONTROLS

The *advanced sequencer* module can operate on all the camera controls listed below:

- *shutter*;
- *frame rate*;
- *gain*;
- *digital gain*;
- *virtual angle*;
- *image start X*;
- *image start Y*;
- *output port status*.

CELERA P camera can be configured in such a way that these values can be changed between frames or upon detection of specific events.

All the other controls, i.e. the ones not listed before, will not be modified during the advanced sequencer module operation.



9.2 PAGE CONCEPT

All the specified controls values listed above are grouped in a *sequencer page*. The *advanced sequencer* module can handle up to 64 pages, containing values to be applied before starting frame exposures. When camera is powered on, or when the `Init` method is invoked, all sequencer page values are initialized to their default values. When camera configuration is saved, all the sequencer sets of values are stored into the on-camera non-volatile memory and made available for subsequent reload.

9.3 PAGE SETUP

9.3.1 Writing Page Settings

Page settings can be written by selecting a sequencer page and setting the specified camera features, as when the sequencer is not in use. The advanced sequencer features also an all-pages write mode to speed-up the setup process: when the application uses a common set of values, the same for all pages, page number -1 may be indexed to write common values. Those values will be written in all pages at once. After writing common values, non-common parameters for specific pages can be still be written selecting the destination page.

Note



When the camera is acquiring and the *advanced sequencer* is enabled you cannot change the sequencer controls (i.e. only non-sequenced controls are accessible).

Example Code 9.1 | Sequencer setup example

```
device.Sequencer.Page = -1; // Select page -1
device.Shutter = 1000; // Write common values to all sequencer pages
device.Gain = 0;
device.ImageStartX = 100;
device.ImageStartY = 0;

// Setup 10 sequencer pages, changing image position and shutter:
for (int i = 0; i < 10; i++)
{
    device.Sequencer.Page = i; // Select i-th sequencer page
    device.ImageStartY = i * 100; // Shift ROI of 100 pixel at a time
    if (i % 2 == 1)
        device.Shutter = 500; // Write a different shutter only on odd pages
}
```

9.3.2 First and Last page

Before starting live, you can enable the *advanced sequencer* module. When the *advanced sequencer* is left disabled, the camera acquires images based on the settings of the currently selected page. When enabling the *advanced sequencer* module, you must choose the first and last page index first.



The *advanced sequencer* module starts from the *first* page of the selected interval and moves to the following pages until it reaches the page marked as *last*. For instance, if page 2 and 4 are selected as *first* and *last* page respectively, the *advanced sequencer* cycles from page 2 to 4. If the loop option is enabled (refer to Figure 9.2) and the *last* page is reached, further *page increment* events will make the *advanced sequencer* go back to the *first* page of the interval. Page increment events will be ignored otherwise.

Example Code 9.2 | sequencer loop from page 2 to 4

```
device.Sequencer.FirstPage = 2;
device.Sequencer.LastPage = 4;
device.Sequencer.Loop = true;
device.Sequencer.Enabled = true;
```

9.4 MOVING BETWEEN PAGES

9.4.1 Manual page selection

When the *advanced sequencer* is disabled, i.e. in normal camera operation, the active page set can be manually loaded before starting image acquisition as shown in the following example:

Example Code 9.3 | Manual sequencer page selection

```
device.Sequencer.Page = 2; // Select page 2
device.Acquire = true; // Start live
```

9.4.2 Increment and reset events

When the *advanced sequencer* module is enabled, it applies different page settings upon receiving *page increment* or *page reset* events. The camera starts acquiring images using the settings stored in the *first* page. *Page increment* events will make the sequencer move forward to the following pages until the *last* page is reached. A *Page reset* event will make the sequencer jump back to the *first* page of the selected interval.

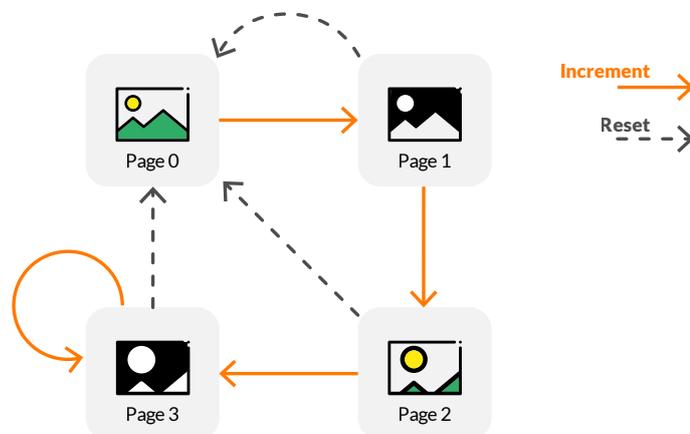


Figure 9.1: Example of sequencer path with loop disabled

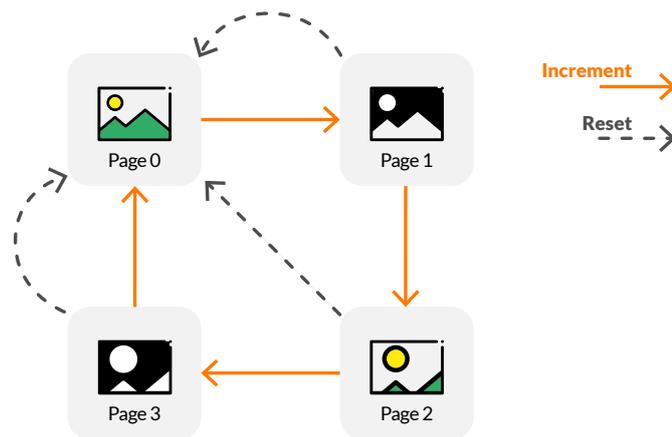


Figure 9.2: Example of sequencer path with loop enabled

9.4.3 Event Sources

Page increment event sources can be one of the following:

- External input: advanced sequencer page is changed according to an event on an input pin.
- Software: advanced sequencer page is changed at your explicit software request.
- Frame start: advanced sequencer page is changed at each frame-start trigger.

Code 9.4 shows how to configure *advanced sequencer* to increment the page number on falling edge of the signal at port 1. The page is then reset through Sequencer . SoftwareReset method.

Example Code 9.4 | Sequencer page increment on external input event

```
device.Sequencer.IncrementSource = SequencerSource.External; // Select increment source
device.Sequencer.IncrementExternalInput = 1; // Select input port 1
device.Sequencer.DetectIncrementExternalInputEdge = true; // Detect edge vs. level
device.Sequencer.InvertIncrementExternalInput = true; // Invert input
device.Sequencer.ResetSource = SequencerSource.Software; // Manual reset
```

Note



Active page cannot be manually modified during acquisition; the only way to change the active page during acquisition is enabling the *advanced sequencer* and using the software page increment source (refer to Section 9.4.3) to request a transition to the next page. This can be useful in debugging.

9.5 CONFLICTS AND TIMINGS

Page increment and *page reset* events are detected and accepted by the *advanced sequencer*, and executed as soon as possible, according to operating constraints: the current page cannot be changed during exposure time; any *page increment* or *page reset* request received during a frame acquisition is registered and served at the end of the current exposure.

9.6 EXAMPLES OF CONFIGURATION

9.6.1 Example 1: drive illuminators with CELERA P camera

This example assumes that you have to command two different illuminators with two different I/O pins and a specific shutter time has to be used with each illuminator. A switch is connected to input pin 1 and whenever you press the switch, the camera will switch between illuminator 0 and 1.

Page	Shutter	PIO 3 port Source	PIO 4 port Source
0	100 μ s	Exposure	Null Output (Logic 0)
1	800 μ s	Null Output (Logic 0)	Exposure

Table 9.1: Example 1 sequencer settings

Example Code 9.5 | Configure sequencer to drive two different illuminators

```
device.Sequencer.FirstPage = 0;
device.Sequencer.LastPage = 1;
device.Sequencer.Loop = true;

device.Sequencer.Page = 0; // Select page 0
device.Shutter = 100; // Set 100 us shutter time
device.PIOPorts[3].Source = OutputSource.Exposure; // Send exposure signal on port 3
device.PIOPorts[4].Source = OutputSource.Manual; // Send a logic 0 on port 4
device.PIOPorts[4].Value = false;

device.Sequencer.Page = 1; // Select page 1
device.Shutter = 500; // Set 500 us shutter time
device.PIOPorts[3].Source = OutputSource.Manual; // Send a logic 0 on port 3
device.PIOPorts[3].Value = false;
device.PIOPorts[4].Source = OutputSource.Exposure; // Send exposure signal on port 4

// Select pin 1 as external page-increment input:
device.Sequencer.IncrementSource = SequencerSource.External;
device.Sequencer.IncrementExternalInput = 1;
device.Sequencer.DetectIncrementExternalInputEdge = true;
device.Sequencer.InvertIncrementExternalInput = true; // Detect falling edge

device.Sequencer.Enabled = true;
```

Please note that the input used to increment the sequencer page can also be used to trigger a frame. Therefore, if you want to trigger exactly one frame with each illuminator you can set port 1 as external Frame Start Trigger source, as shown in Code 9.6.



Example Code 9.6 | Configure port 1 as frame start trigger

```
// Select pin 1 as trigger source:
device.FrameStartTrigger.Source = TriggerSource.External;
device.FrameStartTrigger.ExternalInput = 1;
device.FrameStartTrigger.DetectExternalInputEdge = true;
device.FrameStartTrigger.InvertExternalInput = true; // Detect falling edge

device.FrameStartTrigger.Enabled = true; // Enable frame trigger (no free-run)
```

9.6.2 Example 2: split camera field

This example assumes that you want to split the camera field of view into two parts and acquire alternatively the top first 500 lines or the following 500 lines. The acquired image portion has to be selected based on the value of an external signal connected to port 1.

Page	Image start Y
0	0
1	500

Table 9.2: Example 2 sequencer settings

To obtain the required behavior, the same pin can be used to reset the page index with a logic '0' and to increment the page, i.e. select the page 1, with a logic '1'. The *page reset* event has higher priority than the *page increment* event. Furthermore, the Loop property can be set to false so that, even if the page-increment event is detected multiple times, the page index will never go back to 0. Code 9.7 shows how to configure CELERA P camera for this purpose.



Example Code 9.7 | Configure sequencer to split image field

```
device.Sequencer.FirstPage = 0;
device.Sequencer.LastPage = 1;
device.Sequencer.Loop = false;

device.Sequencer.ResetExternalInput = 1;
device.Sequencer.ResetSource = SequencerSource.External;
device.Sequencer.InvertResetExternalInput = true;
device.Sequencer.DetectResetExternalInputEdge = false;

device.Sequencer.IncrementExternalInput = 1;
device.Sequencer.IncrementSource = SequencerSource.External;
device.Sequencer.InvertIncrementExternalInput = false;
device.Sequencer.DetectIncrementExternalInputEdge = false;

device.ImageSizeY = 500;
device.Sequencer.Page = 0; // Set page 0
device.ImageStartY = 0; // Set top ROW index for page 0
device.Sequencer.Page = 1; // Set page 1
device.ImageStartY = 500; // Set top ROW index for page 1

device.Sequencer.Enabled = true;
```



10

Alkeria player

MaestroUSB3 comes with a user-friendly software application, allowing to explore the main features of CELERA P cameras and check the correct camera and software installation. Once installed MaestroUSB3 SDK, you can find the application at the following path:

Program Files\Alkeria\USB3\MaestroUSB3\Players

Alternatively, you can easily start the camera viewer by accessing the Windows Start button and look for *Alkeria player* from the MaestroUSB3 Program folder:

Start > All programs > Alkeria > USB3 > MaestroUSB3.

10.1 DEVICE CONNECTION AND INITIALIZATION

The top left toolbar is a drop-down menu letting you select a specific CELERA P camera among the ones connected to the system. When no CELERA P camera is connected, the drop-down menu and the toolbar are grayed out.

10.2 TOOLBAR BUTTONS

The top toolbar shows the controls listed in Table 10.1:



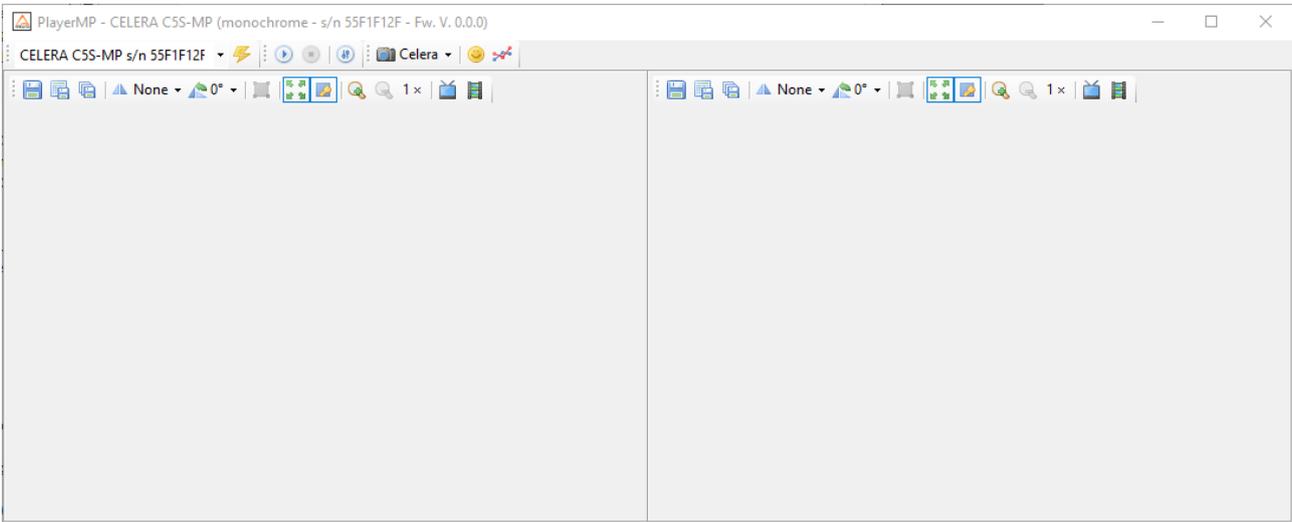


Figure 10.1: Alkeria player main window

	Init	Initialize the camera to default settings (camera power-up status).
	Play	Start image playback.
	Stop	Stop image playback.
	Settings	Open the settings panel.
	Save	Save the last acquired image as a Windows Bitmap.
	Save RAW	Save the last acquired image as a RAW binary file.
	Save Sequence	Open the Save Sequence panel.
	Flip	Select horizontal and/or vertical flip.
	Rotate	Select image rotation mode (0°, 90°, 180°, 270°).
	Set LMR	Specify the Light Meter ROI by drawing a rectangle on the image.
	Stretch	Enable image stretching.
	Maintain Aspect Ratio	Maintain image width/height ratio during stretching operation.
	Zoom In	Increase the zoom level (and disable stretching).
	Zoom Out	Decrease the zoom level.
	Full Screen	Enter full-screen mode.
	Temperature Status Normal	Signals that the camera is working within the safe operation area.
	Temperature Status Warning	Signals that the current temperature is above 70 °C. Even if the camera is able to acquire images, working at this temperature is not recommended.
	Temperature Status Fault	Signals that the current temperature is above 80 °C. The image acquisition is suspended. For more details on the temperature safety mechanism refer to Section 3.6.6.
	Display Frames	Open Display Frames panel.
	LUT	Launch the Look-Up Table editor.

Table 10.1: Alkeria player buttons

10.3 SETTINGS PANEL

10.3.1 Advanced Sequencer Page

Camera settings are stored in pages, allowing you to set different operating configurations retrievable on-demand. The top scroll bar in the settings panel lets you select the current Sequencer page (please refer to chapter 7 to know more about the Sequencer feature). Selecting “-1” as a page number writes the same settings to all pages at once.

10.3.2 Features

The features tab, shown in Figure 10.2, allows adjusting all camera controls, such as:

- **Shutter:** defines the exposure time, i.e. the time span in which the sensor is exposed to light;
- **Gain:** controls the analog gain on sensor’s circuitry;

Some of these controls (i.e. Gamma) can be turned on and off using the dedicated checkbox. Read-only features (i.e. Luma and Temperature) have a “Read” button next to them that allows refreshing the value from the camera. Shutter control has a special “Auto” check-box, allowing the user to enable the auto-shutter feature.



Note

LUT Index control will be activated when Gamma control is turned off.

10.3.3 Video Settings

The Video Settings tab (Figure 10.3) allows the selection of video mode, color coding and ADC resolution. Other relevant video settings parameters are:

- **Region-Of-Interest (ROI):** sets the size of the image (width and height), and the displacement from the upper-left corner of the original frame (left and top);
- **Frame Combiner:** allows to pack multiple frames into a single frame;
- **Rates and Bandwidth:** adjusts the acquisition speed;
- **Pattern Generator:** displays a fixed pattern instead of the acquired frame;
- **Secondary video source:** choose what to display in the second stream when using Video Mode 0.

CELERA P player features an additional video control as shown in Figure 10.4 to enable a secondary video source in Mode 0. Please refer to Section 8.1.1.2.



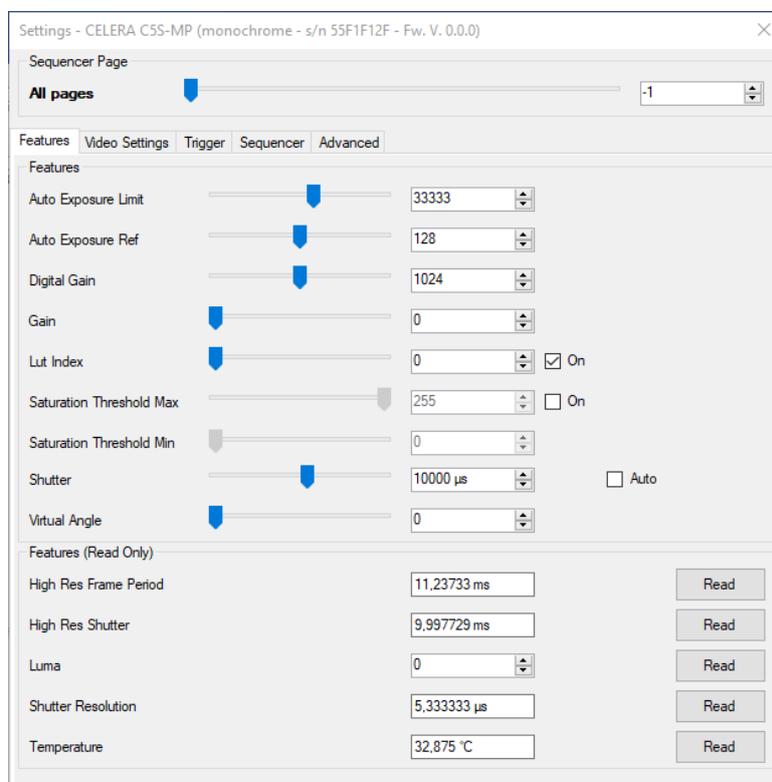


Figure 10.2: Features controller tab



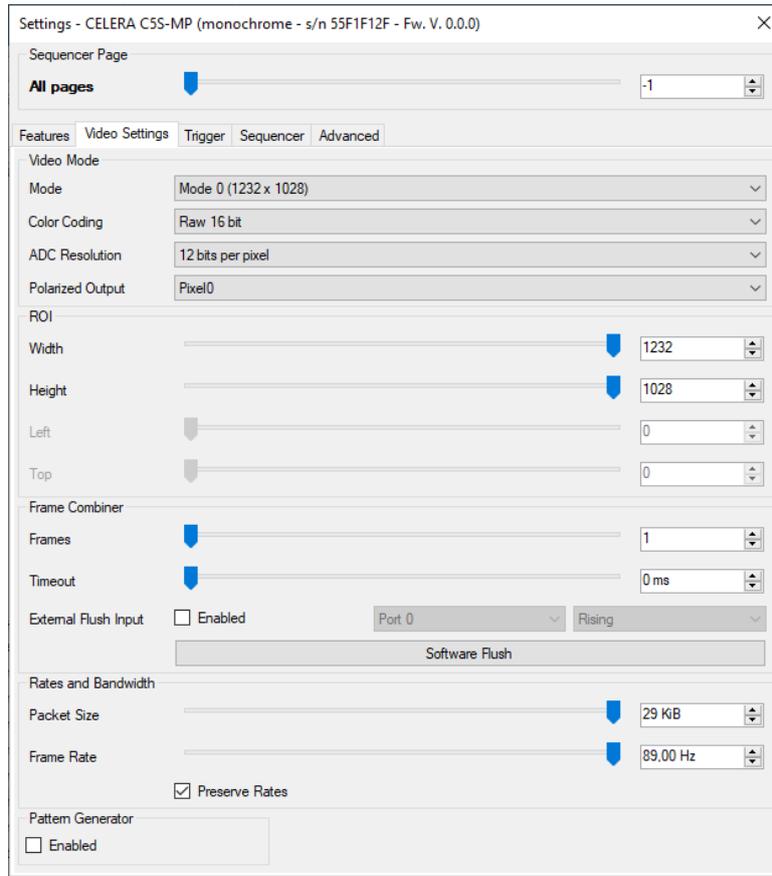


Figure 10.3: Video settings tab

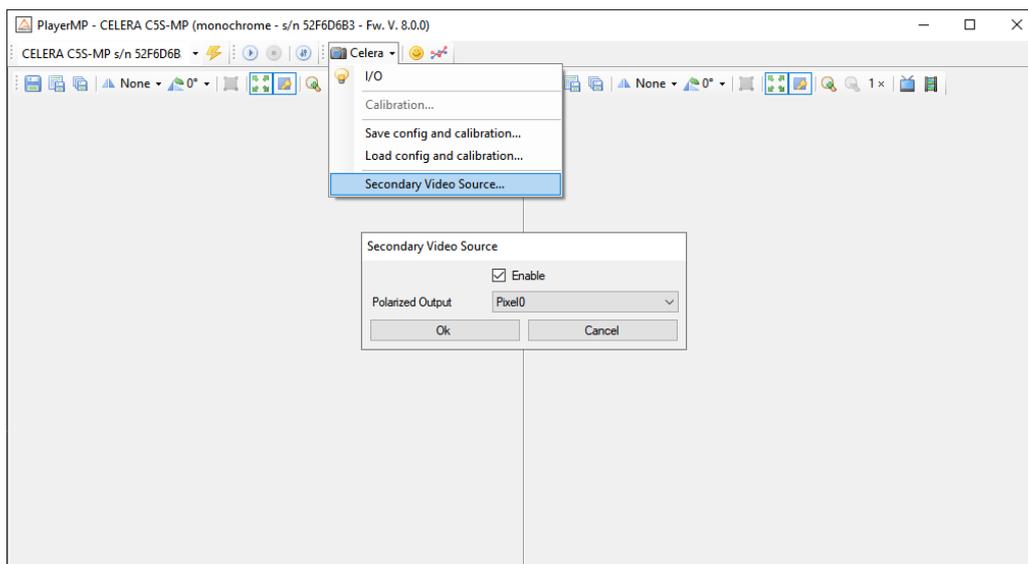


Figure 10.4: Secondary video source panel



10.3.4 Trigger

The Trigger panel (Figure 10.5) allows to setup the Trigger Manager module. Various events can be triggered, either via software or external sources (I/O):

- Acquisition start;
- Frame start;
- End of exposure.

The selected trigger can be enabled by ticking the checkbox on the right of the panel. Drop-down lists can be used to select trigger source, delay and encoder step interval.

The bottom part of the panel contains other useful controls: Encoder (see Section 4.4.1) and PLL (Frequency Multiplier, see Section 4.4.2) setup. The Frame Burst bar controls how many frames are acquired during a frame burst when the Acquisition Start Trigger is enabled (see Section 6.1).

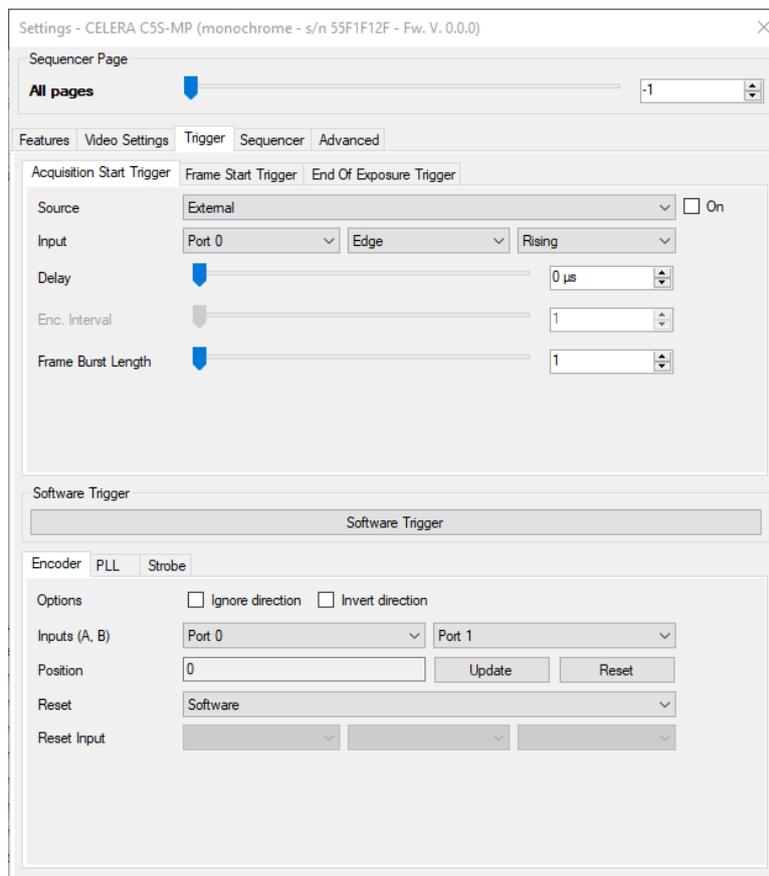


Figure 10.5: Trigger tab showing trigger modules

10.3.5 Alkeria Advanced Sequencer

The Sequencer panel (Figure 10.6) allows you to setup the Sequencer module (refer to Chapter 9)



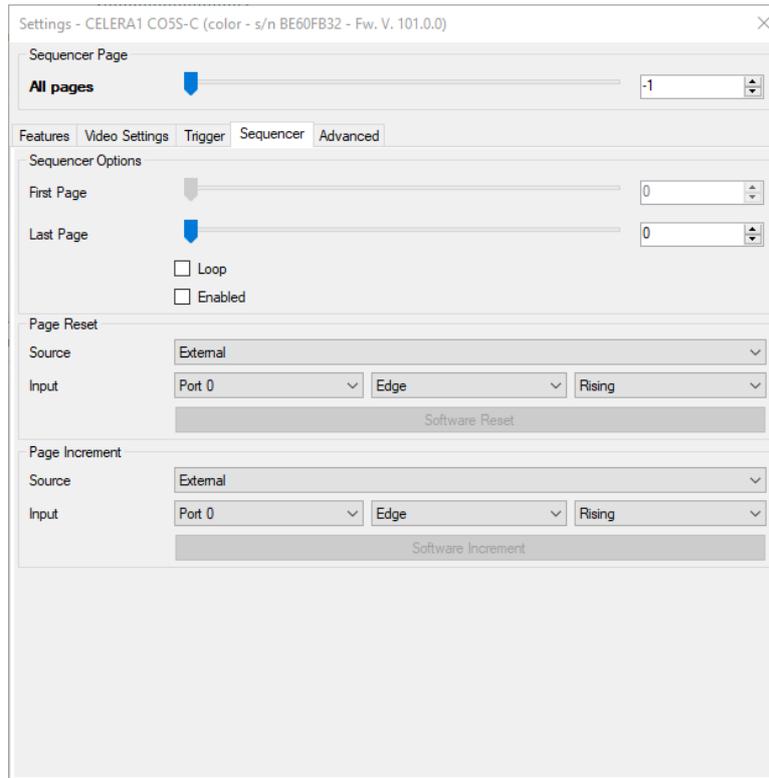


Figure 10.6: Alkeria Advanced Sequencer tab showing sequencer settings

10.3.6 Advanced features

The advanced feature tab (Figure 10.7) contains additional options to configure the USB channel settings. Changing these values may prevent the camera from working correctly.

The Bandwidth Limit control allows you to increase the upper bandwidth limit used by USB 3.2 Gen 1x1 connection. The maximum value you can set is 48 KiB per micro-frame (see Section 8.5).

Note



Not all host controllers support the maximum theoretical speed. Due to this, the camera has a default limit of 32 KiB per micro-frame, that can be overridden according to your setup.

Note



The checkbox *Use Bulk Endpoint* switches the USB interface between isochronous and bulk endpoint (see Section 2.4).

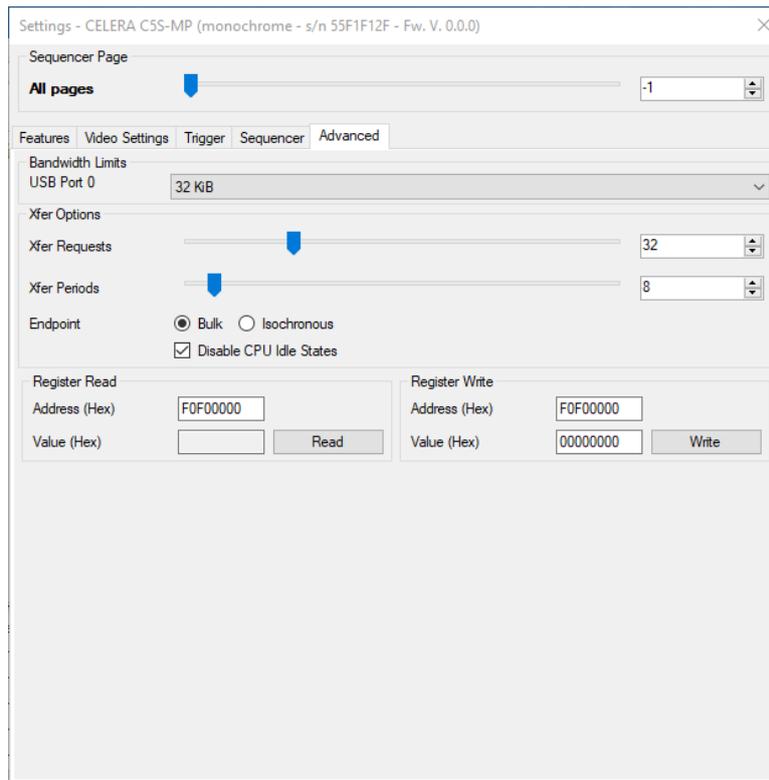


Figure 10.7: Advanced settings tab

10.4 SAVE SEQUENCE PANEL

The *Save Sequence Panel* allows to save on the disk a sequence of frames captured by the camera, with specific parameters (Figure 10.8).

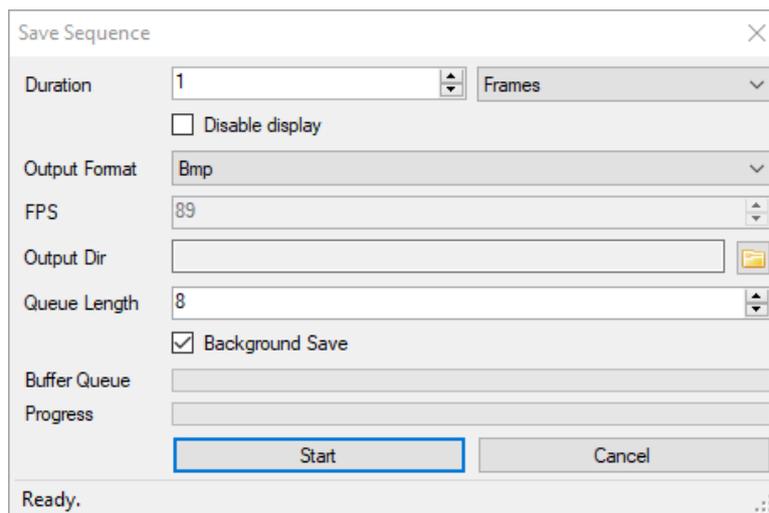


Figure 10.8: Save Sequence panel

The *Duration* entry allows to specify the sequence length either in number of frames or in seconds. When the *Output Format* is a still image format, such as Bmp, every frame will be saved in a new file. If the output format is set to AVI, a single video file is produced.



User may specify the video frame rate in the *FPS* entry.

The *Queue Length* control determines the number of frames pre-allocated in RAM during capture. If the *Background Save* checkbox is unchecked, frames will be saved when the RAM queue is full. Otherwise, frames will be automatically saved on the disk.

Note



High Queue Length values may cause a high consumption of RAM, depending on the frame size, which can interfere with the acquisition or the stability of the system.

10.5 DISPLAY OPTION PANEL

When clicking on the “Display Frames” button on the Player toolbar, a panel will open. This panel allow the user to set the maximum frame-rate to be displayed on the screen. It is possible to disable rendering on main UI by un-checking the “Display” checkbox. (Figure 10.9)

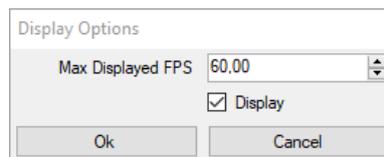


Figure 10.9: Display Options panel

10.6 CAMERA MENU

On the rightmost part of the toolbar you can find the Camera menu (Figure 10.10) containing camera-specific features.

10.6.1 Saving and Exporting Configuration

The Config menu allows to save and load camera configuration to and from the camera internal flash memory. Configuration can be exported and imported to and from xml files as well. See Section 8.7 for further information.



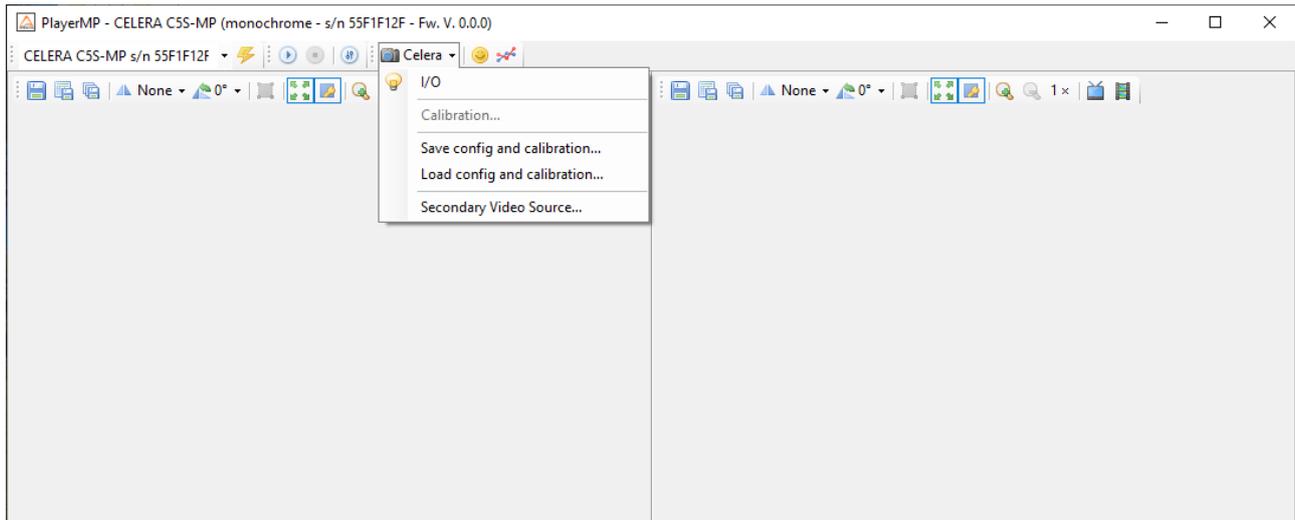


Figure 10.10: CELERA P specific features menu

10.6.2 I/O panel

The I/O panel (Figure 10.11) allows to control the I/O ports (see Chapter 4 for details).

Direction for the bidirectional port (Port 0) can be chosen by using the radio button on the top of the panel (Input / Output). Input ports allow enabling input termination (see Section 4.3.1), reading input status through the "Update" button and selecting input debounce time. The "Output Source" drop-down list allows to select how to route internal logical signals to the output pins.

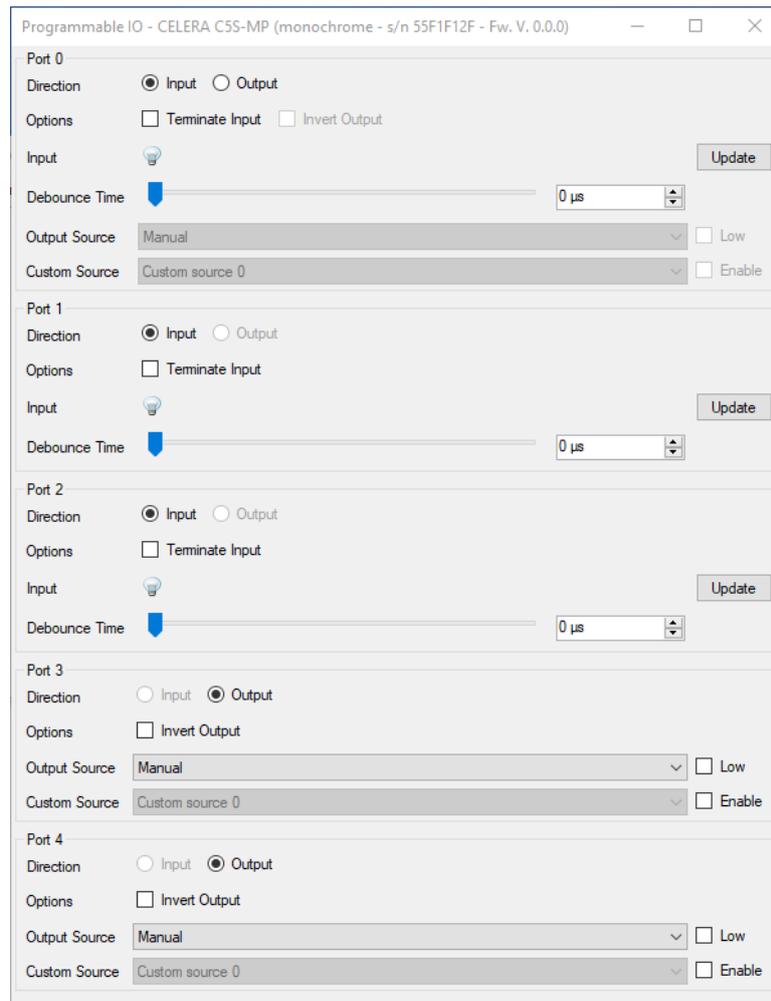


Figure 10.11: I/O control panel

10.6.3 LUT Editor

A LUT is a function that you can apply to each frame color channel, digitally modifying the camera response. This function is applied directly in hardware by the camera (see Section 8.6.4). The GUI panel shown in figure 10.12 allows you to edit and apply your custom LUT. Each channel has its own function which can be edited individually by selecting the corresponding radio button on top of the graph (only one function is available for monochrome cameras). The points in the graph, which can be added by either double clicking or by using the context menu on the *LUT* area, allow to shape the LUT based on their position and their type. The position of each point can be changed either by dragging it or by using the *X/Y* numeric boxes on the bottom of the panel. Each point can be either of type *spline* (default) or *sharp*, and it can be switched using the context menu of each point. The GUI allows for mixed types of point to better control the overall shape of the LUT. The top bar *LUT* menu allows to save or load the current LUT to file and to save it in the available flash LUT slots. The Edit menu provides functions to reset the shape and to enable the live displaying on the camera (Auto Preview/Preview).

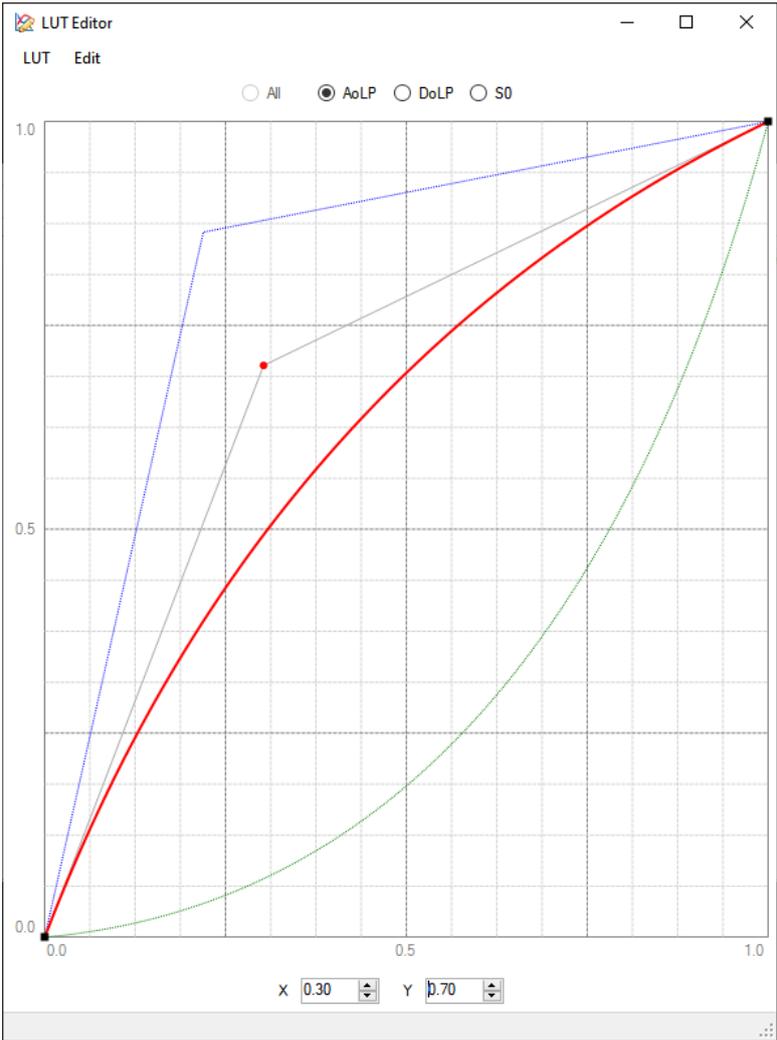


Figure 10.12: LUT editor GUI



11

Warranty

Unless otherwise agreed, CELERA P cameras are guaranteed for 24 months from the date of purchase. The warranty covers any defects due to production and conformity, not due to misuse, tampering or negligence by the user. At discretion of the Alkeria SRL technical service, faulty device may be either repaired or replaced with another one with same characteristics.

11.1 RMA

Before sending a defective camera for repair, you should contact your dealer and follow the procedures for fault verification and in case returning the camera. If your country is not served by any Alkeria SRL distributor, you must apply directly to the Alkeria SRL technical service sending an e-mail to rma@alkeria.com, providing your personal details, model and serial number of the camera, along with a brief description of the fault. You will be contacted by Alkeria SRL for inspection and/or receive instructions to send the camera back for repairs. Any unauthorized material will be returned back to the sender.



12

Firmware Update

Alkeria SRL development team is constantly working to add new features to the CELERA P family.

When applying for MaestroUSB3 free download, CELERA P customers may be included in an SDK and firmware update notification mailing list. Subscribed users will be notified about new firmware versions available for their devices and will be able to update them, if interested.

Updates can be installed through the USB 3.2 Gen 1x1 connection using a PC running Windows 10 or Linux.



13

EMC certification and compliance

13.1 CE CONFORMITY



CELERA P cameras described in this manual comply with the requirements of the EC EMC Directive 2014/30/EU of February 26, 2014.


Testing standards:

- CEI EN 55032:2015 - CISPR32:2015: Electromagnetic compatibility of multimedia equipment - Emission requirements.
- CEI EN 61000-6-4:2007 + A1:2013 - IEC 61000-6-4:2006 + A1:2010: Generic standards - Emission standard for industrial environments (Class A device).
- CEI EN 55024:2013 + A1:2016 - CISPR 24:2010 + A1:2015: Information technology equipment - Immunity characteristics - Limits and methods of measurement.
- CEI EN 61000-4-2:2011 - IEC 61000-4-2:2008: Testing and measurement techniques - Electrostatic discharge immunity test.
- CEI EN 61000-4-3:2007 + A1:2009 + A2:2011 - IEC 61000-4-3:2006 + A1:2007 + A2:2010: Testing and measurement techniques - Radiated, radio-frequency, electromagnetic field immunity test.



- CEI EN 61000-4-4:2013 - IEC 61000-4-4:2012: Testing and measurement techniques - Electrical fast transient/burst immunity test.
- CEI EN 61000-4-6:2014 + AC:2015 - IEC 61000-4-6:2013: Testing and measurement techniques - Immunity to conducted disturbances, induced by radio-frequency fields.

13.2 FCC CONFORMITY - CLASS A (USA)

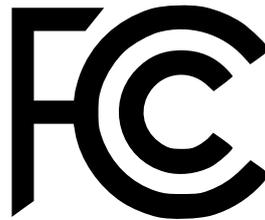

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

13.3 ICES-003 (CANADA)

Cet appareil numérique respecte les limites bruits radioélectriques applicables aux appareils numériques de Classe A prescrites dans la norme sur le matériel brouilleur: "Appareils Numériques", NMB-003 édictée par le Ministre Canadien des Communications.

"This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the interference-causing equipment standard entitled "Digital Apparatus", ICES-003 of the Canadian Department of Communications."

13.4 LIMITATION OF LIABILITY

The information in this manual is subject to change without notice. Alkeria SRL reserves the right to make improvements or changes to the devices and operating instructions at any time without prior notice. In no event shall Alkeria SRL be liable to the purchaser for any indirect, special or consequential damages or lost profits arising out of or relating to Alkeria SRL 's products, or the performance or a breach thereof, even if Alkeria SRL has been advised of the possibility thereof. Alkeria SRL 's liability, if any, to the purchaser or to the customer of the purchaser shall in no event exceed the total amounts paid to Alkeria SRL by the purchaser for a defective product. Some states do not permit the exclusion of incidental or consequential damages, and in those states the foregoing limitations may not apply. The warranties here give you specific legal rights, and you may have other legal rights which vary from state to state.

13.5 ROHS CONFORMITY


The CELERA P cameras comply with the requirements of the RoHS (Restriction of Hazardous Substances) Directive 2011/65/EU.



RoHS Compliant

13.6 INFORMATION FOR USERS

Alkeria SRL is committed to meeting the requirements of the European Union (EU) Waste Electrical and Electronic Equipment (WEEE) Directive. This Directive requires producers of electrical and electronic equipment to finance the take back, for reuse or recycling, of their products placed on the EU market after August 13, 2005. Alkeria SRL products are within the scope of the Directive and are labelled with a crossed-out “wheelie-bin” symbol, as required by the Directive. It indicates that the product was placed on the market after August 13, 2005 and that end users should segregate the product from other waste at end-of- life. All Alkeria SRL cameras have been manufactured after the 31st of August 2005.

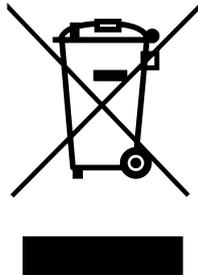

This symbol on Alkeria SRL product or on its packaging means that it should not be disposed of with your other household waste. It is your responsibility to dispose of your waste equipment separately from the municipal waste stream. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.

List of Acronyms

CMOS	Complementary MOS
ADC	Analog to Digital Converter
PLL	Phase Locked Loop
LMR	Light Meter ROI
ROI	Region Of Interest
LUT	Look-Up Table
ROI	Region-Of-Interest
API	Application Programming Interface



Example Code

3.1	Temperature Monitoring	33
3.2	Temperature Change Event	34
4.1	IO Power Supply selection	42
4.2	Input Change Event	44
4.3	Encoder ports configuration	54
4.4	Encoder position read	55
4.5	Encoder reset with external source	55
4.6	PLL configuration	56
4.7	PLL boundaries readout	56
4.8	Output inversion	58
4.9	Drive 24 V input signals	58
4.10	Output controlled via software	58
4.11	Exposure as P3 source	59
4.12	Strobe as P3 source	59
4.13	<i>Frame start trigger</i> as P3 source	60
4.14	<i>Frame start trigger ready</i> as P3 source	60
4.15	Custom signal 10 as P0 source	60
4.16	P0 configuration as input	61
4.17	P0 configuration as output	61
4.18	Serial interface output configuration	62
4.19	Big buffer send over serial interface	62
4.20	Serial interface input configuration	62
6.1	Get all selectable trigger sources	69
6.2	Usage of the <code>TriggerErrors</code> property	71
6.3	External trigger frame acquisition	72
6.4	Signal-driven exposure time	72
6.5	Encoder synchronization	73
7.1	Set LMR starting from $x = 256$, $y = 384$, and 512×800 pixels wide	74
7.2	Enable frame number chunk data field	76
7.3	Enable time stamp chunk data field	76
7.4	Enable encoder position chunk data	76
7.5	Enable input status chunk data captured at frame-start trigger event	77
7.6	Enable burst number chunk data field	77



7.7	Enable sequencer page chunk data field	77
7.8	Configure chunk data, capture a frame and display the relevant data	77
7.9	Configure chunk data, combine 10 frames, set 1 second timeout, flush operation triggered	78
8.1	Select camera video mode	79
8.2	Secondary video source in Video Mode 0	81
8.3	ROI configuring example	84
8.4	Set pixel format to RGB24	85
8.5	Set ADCResolution property to 10 bits	86
8.6	Sets a bandwidth limits of 32 KiB per microframe for each channel on CELERA P	88
8.7	Sets a bandwidth limits of 32 KiB per microframe on CELERA One P	88
8.8	Set PacketSize property	89
8.9	Set FrameRate property	92
8.10	Enable the PreserveRates functionality	92
8.11	Set Exposure time with unit factor	93
8.12	Get the exposure length, expressed in seconds	94
8.13	Set up automatic exposure	94
8.14	Set up automatic exposure	95
8.15	Set digital gain level	96
8.16	Store lut into the camera	97
8.17	Read the Luma value of the last image	98
8.18	Read the TimeStamp value	98
8.19	Flip the image diagonally	98
8.20	Rotate the image of 270 deg	98
8.21	Retrieve the maximum number of user configurations	99
8.22	Save and restore camera configuration and calibration	99
8.23	Erase configuration	99
8.24	Export camera configuration and calibration previously saved on camera memory	99
8.25	Load from XML and save into camera memory	100
8.26	Set camera's main parameters and enable live acquisition	100
8.27	Enable pattern generator	100
9.1	Sequencer setup example	102
9.2	sequencer loop from page 2 to 4	103
9.3	Manual sequencer <i>page</i> selection	103
9.4	Sequencer page increment on external input event	104
9.5	Configure sequencer to drive two different illuminators	105
9.6	Configure port 1 as frame start trigger	106
9.7	Configure sequencer to split image field	107





Via Giuntini 25, int. 36
56021 Cascina (PI) - ITALY
www.alkeria.com