

Optronis CoaXPress Cameras
CamPerform CP70 Series

User Manual

CP70-16-M/C-148



CoaXPress

About this manual

Thank you for using an Optronis product.

The purpose of this document is to provide a description of Optronis CP70-16-M/C-148 camera.

Please read this manual thoroughly before operating your new camera for the first time. Please follow all instructions and observe warnings.

This document is subject to change without notice and corresponds to the last camera firmware version.

You can check product page download area to be sure you are using:

- Last Datasheet version
- Last Manual version
- Last Firmware version
- Last Firmware Update software version
- Last CAD data version

<https://optronis.com/en/products/camperform-cp70-16-m-c-148/>

Support

We hope that this manual can answer your questions, but should you have any further questions or if you wish to claim a service or warranty case, please contact your local dealer or refer to the Optronis support. You can contact our support by using our website or by email at the following address: support@optronis.com. To process your request efficiently please prepare following information:

- Camera Model name: CPX0-XX-M/C-XX. (See label at the bottom side of the camera).
- Serial-Number: 1xxx-ST-XXX. (See label at the bottom side of the camera).
- Frame Grabber Model
- Cable type (BNC or Din 1.0/2.3, adapter types...)
- Operating System (Windows 7/10/32bit/64bit ...)
- Short description of the problem

Contacts

To contact us, please use the information below.

Address	OPTRONIS GMBH Ludwigstr. 2 D-77694 Kehl Germany Tel.: +49 (0) 78 51/91 26-0 / Fax: +49 (0) 78 51/91 26-10
Website	http://optronis.com/en/
Contact Form	http://optronis.com/en/kontakt/
General Inquiries	info@optronis.com
Sales	sales@optronis.com
Support	support@optronis.com

Table of Contents

1	General.....	6
1.1	Declaration of Conformity.....	6
1.2	RoHS Compliance	7
1.3	Standards	7
1.4	Remarks.....	7
1.5	Scope of Delivery.....	7
2	Getting Started.....	8
2.1	General Precautions.....	8
2.1.1	Environmental Conditions	8
2.1.2	Camera Handling.....	8
2.2	Setting Up System	9
2.2.1	Typical System Configuration	9
2.2.2	Set Up Lenses.....	9
2.2.3	Optical Considerations.....	10
3	Camera Overview	11
3.1	Model Description.....	11
3.1.1	Model Name and Options.....	11
3.2	Technical Data.....	12
3.2.1	General Info	12
3.2.2	Mechanical Drawings - Dimensions and Mounting Points	12
3.2.3	Glass Filter.....	13
4	Camera Main Features	14
4.1	Frame Format.....	14
4.1.1	Supported Pixel Formats.....	14
4.1.2	Single ROI	14
4.1.3	Dual ROI	15
4.2	Available CXP Configurations	16
4.3	Acquisition Control - Frame Generation and Synchronization	17
4.4	Frame Rate and Exposure	18
4.4.1	Synchronization timings.....	19
4.4.2	Max & Min FPS.....	20
4.4.3	Max & Min Exposure Time.....	20
4.5	Sync Out Output.....	20
4.6	Image Enhancement	21

4.6.1	Flat Field (FFC) Correction.....	21
4.6.2	Hot Pixels Correction	22
4.6.3	Gain	22
4.6.4	Gain2.....	22
4.6.5	Analog Offset	22
4.7	Counter Information	23
4.8	Save User Configuration to Flash	23
5	Camera Hardware Interface.....	24
5.1	Connectors and LED	24
5.1.1	Identify Connectors and LED Positions	24
5.1.2	Powering Camera.....	24
5.1.3	CoaXPress Connectors	25
5.1.4	Auxiliary Connector.....	26
5.1.5	CoaXPress Status LEDs	28
6	Camera Control Interface.....	29
6.1	GenICam XML Interface	29
6.1.1	CoaXPress GenICam Compliant Interface.....	29
6.1.2	XML Entry Access Mode.....	29
6.1.3	XML Entry Types Description	29
6.1.4	XML Entry Allowed Values	29
6.1.5	XML Masked Values.....	30
6.1.6	Acquisition/Live Stop Required.....	30
6.2	XML Main Entries - Features Description.....	31
7	Firmware Update	36
8	Revisions.....	37
8.1	Manual Revision	37
8.2	Firmware Revision.....	37

Table of Figures

Figure 1: Typical System	9
Figure 2: Field of View	10
Figure 3: Camera Model Name Decoder	11
Figure 4: Camera Serial Number Decoder	11
Figure 5: CP70 Dimensions (with F-Mount option)	12
Figure 6: Glass Filter typical transmittance (1830-SS-10 IR Filter).....	13
Figure 7: Camera Single ROI control	15
Figure 8: Camera Dual ROI control	15
Figure 9: Camera output image when using dual ROI	16
Figure 10: Sync Timings	19
Figure 11: CP70 HW Identification.....	24
Figure 12: CP70 Power Connector	25
Figure 13: CP70 Auxiliary Connector	26
Figure 14: Sync In Input Schematics	27
Figure 15: Sync Out Output Schematics	27
Figure 16: Camera Series Selection	36
Figure 17: Software Interface	36

1 General

1.1 Declaration of Conformity



Declaration of Conformity

In accordance with the EU directive 2014/30/EU (electromagnetical compatibility) of 26. February 2014

Hereby we explain that those corresponds to below designated products in its conception and design as well as in circulation the execution the fundamental safety and health requirements of the Community directive 2014/30/EU brought by us. In the case of a change of the product not co-ordinated with us this explanation loses its validity.

Manufacturer: Optronis GmbH
Ludwigstr. 2
D-77694 Kehl

Authorized person Dr. Patrick Summ
(Managing Director)

Description of the electrical equipment:

function: Machine Vision Kamera
type / modell: CP70-1-M-1000
serial number: 1875-ST-010

The agreement with further valid guidelines / regulations following for the product is explained:

EMV Directive (2014/30/EU) of 26. February 2014

Reference to the harmonized standards:

DIN EN 61326-1:2006-10
Electrical equipment for measurement, control and laboratory use
– EMC requirements -
Part 1: General requirements

Date: 8. August 2016

Personal data of the signer: Dr. Patrick Summ

Signature:



1.2 RoHS Compliance



CamPerform CP70-16-M/C-148 cameras are Pb free manufactured.

1.3 Standards

The camera has been developed according to following standards:

- CoaXPress Standard Version 1.1.1 - JIA CXP-001-2015
- GenICam SFNC 2.3
- GenICam PFNC 2.1

1.4 Remarks

The following signs are used in this user manual to highlight some information:



Remarks and additional information.



Attention, warnings.

1.5 Scope of Delivery

The camera is delivered together with:

- Brief Introduction

Available accessories are:

- Lens mount:
 - C-Mount lens adapter
 - F-Mount lens adapter
 - G-Mount lens adapter
 - M42x1 lens adapter
 - M42x0.75 lens adapter
 - Custom mounts on request
- Pigtail cable CP70, CP90
- Power supply CP70, CP90
- Programming cable CP70, CP90

2 Getting Started

2.1 General Precautions

2.1.1 Environmental Conditions

Recommended environmental conditions are:

Temperature range during operation: < + 40°C / ~ + 104°F (ambient temperature)
> 0°C / ~ + 32°F (ambient temperature)

Humidity: < 80%



Optronis does not guaranty camera operation beyond above conditions and camera lifetime might be reduced.

2.1.2 Camera Handling

Please be careful when using camera. Pay attention especially to:

Camera power	Please be careful when powering camera. Use power over Coaxpress (PoCXP) or delivered external power supply (option).
Temperature and Humidity	Please respect recommended conditions. You may use controlled airflow or heatsinks to keep camera in better temperature conditions.
Direct sun light	Please avoid direct-sun light, camera sensor may be damaged.
Dust and Cleaning	The camera is produced in a dust-controlled environment. Please be careful when changing lens, mount or accessing any part close to the sensor. Always unplug the camera before cleaning it. Do not use cleaning liquids or sprays. Instead, use a dry and soft duster.



Do not open the housing of the camera.
Warranty becomes void if the camera housing is opened.

2.2 Setting Up System

2.2.1 Typical System Configuration

A typical system with Optronis CoaXPress camera is composed of:

- An Optronis CoaXPress camera
- CoaXPress cables
- An acquisition and control system (a CoaXPress Frame Grabber in a PC)
- A Control Software based on Frame Grabber features
- Optional features (External power supply, External synchronization system, etc...).

Here is an illustration of such a system:

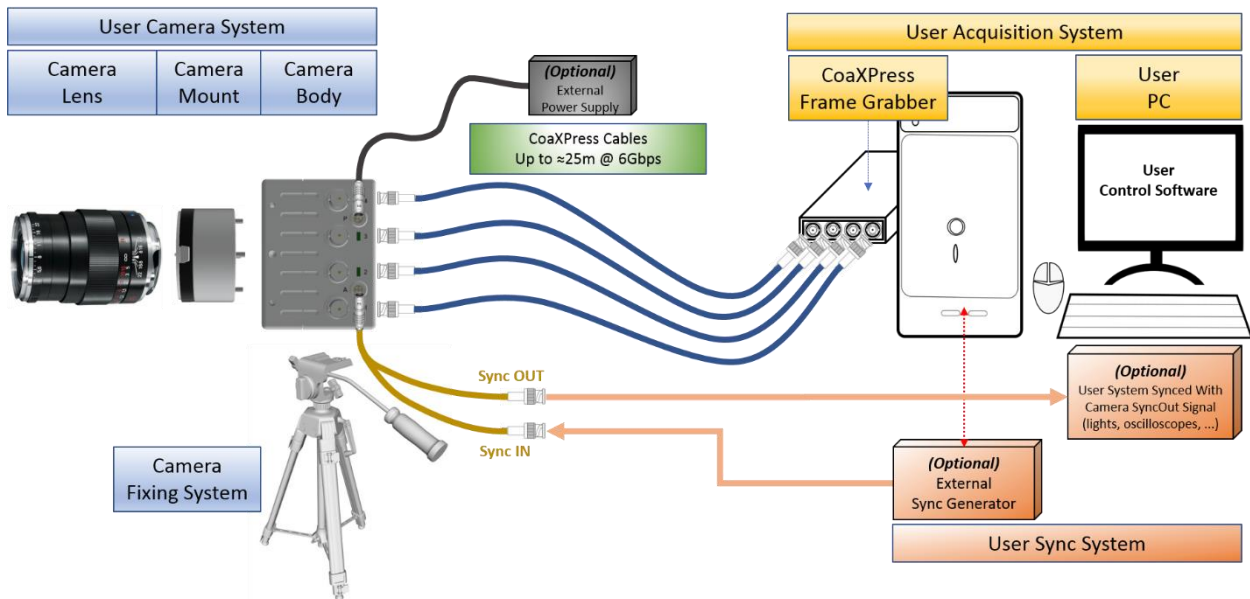


Figure 1: Typical System

2.2.2 Set Up Lenses

Please be careful when installing or removing camera lens. Depending on your lens mount type and lens, pay attention to following points:

- If your lens has a mounting mark, first align lens-holder and lens mounting marks and then rotate anti-clockwise to lock the lens. To remove the lens, unlock the lens-holder silver clip and rotate clockwise until marks are aligned. Then remove the lens.
- If your lens has a screw thread, rotate anti-clockwise to remove it and clockwise to installing it.
- If you are removing the lens from the camera, always use a cap on the camera to avoid dust infiltration. Use also caps on both lens sides for the same reason.
- Do not forget to remove the cap of your lens before using the camera.

2.2.3 Optical Considerations

A typical optical system can be represented as below.

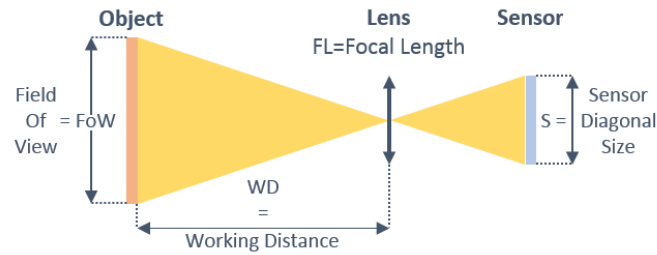


Figure 2: Field of View

Using above notations:

The sensor size depends on frame dimension:

$$\text{Sensor Diagonal Size} = S = \text{PixelSize} \times \sqrt{\text{Resolution}_X^2 + \text{Resolution}_Y^2}$$

To select a lens, you can use the following formula:

$$\text{Focal Length} = FL = \frac{WD}{1 + \frac{FoW}{S}} \text{ (distances in millimeters)}$$

Alternatively, if you already have a lens, you can compute working distance using the following formula:

$$\text{Working Distance} = WD = FL \times \left(1 + \frac{FoW}{S}\right) \text{ (distances in millimeters)}$$

Examples:

- PixelSize = 0.008mm
- Full resolution 1696 x 1708
- FoW = Object size = 100 mm
- WD = 300 mm

$$S = 0,008 \times \sqrt{1696^2 + 1708^2} = 19,26 \text{ mm}$$

$$FL = \frac{300}{1 + \frac{100}{19,26}} \sim 48,5 \text{ mm}$$

⇒ Selected focal length = 50 mm.

Same example but using a 35mm lens.

$$WD = 35 \times \left(1 + \frac{100}{19,26}\right) \sim 217 \text{ mm}$$

⇒ Object must be set at least at WD = 217 mm.

3 Camera Overview

3.1 Model Description

3.1.1 Model Name and Options

CamPerform camera series decoding information are illustrated here after. Check camera label on the bottom side to get both:

- Ref.: Camera Model Name (see Figure 3)
- S/N.: Camera Serial Number (see Figure 4)

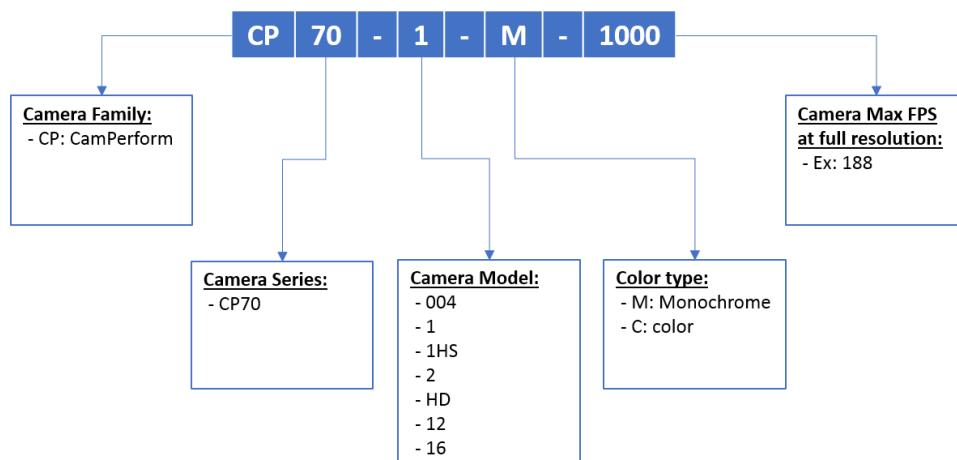


Figure 3: Camera Model Name Decoder

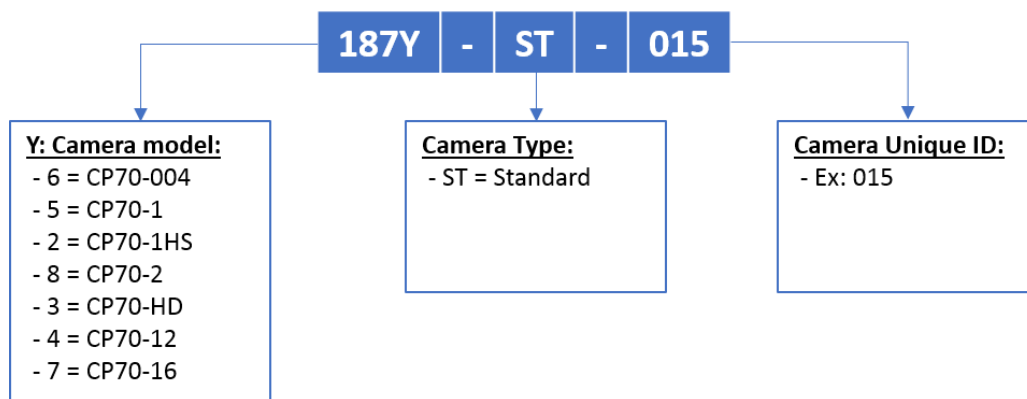


Figure 4: Camera Serial Number Decoder

3.2 Technical Data

3.2.1 General Info

Feature	Comments
Sensor type	LUX160, Global Shutter
Resolution	4672 x 3416
Frame rate @ max. sensor res	20 .. 148 fps
Exposure Time	4 μ s .. 1/Framerate
Active Area / Diagonal	18.221 mm x 13.322 mm / 22.572 mm
Pixel Size	3.9 x 3.9 μ m
A/D conversion	8 Bit
Sensitivity	5V/lux*s @550 nm
Synchronization	Internal, external, CoaXPress
Synchronization signals	Synch IN and Synch OUT, TTL level, electrically isolated
Interface	CoaXPress 1.1 (4ch, CXP-6), DIN 1.0/2.3 connectors
Power	< 10W, PoCXP, ext.
Operating ambient temperature	0 .. +40°C / 32 .. 104°F
Weight	400g without mount
Dimensions	85mm x 85mm x 49mm (3D model data available)
EMVA1288 camera measurements (typ. Preliminary)	
Dynamic range	55 dB
Saturation capacity	7800 e-
Temporal dark noise	10 e-
System gain	34 e-/DN
Signal-to-Noise Ratio	39 dB
DSNU	135 e-
PRNU	2 %
Non-linearity error LE _{min} , LE _{max}	1 %

3.2.2 Mechanical Drawings - Dimensions and Mounting Points

3.2.2.1 *CP70 Mechanical Dimensions (with F-Mount - /FM option)*

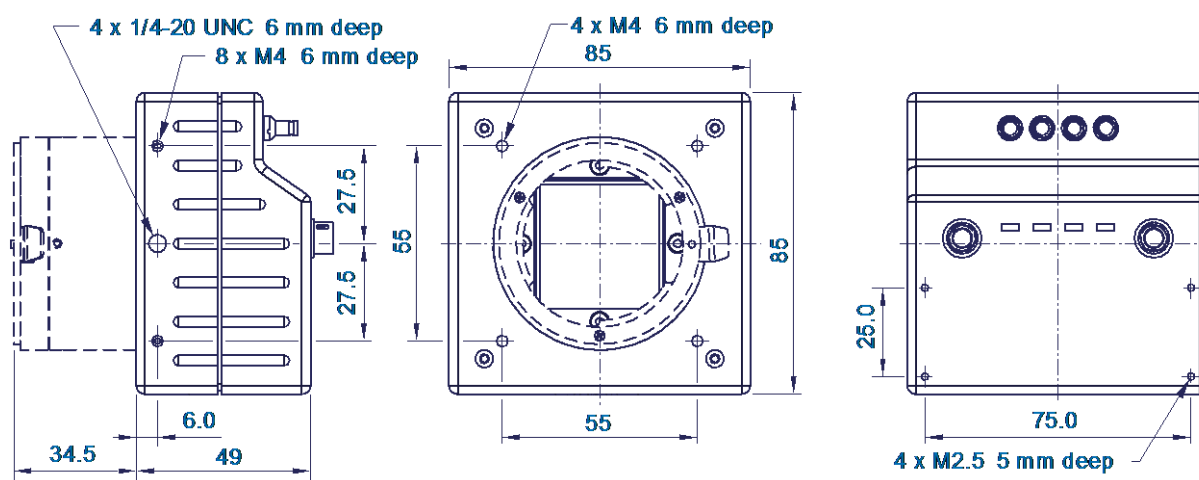


Figure 5: CP70 Dimensions (with F-Mount option)

3.2.3 Glass Filter

Color cameras (CP70-12-C-188 model) are delivered with an IR filter placed in front of the sensor. Its typical transmittance is illustrated on Figure 6.

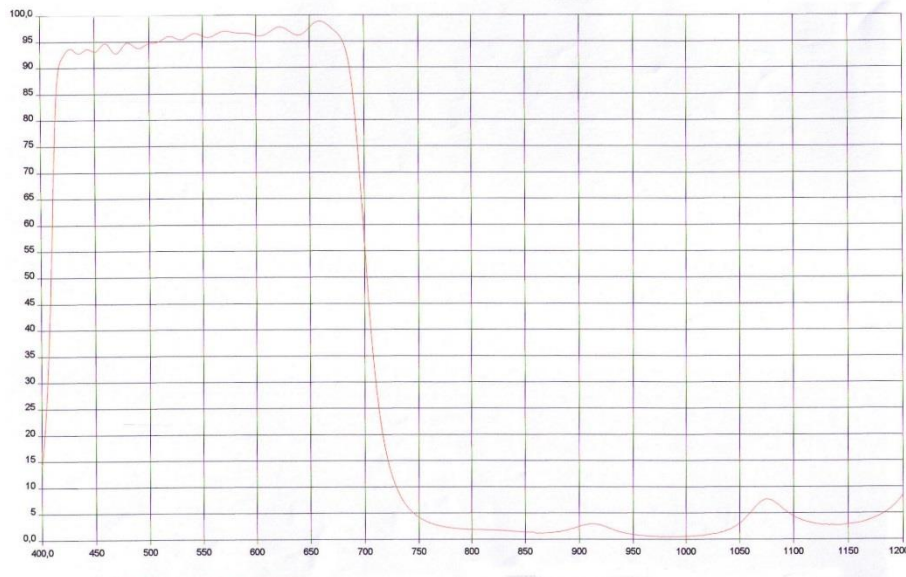


Figure 6: Glass Filter typical transmittance (1830-SS-10 IR Filter)

4 Camera Main Features

This paragraph describes camera main features and how they can be used. It focuses on principles and overall understanding of these features. The camera control interface and specific values used to access these features are detailed in later paragraph ["6.2. XML Main Entries - Features Description, page 31"](#).

As explained later, these features are controlled by an XML file divided in "entries". *XML entries* are using this special text font for better identification in this paragraph.

Please check also ["6.2. XML Main Entries - Features Description, page 31"](#) paragraph to have a precise description of allowed values for each entry.

4.1 Frame Format

4.1.1 Supported Pixel Formats

The camera supports the following pixel formats:

- Mono 8
- Bayer RG8 (Color cameras only)

Pixel format is controlled by XML entry:

- *PixelFormat*

4.1.2 Single ROI

The full frame resolution of the camera is:

- 4672 x 3416

The resolution can be reduced in both directions. Resolution is controlled by XML entries:

- *Width / WidthMax*
- *Height / HeightMax*

When reducing the resolution, the ROI is centered in both directions by default. ROI position is controlled by XML entries:

- *OffsetX*
- *OffsetY*

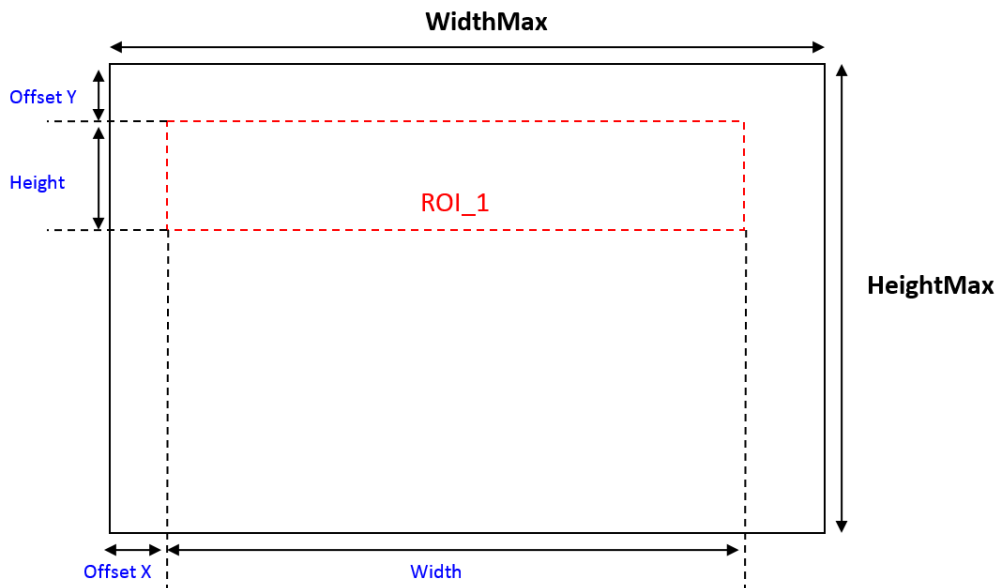


Figure 7: Camera Single ROI control

4.1.3 Dual ROI

4.1.3.1 Dual ROI control

Dual ROI mode is controlled by XML entries:

- *DualROI Mode*
- *Width / OffsetX*
- *Height_ROI1 / ROI1_OffsetY / HeightMaxROI1 / ROI1_OffsetYMax*
- *Height_ROI2 / ROI2_OffsetY / HeightMaxROI2 / ROI2_OffsetYMin / ROI2_OffsetYMax*
- *(Height = Height_ROI1 + Height_ROI2, automatically computed, refresh XML interface if it is not automatic)*
-

The figure here after (Figure 8) shows how to use these entries.

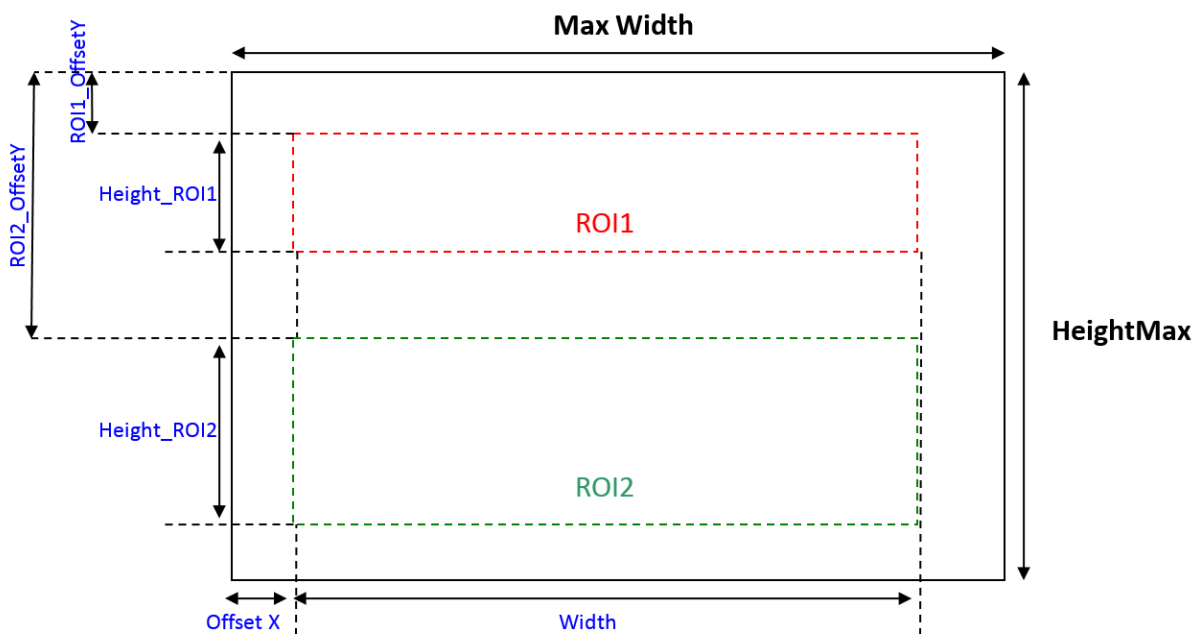


Figure 8: Camera Dual ROI control

4.1.3.2 Enabling and Configuring dual ROI

To enable and use dual ROI:

- Stop Acquisition
- Set *Width / OffsetX* according your needs. Both ROI share the same *Width / OffsetX*.
- Set *DualROI Mode* to "On"
- Set ROIs parameters *Height_ROI1 / ROI1_OffsetY* and *Height_ROI2 / ROI2_OffsetY* following these rules
 - ⇒ $(\text{Width} + \text{Offset X}) \leq \text{WidthMax}$
 - ⇒ $(\text{Height_ROI1} + \text{ROI1_OffsetY}) < \text{ROI2_OffsetY}$
 - ⇒ $(\text{Height_ROI1} + \text{ROI1_OffsetY}) + (\text{Height_ROI1} + \text{ROI1_OffsetY}) \leq \text{HeightMax}$
- Refresh interface to get updated $\text{Height} = \text{Height_ROI1} + \text{Height_ROI2}$.
- To disable Dual ROI mode, Set *DualROI Mode* to "Off"

4.1.3.3 Dual ROI output Image

When using the Dual ROI mode, the output image send to the Frame Grabber is one image composed by the 2 ROIs with:

Output width = *Width*.

Output height = $\text{Height} = \text{Height_ROI1} + \text{Height_ROI2}$.

It is up to Frame Grabber application to separate ROIs according dual ROI parameters.

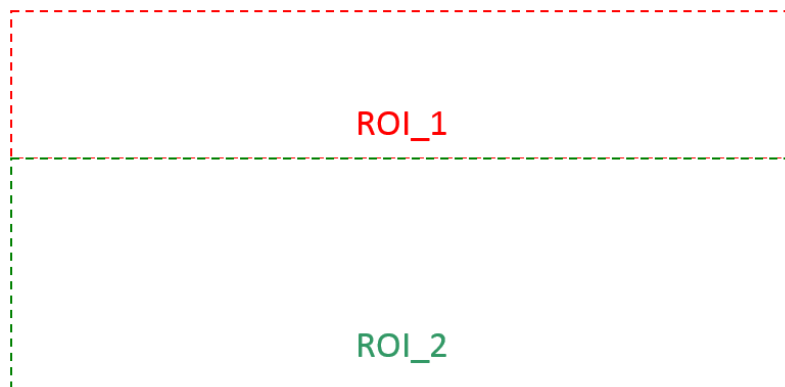


Figure 9: Camera output image when using dual ROI

4.2 Available CXP Configurations

The CoaXPress standard allows a lot of different configurations (number of cables, transfer rates, ...). You may want to change it to fit your system needs.

This camera is compatible with:

- **CXP6_X4 = 4 links at 6Gbps (default configuration)**

CXP configuration is controlled by XML entry:

- *ConnectionConfig*



Using a lower transfer rate allows longer cable length.

4.3 Acquisition Control - Frame Generation and Synchronization

The camera frame acquisition is controlled by using camera XML AcquisitionStart and AcquisitionStop commands.

The camera frame acquisition can be synchronized by 3 different ways:

- **Camera Internal Generator:** (*AcquisitionMode* = “Continuous”)

In this mode, the camera uses its own sync generator and generates frames continuously when acquisition is started. Frames are generated according to *AcquisitionFrameRate* value. Please check next paragraph “4.4 Frame Rate and Exposure, page 18” for more information about frame rate and exposure control.
- **External Synchronization Generator:** (*AcquisitionMode* = “Single Frame”)

In this mode, the camera uses an external signal to generate frames. You must apply a TTL signal the Sync In input of the camera. Please respect signal limits (current and voltage) and use the Aux. to BNC adapter or respect Aux. connector pinout (Hardware information in “5.1.4. Auxiliary Connector, page 26” paragraph). Please check next paragraph “4.4 Frame Rate and Exposure, page 18” for more information about frame rate and exposure control.
- **Synchronization over CoaXPress by Frame Grabber:** (*AcquisitionMode* = “CoaxPress”)

CoaXPress standard allows Frame Grabber synchronizing camera frame generation using specific packets called *trigger packets* sent on “CoaXPress uplink”. The frame grabber sends 2 kind of trigger packets: rising edge and falling edge trigger packets. It allows the camera to build a square synchronization signal:

 - Its period is the period of the rising edge trigger packets.
 - Its pulse width is the time difference between falling edge trigger packets and rising edge trigger packets.

So, it is very similar as using an external generator but controlled by user acquisition system (usually a PC + a CoaXPress frame grabber). Please check next paragraph “4.4 Frame Rate and Exposure, page 18” for more information about frame rate and exposure control.



Please check your Frame Grabber manual to use its trigger over CoaXPress mode.

Acquisition is controlled by XML entries:

- *AcquisitionStart*
- *AcquisitionStop*
- *AcquisitionMode*

4.4 Frame Rate and Exposure

- **Camera Internal generator:** (*AcquisitionMode* = “Continuous”)

Frame rate: In this mode, frame rate is defined by camera register and can be modified using camera XML control interface.

Exposure: In this mode, the exposure is defined by camera register and can be modified using camera XML control interface.
- **External Synchronization generator:** (*AcquisitionMode* = “Single Frame”)

Frame rate: In this mode, the frame rate is defined by the external TTL signal period. The allowed frame rate range is the same as in Internal Synchronization.

Exposure: In this mode, the exposure is defined by camera register and can be modified using camera XML control interface.
- **Synchronization over CoaXPress by Frame Grabber:** (*AcquisitionMode* = “CoaxPress”)

Frame rate: In this mode, the frame rate is defined by Frame Grabber “Trigger packets” period. The allowed frame rate range is the same as in Internal Synchronization.

Exposure: In this mode, the exposure is defined by camera register and can be modified using camera XML control interface.

Frame rate and exposure are controlled by XML entries:

- *AcquisitionFrameRate*
- *ExposureTime*

4.4.1 Synchronization timings

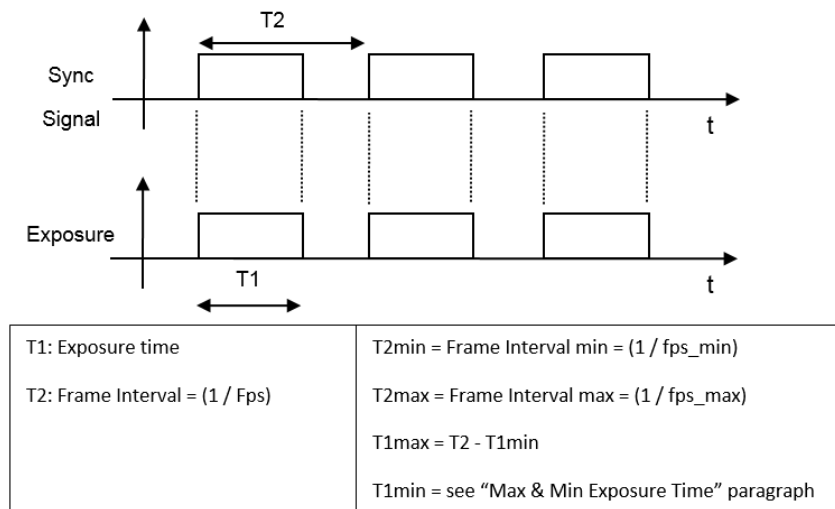


Figure 10: Sync Timings

4.4.1.1 @ Internal Synchronization

Timings are controlled by camera. Using XML interface range ensures that timings are respected.

4.4.1.2 @ External Synchronization

- T2 is controlled by user external generator signal period
- T1 is controlled by camera

4.4.1.3 @ Synchronization over CoaXPress

- T2 is controlled by CoaXPress frame grabber "signal" period
- T1 is controlled by camera

4.4.2 Max & Min FPS

Camera maximum FPS can be reached at default CoaXPress configuration. If you reduce CoaXPress speed (ex: CXP6 to CXP5 or CXP3), the maximum FPS is reduced.

Max_{FPS} = A frame rate calculator will be soon online on our Website.

You can contact Optronis support to get a Windows version of this frame rate calculator.

$$Min_FPS = 20$$

Maximum Frame Rate Examples (at default CoaXPress configuration):

PixelResolution_X	PixelResolution_Y	Max Frame rate
4672	3416	148
4672	512	988
4672	256	1968
4672	128	3907
4672	32	14939
4080	3072	187
4080	2048	281
2048	1024	1012
1024	512	2021
...
2048	32	30557

4.4.3 Max & Min Exposure Time

The maximum exposure time depends on current frame rate and can be calculated using this formula:

$$Min_Exposure = 4\mu s$$

$$Max_Exposure = \frac{1}{Framerate} - Min_Exposure$$

4.5 Sync Out Output

The camera output Sync Out delivers a TTL signal reflecting camera frame acquisition. External synchronization may be operated in level detection mode. Please see the external synchronization timing for more information about resulting frame rates and exposure times.

The Sync Out output can be used to synchronize other devices as e.g. additional cameras or external light flashes.

Using camera accessory “Pigtail cable” (BNC adapter) is the easiest way to use Sync Out signal.

Note that:

- Sync Out signal period is the real effective frame delivered by the camera.
- Sync Out signal high time is the effective exposure time done by the camera.

4.6 Image Enhancement

4.6.1 Flat Field (FFC) Correction

FFC correction is a column-based correction applied on all pixels. FFC correction consists in an FPN and a PRNU correction.

At power up, camera loads FFC data (= FPN and PRNU column coeff) from flash to RAM.

When enabled, each pixel is corrected using its column parameters.

FFC correction is computed using this formula:

$$FFC_{Correction}(x, y) = \left(\frac{PRNU_{Coeff}(x)}{128} \times (PixIn(x, y) - FPN_{Coeff}(x)) \right) + DMean$$

With:

- (x, y) = pixel coordinates in the frame ($x = [0..WidthMax]$ and $y = [0..HeightMax]$)
- $PixIn(x, y)$ = pixel value before FFC correction at co
- FPN_{Coeff} = FPN coefficient of selected column (= x coordinate)
- $PRNU_{Coeff}$ = PRNU coefficient of selected column (= x coordinate)
 - o Column (= x coordinate) is selected using XML entry [Correction_Coeff_X](#)
 - o Both FPN and PRNU coefficient are column dependent. They are stored in XML entry [Correction_Coeff_V](#) using bit masking:
 - Bit8..0 = PRNU_Coeff (valid values are 0..511)
 - Bit15..9 = FPN_Coeff (valid values are 0..127)

Ex: Correction_Coeff_V = 0x8301 => PRNUcoeff = 257 / 0x101 and FPNcoeff = 65 / 0x41
- $DMean$ = Offset value (valid values are 0..127). Same value for all pixels

Modifying FFC correction through XML interface is volatile and all FFC data will be lost at next camera power cycle.

To save all current FFC parameters and use them at next power up, user must use XML [FFCSaveToFlash](#) command. If current FFC is not saved, all user FFC data will be lost at next power cycle.

To delete any user saved FFC data in flash, user can use XML entry [FFCResetFlash](#). Camera will then use default firmware values.

FFC is controlled by XML entries:

- [Correction](#)
- [Correction_Coeff_X](#)
- [Correction_Coeff_V](#)
- [Correction_DMean](#)
- [FFCSaveToFlash](#)
- [FFCResetFlash](#)

4.6.2 Hot Pixels Correction

A hot pixel correction is computed during camera production for every camera and stored in camera flash. Up to 768 “hot pixels” can be corrected. This correction is enabled by default (“**On**”) and can be disabled (“**Off**”).

HotPixelCorrection is controlled by XML entry:

- *HotPixelCorrection*

4.6.3 Gain

An analog gain can be applied in case of low luminosity for example.

Gain is controlled by XML entry:

- *Gain*

Supported values are “x1”, “x1.5”, “x2” and “x4”.

4.6.4 Gain2

A 2nd analog gain offers a finest analog gain tuning by accessing directly a sensor gain voltage.

Gain2 is controlled by XML entry:

- *Gain2*

Supported values are 0 to 1000. Default value is 200.

4.6.5 Analog Offset

An analog offset can be applied to sensor

Analog offset is controlled by XML entry:

- *AOffset*

Supported values are integer from 0 to 3000. Default value is 80.

4.7 Counter Information

An optional counter information can be enabled.

When enabled (“**Yes**”), this counter information is integrated in the first pixels of every transferred frame and replace the first 40 bits (i.e. 5 pixels in Mono8 pixel format). This 40bit counter is built as follow:

- 16 first bits contain an image counter (incrementing with every frame transferred)
- 24 next bits contain a micro-second precision counter that indicates the time when the frame exposure has started.

When disabled (“**No**”), no information is integrated in the transferred frames and all bits are pixel data.

Counter Information is controlled by XML entry:

- *AddCounterInformation*

4.8 Save User Configuration to Flash

Camera can boot using a specific user configuration stored in its flash memory. At power up, the camera uses any user configuration previously saved. If no user configuration is there, the camera boots using the default factory configuration.

User configuration can be saved by calling command “SaveToFlashWithRebootAndWithoutAutoStart”.

A second command “SaveToFlashWithRebootAndWithAutoStart” save user configuration but also force live/acquisition start without requiring any frame grabber command. Beware that if frame grabber sends Connection Reset command (Default CXP behavior), the stream will be stopped and this “AutoStart” feature won’t be used.

To boot with default camera configuration, user configuration must be deleted by calling XML command “FactoryFlash”.

User configuration in camera flash is controlled by XML entries:

- *SaveToFlashWithRebootAndWithAutoStart*
- *SaveToFlashWithRebootAndWithoutAutoStart*
- *FactoryFlash*

5 Camera Hardware Interface

5.1 Connectors and LED

5.1.1 Identify Connectors and LED Positions

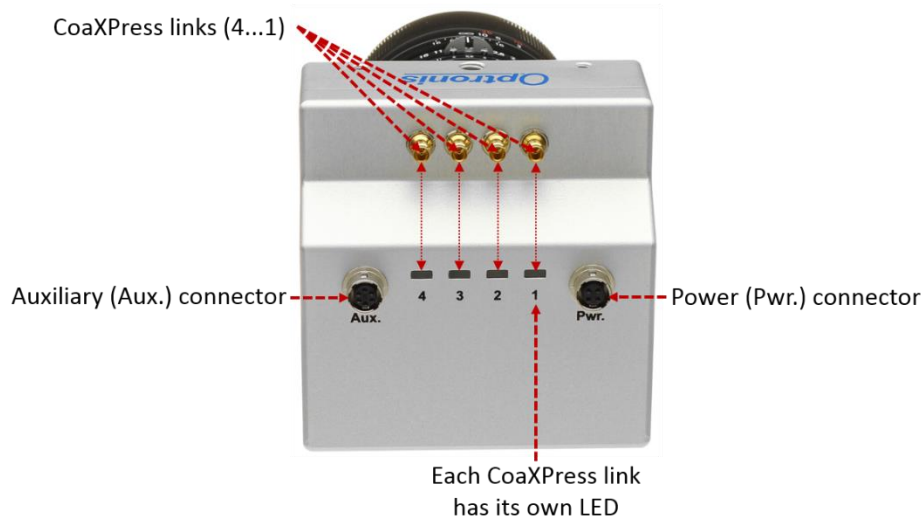


Figure 11: CP70 HW Identification

5.1.2 Powering Camera

Camera can be powered either by Power over Coaxpress (PoCXP) or using its external power connector.

5.1.2.1 *Using PoCXP*

When using PoCXP, the power is supplied by the Frame Grabber through CXP cable on cable n°1. Other cables are used only for data transfer.

Please refer to your Frame Grabber documentation for more information.

5.1.2.2 External Power Supply

Power connector is used to power camera when using an external power supply instead of power over CoaXPress feature (PoCXP).

The connector is labelled “Pwr” for CP70.

Optronis Camera accessory “Power supply” is recommended when using an external power supply. Alternatively, your power supply must respect bellow characteristics:

CP70 Series	
Connector info: Camera (P) connector type: <ul style="list-style-type: none"> • Hirose HR10A-7R-4S Cable Connector: <ul style="list-style-type: none"> • Hirose HR10A-7P-4P 	
Connector View: <div style="text-align: center;"> </div>	
<small>Figure 12: CP70 Power Connector</small>	
Connector Pinout:	
Pin 1, 2: VCC	+24Volt +/-5% (Ripple < 200mV) Inrush Current ~0,6A
Pin 3, 4: GND	Power Ground

5.1.3 CoaXPress Connectors

CP70 Series	
Connector info: 4 x 75 Ω 1.0/2.3 DIN connector. Compliant with IEC 61169-29, as required by CoaXPress specification.	
Remark: Connectors are labelled from 1 to 4	


5.1.4 Auxiliary Connector

Auxiliary connector is used to access camera Sync In and Sync Out IOs and for firmware updates.

The connector is labelled “Aux” for CP70.

Camera accessory “Pigtail cable” gives user 2 x 50-ohm BNC connectors to access Sync IN and Sync Out signals.

Camera accessory “Programming cable” allows an USB connection to a PC for firmware updates.

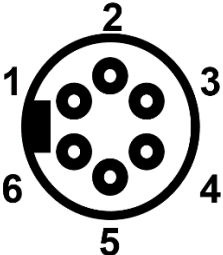CP70 Series	
Connector info: Camera (A) connector type: <ul style="list-style-type: none"> • Hirose HR10A-7R-6S Cable Connector: <ul style="list-style-type: none"> • Hirose HR10A-7P-6P 	
Connector View: <div style="text-align: center;">  </div>	
<small>Figure 13: CP70 Auxiliary Connector</small>	
Connector Pinout:	
Pin 1: Sync IN	External Synchronization Input. TTL level: < 0,8 Volt (low) > 2 Volt (high)
Pin 2: Reserved	
Pin 3: Sync Out	External Synchronization Output. TTL level @ high impedance, 0 to 2 Volt @ 50 Ohm.
Pin 4,5,6: GND	Ground

5.1.4.1 Sync In

The Sync In camera input is TTL adapted (high impedance). To adapt to 50 Ohm, please add an external 50 Ohm termination. The input principle is described by Figure 14.

To operate Sync In correctly, a Sync In driver has to be used with a minimum sink current (TTL low level) of 5mA.

Source Current (TTL High Level) of the Sync In Driver is negligible (0mA)



Sync In input voltage limits are: [-5V ⇔ +30V].
Voltages beyond these limits may damage camera.

Easiest driver circuit is a transistor working in open collector configuration.

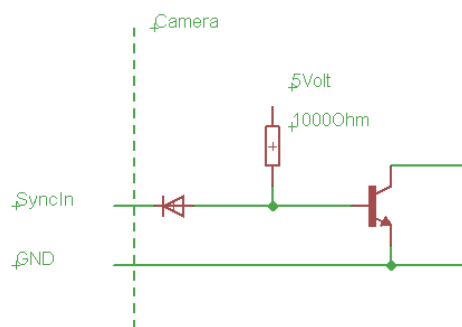


Figure 14: Sync In Input Schematics

5.1.4.2 Sync Out

Sync Out has a built in 50 Ohm driver. The output principle is described by Figure 15.

At 50 Ohm termination, the driver voltage is between 0 (low level) to ≈2 Volts (high level).

At high impedance termination, the driver voltage is in between 0 (low level) to ~4 Volts (high level).

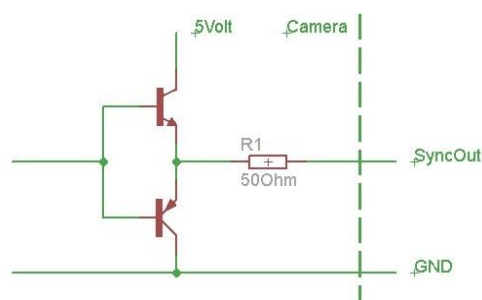


Figure 15: Sync Out Output Schematics

5.1.5 CoaXPress Status LEDs

LED colors and states are defined by CoaXPress standard. The table here after is listed all possibilities.

Camera LEDs Colors	Camera LED States
Red	Off
Orange	Solid
Green	Fast Flash 12.5Hz (20ms on, 60ms off)
	Slow Flash 0.5Hz (1s on, 1s off)
	Slow pulse 1Hz (200ms on, 800ms off)

Each 4 CoaXPress links / connector has its dedicated LED indicating its status. The table here after describes camera link status for every possible LED state.

Camera Link State	LED state
No power	Off
System booting	Solid orange or Led Chaser
Powered, but nothing connected (only for power over power connector)	Slow pulse red
Link detection in progress, PoCXP active	Fast flash green
Link detection in progress, PoCXP not in use	Fast flash orange
Camera / Grabber incompatible, PoCXP active	Slow flash alternate red / green
Camera / Grabber incompatible, PoCXP not in use	Slow flash alternate red / orange
Camera connected, but no data being transferred	Slow pulse green
Camera connected, waiting for event (e.g. trigger, exposure pulse)	Slow pulse orange
Camera connected, transferring frames	Solid green
Error during data transfer	500ms red pulse
System error	Fast flash red
Firmware Update	Solid red

6 Camera Control Interface

6.1 GenICam XML Interface

6.1.1 CoaXPress GenICam Compliant Interface

The camera control is based on camera registers accesses (read and/or write). Some of these registers are defined by CoaXPress standard and others are Optronis specific and are used to controlled camera specific features.

The camera firmware contains a GenICam / CoaXPress compliant XML file which gives access to all required camera registers and thus allows a simplified control of the camera by any CoaXPress compliant Frame Grabber.

This XML file consists in entries. Each of these entries correspond to a camera feature and use its own access type, values, ranges, etc... Paragraphs here after are explaining more in details how to use this XML file.

6.1.2 XML Entry Access Mode

Each XML entry have a specific access mode:

- RO: Read Only
This entry can be only read, any write access will be ignored.
- RW: Read and Write
This entry can be read and write.
- WO: Write Only
This entry is supposed to be write only.

6.1.3 XML Entry Types Description

Each XML entry use a specific type of data.

- String
- Integer
- Float
- Command: (for example, AcquisitionStart() or AcquisitionStop())
- Enumeration: list of allowed value. (for example, "On", "Off")
- IntSwissKnife: A formula computing an Integer using some other XML entries.

6.1.4 XML Entry Allowed Values

Some XML entries have a limited range of possible values depending on their type.

6.1.4.1 Numbers (Integer, Float, ...)

For numbers (integer, float, etc...), limits are defined by:

- All these entries consist in a 4bytes register access.
- Masked = If a bit mask must be applied when accessing this value
- Min = Minimum possible value
- Max = Maximum possible value
- Inc = Increment

A value X is defined by formula $X = MinValue + N \times Inc$
 This value must respect $Min \leq X \leq Max$

6.1.4.2 Strings

For Strings, the limit is the length “L” (number of characters).

6.1.4.3 Command

A command consists in writing a fixed value = command value “CV” in a camera register. All these entries consist in a 4bytes register access.

6.1.4.4 Enumeration

XML gives a list of values. Only listed values are valid. All these entries consist in a 4bytes register access.

6.1.5 XML Masked Values

Some XML entries are sharing the same camera registers and use bit masking to access the dedicated bits.

These entries use XML parameters “LSB” and “MSB” to identify the right bits.

Example:

If an XML entry has “Mask: LSB:31-MSB:16”, it means that the you access a 4bytes/32bit register and only the upper 16 bits are used by this entry.


6.1.6 Acquisition/Live Stop Required

Some XML features require to stop image acquisition to be modified. Please be careful and stop camera image acquisition when it is required.

In XML entries description paragraph, such entries are greyed out as shown in above example to ease their identification.

Example of greyed out XML entry:

Width @ 0x6000	RW	Integer	Min: 128 Max: WidthMax Inc: 128	This feature represents the actual image width expelled by the camera (in pixels).
-------------------	----	---------	---------------------------------------	--

 If you modify a feature requiring acquisition to be stopped without stopping acquisition, camera behavior may become unstable and a power cycle may be required.

6.2 XML Main Entries - Features Description

Main XML entries are described in below tables. For more information and full XML content, you can retrieve full camera full XML file using your frame grabber XML tools.

Xml entry Name Address	Access Mode	Type	Valid Values	Description
<i>DeviceControl category</i>				
DeviceVendorName @ 0x2000	RO	String	L = 32	Name of the manufacturer of the device.
DeviceModelName @ 0x2020	RO	String	L = 32	This feature provides the model of the device.
DeviceFirmwareVersion @ 0x2090	RO	String	L = 32	Version of the firmware in the device.
DeviceID @ 0x6028	RO	String	L = 16	This feature stores a camera identifier.
<i>ImageFormatControl category</i>				
WidthMax @ 0x6000	RO	Integer	Mask: LSB:15-MSB:0	Maximum width (in pixels) of the image. The dimension is calculated after horizontal binning, decimation or any other function changing the horizontal dimension of the image.
HeightMax @ 0x6004	RO	Integer	Mask: LSB:15-MSB:0	Maximum height (in pixels) of the image. This dimension is calculated after vertical binning, decimation or any other function changing the vertical dimension of the image.
Width @ 0x6000	RW	Integer	Mask: LSB:31 - MSB:16 Min: 256 Max: WidthMax Inc: 64	This feature represents the actual image width expelled by the camera (in pixels).
Height @ 0x6004	RW	Integer	Mask: LSB:31-MSB:16 Min: 8 Max: HeightMax Inc: 8	This feature represents the actual image height expelled by the camera (in pixels).
OffsetX @ 0x60D0	RW	Integer	Min: 0 Max: OffsetXMax Inc: 32	Horizontal offset from the origin to the area of interest (in pixels).
OffsetY @ 0x60D4	RW	Integer	Min: 0 Max: OffsetYMax Inc: 4	Vertical offset from the origin to the area of interest (in pixels).
PixelFormat @ 0x60F0	RW	Enumeration	List: "Mono8" "BayerRG8"	This feature indicates the format of the pixel to use during the acquisition.

Xml entry Name Address	Access Mode	Type	Valid Values	Description
AcquisitionControl category				
AcquisitionMode @ 0x6018	RW	Enumeration	List: "Continuous" "SingleFrame" "CoaxPress"	This feature controls the acquisition mode of the device. <ul style="list-style-type: none"> • Continuous: Camera internal trig • SingleFrame: Camera ext. IO trig • CoaxPress: trig over CXP
AcquisitionStart @0x601C	RW	Command	CV = '1' Mask: LSB:31-MSB:24	This feature starts the Acquisition of the device.
AcquisitionStop @0x601C	RW	Command	CV = '0' Mask: LSB:31-MSB:24	This feature stops the Acquisition of the device at the end of the current Frame.
AcquisitionFrameRate @ 0x60C0	RW	Float	Min: 20 Max: dynamic, depends on other parameters Max available at address 0x60C4	Frame rate in Hz.
ExposureTime @0x60C8	RW	Float	Min: 4 Max: dynamic, depends on other parameters Max available at address 0x60CC	Sets the Exposure time (in microseconds) when ExposureMode is Timed. This controls the duration where the photosensitive cells are exposed to light.
TransportLayerControl category				
PayloadSize	RO	IntSwissKnife		Provides the number of bytes transferred for each image or chunk on the stream channel. This includes any end-of-line, end-of-frame statistics or other stamp data. This is the total size of data payload for a data block.
Support category				
Standard @ 0x0000	RO	Integer		CXP Bootstrap register Standard.
Revision @ 0x0004	RO	Integer		CXP Bootstrap register Revision.

Xml entry Name Address	Access Mode	Type	Valid Values	Description
CXP category				
ConnectionReset @ 0x4000	RW	Integer		CXP Bootstrap register ConnectionReset.
DeviceConnectionID @ 0x4004	RO	Integer		CXP Bootstrap register DeviceConnectionID.
MasterHostConnectionID @ 0x4008	RO	Integer		CXP Bootstrap register MasterHostConnectionID.
ControlPacketDataSize @ 0x400C	RO	Integer		CXP Bootstrap register ControlPacketDataSize.
StreamPacketDataSize @ 0x4010	RW	Integer		CXP Bootstrap register StreamPacketDataSize.
ConnectionConfig @ 0x4014	RW	Enumeration	List: "CXP6_X4"	CXP Bootstrap register ConnectionConfig.
ConnectionConfigDefault @ 0x4018	RO	Integer		CXP Bootstrap register ConnectionConfigDefault.
TapGeometry	RO	Enumeration	List: "X1Y1"	TapGeometry
Optronis category...				
IndicatorLamps @ 0x601C	RW	Enumeration	List: "On" "Off" Mask: LSB:8-MSB:15	Switch ON/OFF indicator lamps.
AddCounterInformation @ 0x6154	RW	Enumeration	List: "Yes" "no"	AddCounterInformation
Correction @ 0x6158	RW	Enumeration	List: "None" "FFC" "ShowFPNCoeff" "ShowPRNUCoeff" "FPNOnly"	Enable or disable FFC correction. - None: disable FFC correction - FFC: Enable FFC correction Other values are here to ease debug and visualize FFC parameters.
Correction_Coeff_X @ 0x6184	RW	Integer	Min: 0 Max: WidthMax	Selects a column for FFC correction. See FFC correction paragraph.
Correction_Coeff_V @ 0x6188	RW	Integer	See FFC correction paragraph.	Offset of FFC correction. See FFC correction paragraph.
Correction_DMean @ 0x6190	RW	Integer	Min: 0 Max: 127	Offset in FFC correction formula. See FFC correction paragraph.
FFCSaveToFlash @ 0x6194	RW	Command	CV = '1'	Save current user FFC parameters to flash. These parameters will be used at next camera power up.
FFCResetFlash @ 0x6198	RW	Command	CV = '1'	Erase all user FFC data previously saved in flash.
HotPixelCorrection @ 0x6140	RW	Enumeration	List: "On" "Off"	Enable or disable hot pixels correction.
Gain @ 0x613C	RW	Enumeration	List: "x1" "x1.5" "x2" "x4"	Analog gain applied on every pixel.
Gain2 @ 0x6138	RW	Integer	Min: 0 Max: 1000 Inc: 1	Fine analog gain applied on every pixel. Default value 200.

Xml entry Name Address	Access Mode	Type	Valid Values	Description
<i>...Optronis category</i>				
ColorSensor @ 0x6038	RO	Integer	Min: 0 Max: 1 Inc: 1	Indicates if camera has camera a color sensor. '0' means mono sensor. '1' means color sensor.
AOffset @ 0x6150	RW	Integer	Min: 0 Max: 3000 Inc: 1 Default: 80	Analog offset applied on every pixel.
Height_ROI1 @ 0x60DC	RW	Integer	Min: 8 Max: Dynamic Inc: 8 Mask: - LSB:15 - MSB:0	Height of ROI 1.
Height_ROI2 @ 0x60DC	RW	Integer	Min: 8 Max: Dynamic Inc: 8 Mask: - LSB:31 - MSB:16	Height of ROI 2.
ROI1_OffsetY @ 0x60E0	RW	Integer	Min: 0 Max: ROI1_OffsetYMax Inc: 4 Mask: - LSB:0 - MSB:15	Vertical offset of ROI1.
ROI2_OffsetY @ 0x60E0	RW	Integer	Min: ROI2_OffsetYMin Max: ROI2_OffsetYMax Inc: 4 Mask: - LSB:31 - MSB:16	Vertical offset of ROI2.
DualROIMode @ 0x60D8	RW	Enumeration	List: "On" "Off"	Enable ("On") or disable ("Off") dual ROI mode.
HeightMaxROI1 @ 0x60E4	RO	Integer	Mask: - LSB:0 - MSB:15	Maximum value for ROI1 height (Height_ROI1).
HeightMaxROI2 @ 0x60E4	RO	Integer	Mask: - LSB:31 - MSB:16	Maximum value for ROI2 height (Height_ROI2). Minimum value is 0.
ROI1_OffsetYMax @ 0x60E8	RO	Integer		Maximum value for ROI1 vertical offset (ROI1_OffsetY).
ROI2_OffsetYMin @ 0x60FC	RO	Integer	Mask: - LSB:15 - MSB:0	Minimum value for ROI2 vertical offset (ROI2_OffsetY).
ROI2_OffsetYMax @ 0x60FC	RO	Integer	Mask: - LSB:31 - MSB:16	Maximum value for ROI2 vertical offset (ROI2_OffsetY).

Xml entry Name Address	Access Mode	Type	Valid Values	Description
<i>...Optronis category</i>				
SaveToFlashWithRebootAndWith AutoStart @ 0x6024	RW	Command	CV= '0x0101'	Save current user configuration to flash. The camera will start with this setup and will start streaming after power up automatically. Beware that if frame grabber sends a Reset command (Default CXP behavior), the stream will be stopped this "AutoStart" feature won't be used.
SaveToFlashWithRebootAndWith outAutoStart @ 0x6024	RW	Command	CV= '0x0001'	Save current user setup to flash. The camera will start with this setup.
FactoryFlash @ 0x6024	RW	Command	CV= '0x0000'	Reset any user setup saved in flash. The camera will boot in factory default configuration.

7 Firmware Update

Camera firmware update is available through camera Aux connector by using the camera accessory “Programming cable”. This cable allows an USB connection to a PC and must be used together with Optronis Windows update software “UCXP_flash.exe”.



Before updating camera firmware, please check product website page (download tab) to be sure that you have:

- The Last Firmware Version
- The Last Firmware Update Software Version (Setup_UCXP_Flash_vx.y.z.exe)

Update process is described in “ReadMe.pdf” file generated when installing UCXP Flash.exe. Please check this file to get the last up to date firmware update process description. Default folder is:

C:\Program Files (x86)\Optronis\UCXP_Flash_vx.x.x\Documentation

Please find below a quick description of the updating process:

- 1) If your software is out of date or if this is the first use:
Execute last version of “Setup_UCXP_Flash_vx.y.z.exe” to install Firmware Update Software and Programming cable Drivers.
Restart computer.
- 2) Connect USB cable to PC and camera Aux input.
Use PC rear USB ports as front ports are often not working.
- 3) Power cycle the camera.
- 4) Start UCXP_Flash.exe
- 5) Select your camera series

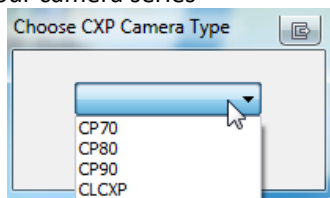


Figure 16: Camera Series Selection

- 6) When UCXP_flash.exe is connected to the camera, camera LEDs become solid RED. Click on “Upload RBF” button and select the new firmware (.rbf file)

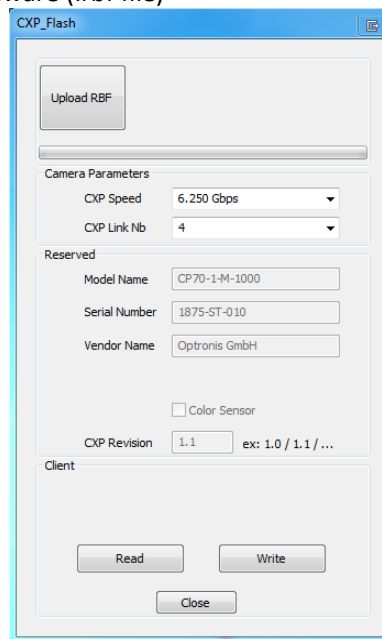


Figure 17: Software Interface

- 7) Wait end of process (10 to 20 minutes, depending on camera and firmware size)
Power cycle camera when programming is finished.



If remaining time is higher than 20min, it often means that the cable is not well detected. Close software and end “UCXP_flash” process if it is still running. Choose another USB port, power cycle camera and restart software.

8 Revisions

8.1 Manual Revision

Manual Revision	Date	Description
D	01/04/2019	<ul style="list-style-type: none"> • Add FFC correction feature • Add gain2 feature • Add Dual ROI feature
C	17/08/2018	<ul style="list-style-type: none"> • Correct Power Connector pinout
B	19/06/2018	<ul style="list-style-type: none"> • Updated with last Firmware
A	11/04/2018	<ul style="list-style-type: none"> • 1st manual version • Synchronized content with datasheet vB

8.2 Firmware Revision

Firmware Revision	Date	Description
v13.2.2	01/04/2019	<ul style="list-style-type: none"> • Add FFC correction feature • Add gain2 feature • Add Dual ROI feature
v13.0.18	04/06/2018	<ul style="list-style-type: none"> • Minor corrections • Increase stability and image quality
v13.0.14	10/04/2018	<ul style="list-style-type: none"> • 1st official firmware